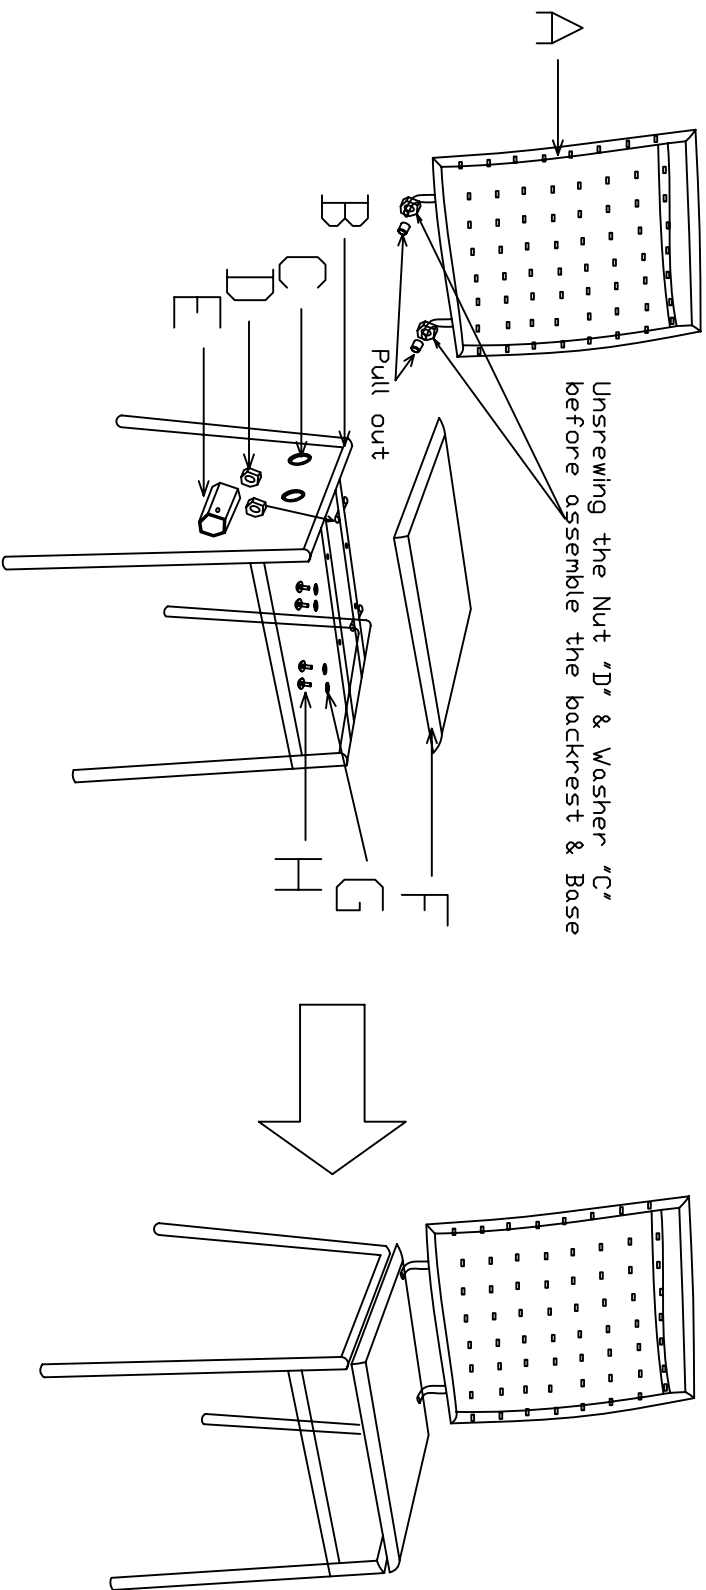










ASSEMBLY INSTRUCTION



modway

EEEI-1106



NO.	A	B	C	D	E	F	G	H
NAME	BACKREST	BASE	WASHER	M12 NUT	NUT DRIVER	CUSHION	WASHER	M6 SCREW
TYPE								
QTY	1PC	1PC	2PCS	2PCS	1PC	1PC	4PCS	4PCS