


ASSEMBLY INSTRUCTIONS

EEI-1510

V1.08.12.21

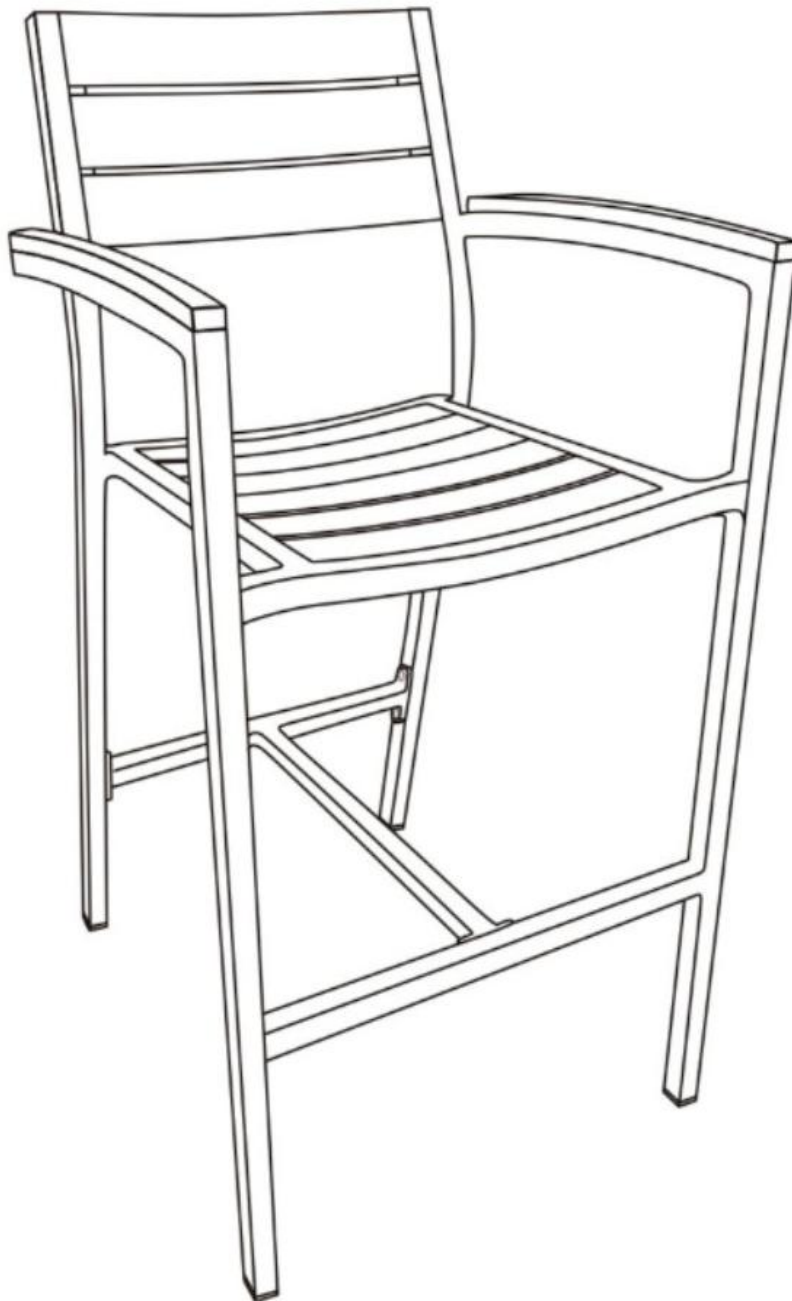

Questions? Contact us!

609.256.9000 • cs@modway.com

www.modway.com

***modway**

Let's get started!

***modway**



Read through all of the instructions before starting



Approx. 30 minutes assembly time



2 people recommended for assembly



Care instructions are listed in the last step of this manual



Make sure you have all parts and components before discarding any packing materials

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

A Barstool Frame x1


B T- Stretcher x1

Provided hardware:

C  Bolt M6 X 18mm x6

D  Bolt Lock 4 X 16mm x6

E  Allen Key x1

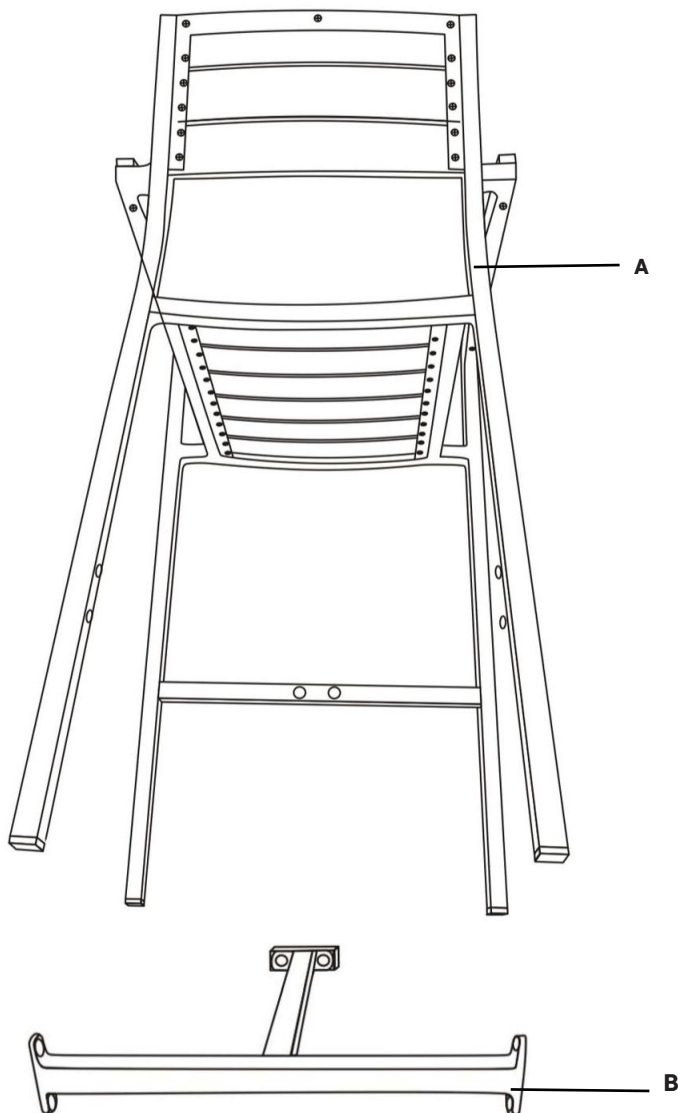

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com


Step 1

HARDWARE


C	Bolt M6 x 18mm	x6
D	Bolt Lock 4 x 16mm	x6
E	Allen Key	x1

COMPONENTS

A	Barstool Frame	x1
B	T- Stretcher	x1

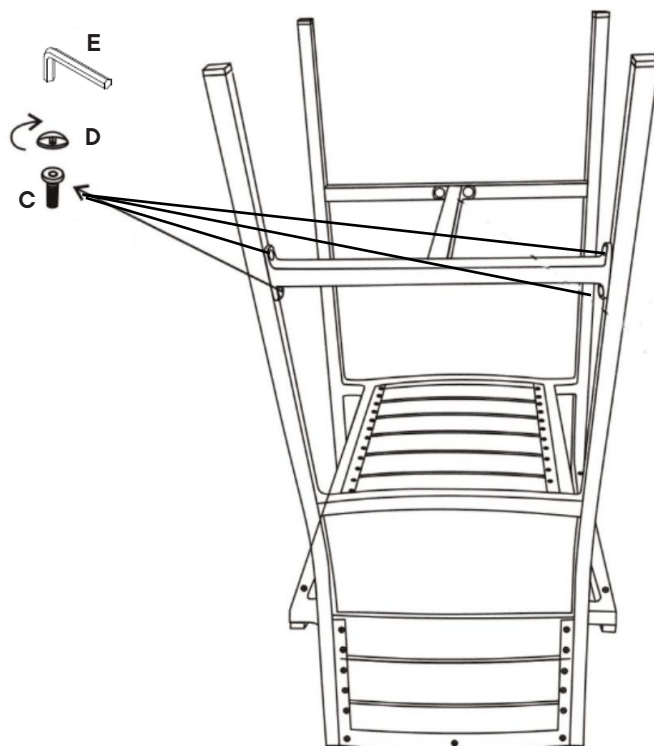

DO NOT FULLY THIGHTEN THE BOLT

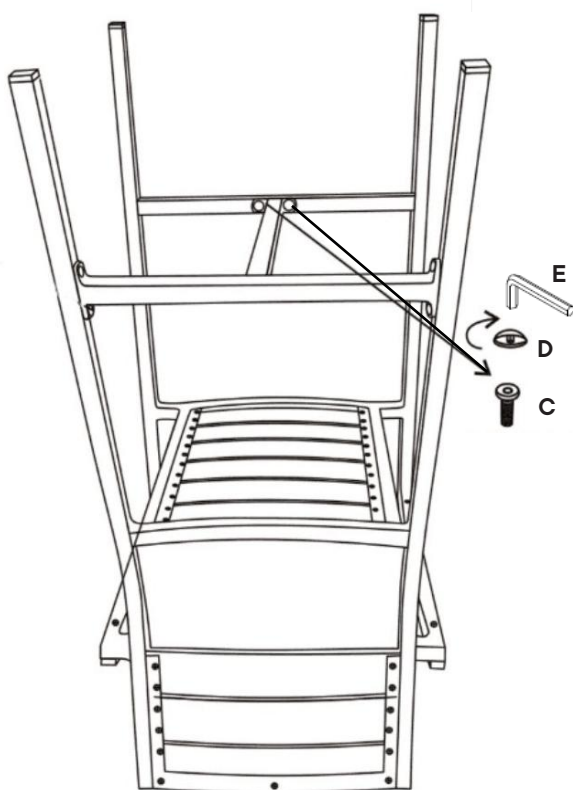

TIGHTEN ALL BOLTS

Great job!

Barstool assembly is complete .



CARING FOR YOUR ITEM

Easy to clean with damp cloth

Use mild soap to wipe off the dust on the seat and frame.

CONNECT WITH US!



Tag us **@modway_furniture** and **#modway** for a chance to be featured.

