



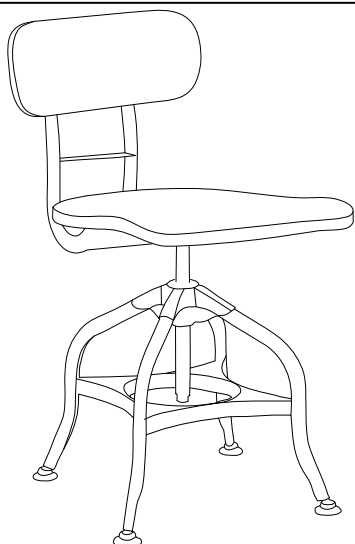



Thank you for purchasing the **MODWAY BARSTOOL!**

Before you start, here is some helpful advice:


1. We suggest you spend a short time reading through this leaflet and then follow the simple step by step instructions.
2. Owing to the size and weight of the barstool, we recommend that it is assembled by two adults, on a carpeted or padded area, in the room that it is intended for. Approximate assembly time: 30 minutes.
3. Please do not use any tools other than those provided or recommended in these instructions.
4. Please do not throw away any of the packaging or instructions until you have checked all the components and hardware and the furniture is fully assembled.
5. Assemble all components loosely until advised to tighten. Depending on use, it may be necessary to tighten the components from time to time, so please save the tools that have been provided.
6. Please keep all pieces out of reach of small children.



### Hardware:

A		Long Bolt M6x25mm	x 2
B		Medium Bolt M6x20mm	x 2
C		Short Bolt M5x16mm	x 2
D		Allen Wrench M6	x 1
E		Allen Wrench M5	x 1

### Component:

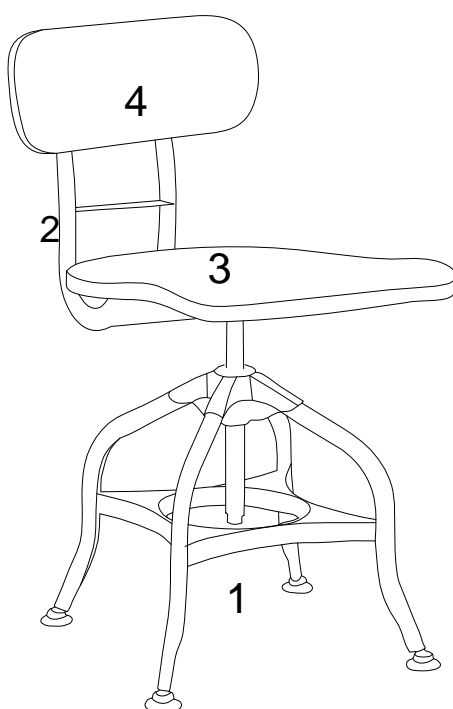

1 Chair Base x1

2 Chair Back x1

3 Seat Panel x1

4 Back Panel x1


## STEP 1:

Place a sealed carton on the floor with a carpeted or padded surface on the top side of carton.

Put the **Seat Panel (1)** upside down on a box as shown.

Attach the **Chair Base (1)** and **Chair Back (2)** to the bottom of **Seat Panel (3)** by using 2 pieces of **Long Bolt (A)** and 2 pieces of **Medium Bolts (B)** as shown.

Use **Allen Wrench (D)** to tighten the **Long Bolts (A)** and **Medium Bolts (B)** clockwise until secure.

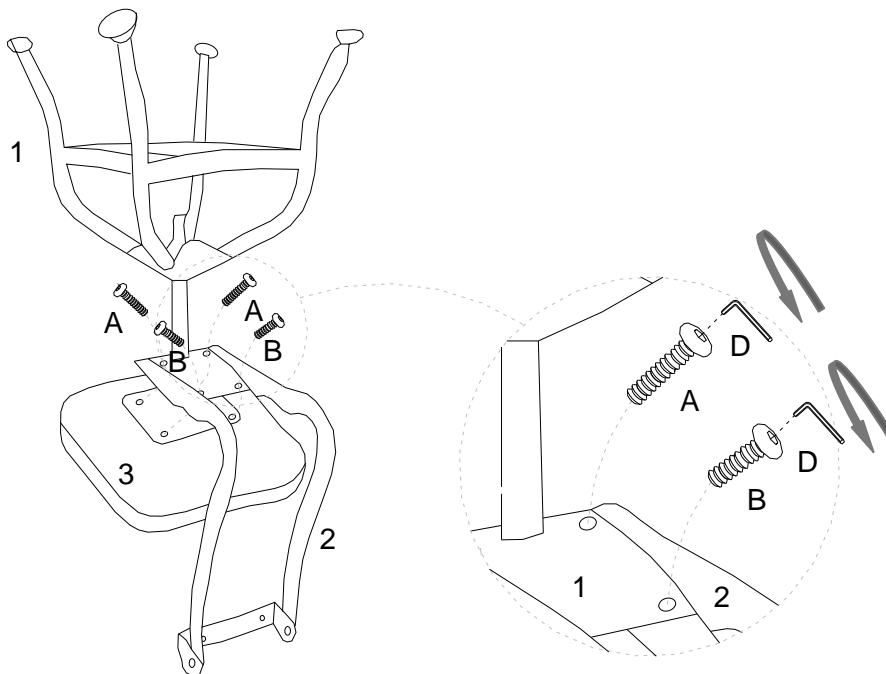


Ax2	Bx2	Dx1

Hardware & Tool required

## STEP 2:

Attach the **Chair Back Panel (4)** to the **Chair Back (2)** by using 2 piece of **Short Bolt (C)** as shown.

Use **Allen Wrench (E)** to tighten the **Short Bolts (C)** clockwise until secure.

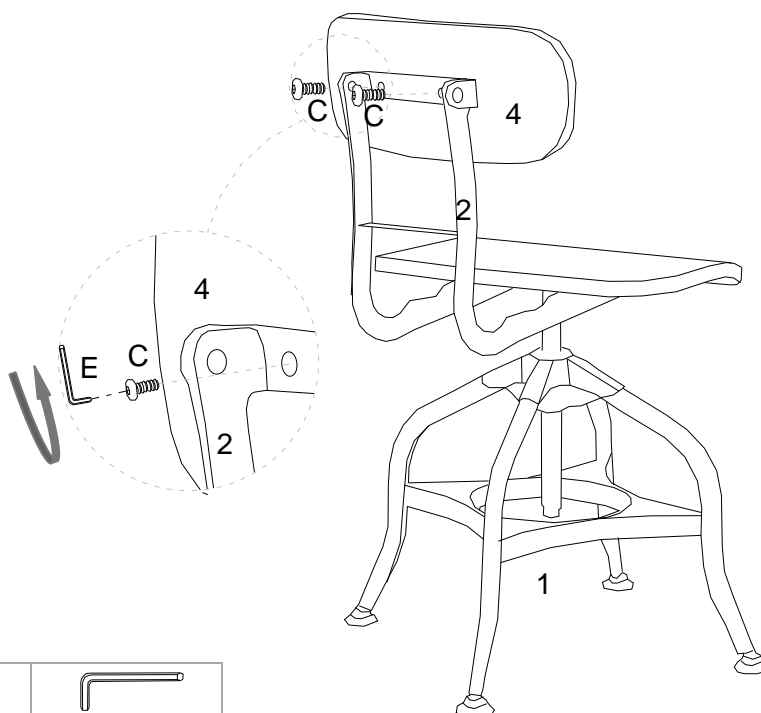


Cx4	Ex1

Hardware & Tool required

## STEP 3:

Seat Height is designed for adjusting.

Turn the seat frame clockwise to lower and counterclockwise to raise.

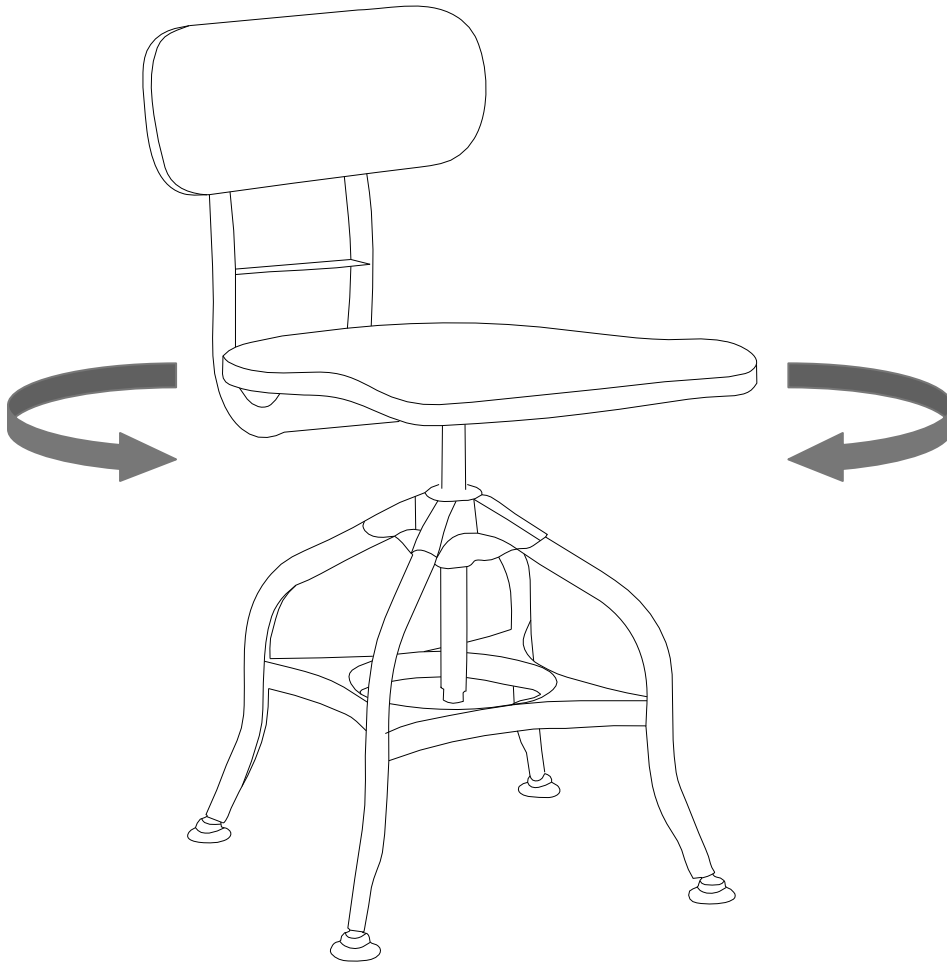

Assembly is completed. The barstool is ready to enjoy now!