



**Step1**

Slide the plastic cap onto the metal bar from the side (please do not force the cap from top by hammer)

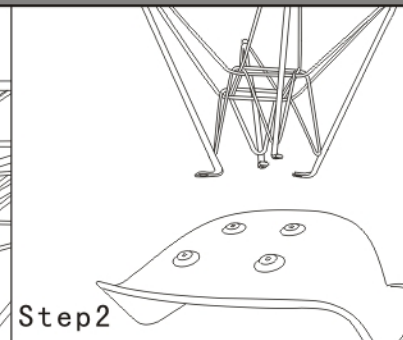


**Step2**

Please place the seat and the feet upside down

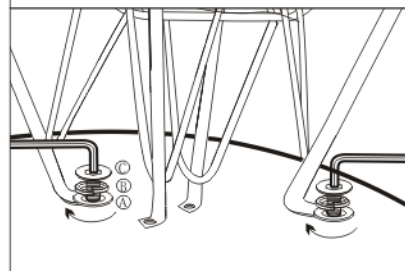

**Step3**

Please put 2 screws diagonally and rotate them into the holes loosely. (A) should go closest to the chair. (B) should go closest to the head of the bolt. Please be kindly noted that we can not tighten the screws at the moment.

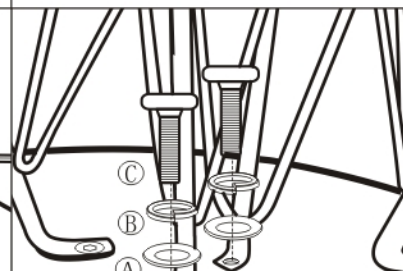


**Step4**

Please load the remaining 2 screws also diagonally







**Step5**

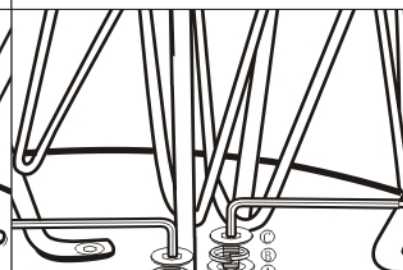Please push the metal bars on the shell until the holes match with each other



**Step6**

Tighten these 2 screws together with the previous 2 screws.

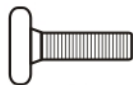(A)		<b>X4</b>
	Regular washer	
(B)		<b>X4</b>
	Lock washer	
(C)		<b>X4</b>
	Bolt	
(D)		<b>X4</b>
	Plastic cap	

### COMPONENT CHECKLIST

PART	No.	Qty.	
Seat	01	1	□
tube	02	1	□

### TOOLS REQUIRED



Allen key (supplied)