






Thank you for purchasing the **MODWAY SWING CHAIR!**

Before you start, here is some helpful advice:

1. We suggest you spend a short time reading through this leaflet and then follow the simple step by step instructions.
2. Owing to the size and weight of the chair, we recommend that it is assembled by two adults, on a carpeted or padded area, in the room that it is intended for. Approx assembly time: 30 minutes.
3. Please do not use any tools other than those provided or recommended in these instructions.
4. Please do not throw away any of the packaging or the instruction until you have checked all the components and hardware and the furniture is fully assembled. Please ensure that the packaging is disposed of in a safe environmentally friendly way.
5. Assemble all components loosely until advised to tighten. Depending on use, it may be necessary to tighten the components from time to time, so please save the tools that has been provided.
6. Please keep all fitting out of reach of children.



Hardware:

A		Bolt M10x55mm	x6
B		Nut M10	x6
C		Spring	x2
D		Allen Wrench	x1
E		Open Wrench	x1

Component:



1	Left Leg	x1	2	Right Leg	x1	3	Bottom Stretcher	x1	4	Top Stretcher	x1
5	Stand	x2	6	Canopy	x1	7	Basket Frame	x1	8	Cushion	x1
	9	Pillow	x2	10	Canopy Cover	x1					

STEP 1:

Please put all chair parts on a carpeted or padded area, find hardware package inside of the tube on **Left Leg (1)** and **Right Leg (2)**.

Attach **Bottom Stretcher (3)** to **Left Leg (1)** and **Right Leg (2)** as shown.

Secure by using 2 pieces of **Bolt (A)** with 2 pieces of **Nut (B)**.

Use **Allen Wrench (D)** and **Open Wrench (E)** to tighten **Bolts (A)** and **Nuts (B)** clockwise until secure.

STEP 2:

Insert **Stand (5)** into **left Leg (1)** and **Right Leg (2)** as shown, secure by using 2 pieces of **Bolt (A)** with 2 pieces of **Nut (B)**.

Use **Allen Wrench (D)** and **Open Wrench (E)** to tighten **Bolts (A)** and **Nuts (B)** clockwise until secure.

STEP 3:

Attach **Top Stretcher (4)** to **Stand (5)** at two sides as shown.

Secure by using 2 pieces of **Bolt (A)** with 2 pieces of **Nut (B)**.

Use **Allen Wrench (D)** and **Open Wrench (E)** to tighten **Bolts (A)** and **Nuts (B)** clockwise until secure.

STEP 4:



Insert **Canopy (6)** with adjusters into **Top Stretcher (4)** as shown.

STEP 5:


Hang **Basket Frame (7)** to **Top Stretcher (4)** by using 2 pieces of **Spring (C)** as shown.

Place **Cushion (8)** and 2 pieces of **Pillow (9)** to **Basket Frame (7)** as shown.

Place **Canopy Cover (10)** to **Canopy (6)** as shown.

				
Ax6	Bx6	Cx2	Dx1	Ex1

Hardware & Tool required

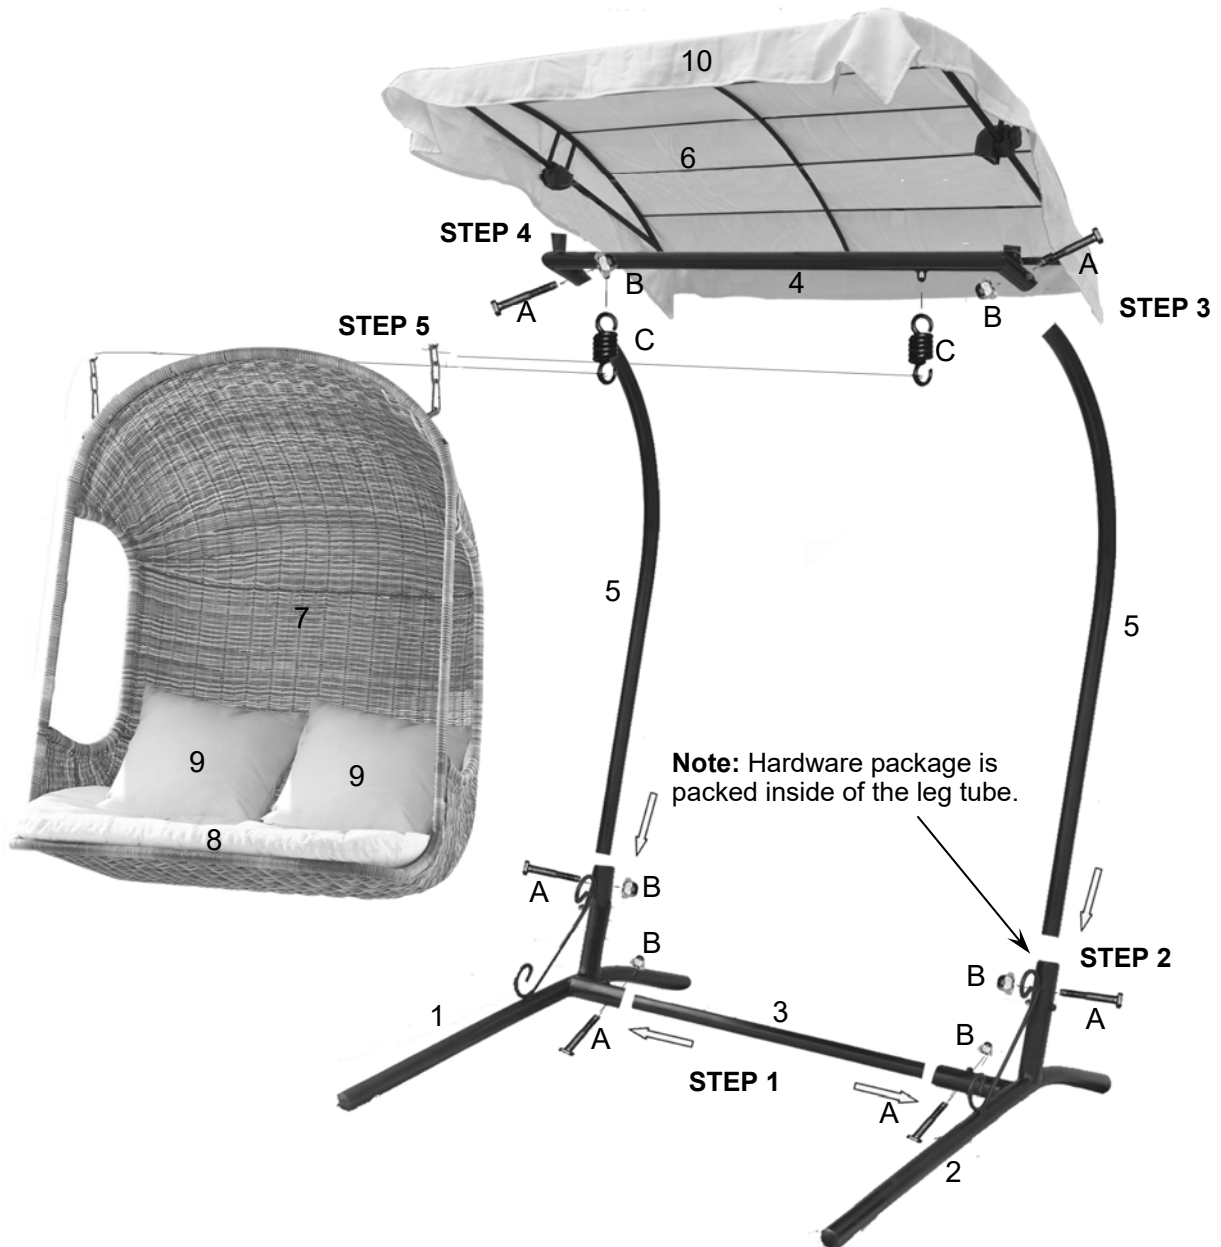

Maximum Weight: 200 KG

Assembly is completed. The swing chair is ready to enjoy now!