



Thank you for purchasing the **MODWAY COFFEE TABLE** !

Before you start, here is some helpful advice:


1. We suggest you spend a short time reading through this leaflet and then follow the simple step by step instructions.
2. Owing to the size and weight of the coffee table, we recommend that it is assembled by two adults, on a carpeted or padded area, in the room that it is intended for. Approx assembly time: 30 minutes.
3. Please do not use any tools other than those provided or recommended in these instructions.
4. Please do not throw away any of the packaging or the instruction until you have checked all the components and hardware and the furniture is fully assembled. Please ensure that the packaging is disposed of in a safe environmentally friendly way.
5. Assemble all components loosely until advised to tighten. Depending on use, it may be necessary to tighten the components from time to time, so please save the tools that has been provided.
6. Please keep all fitting out of reach of children.

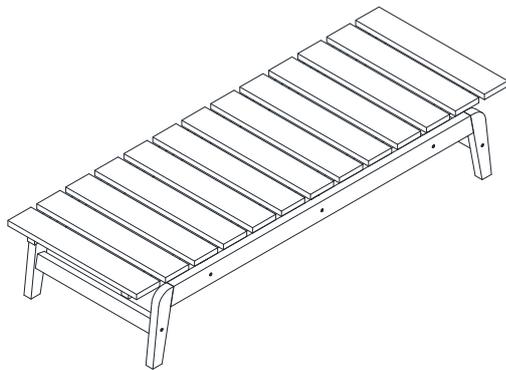

Hardware:

- | | | | |
|---|--|--------------------|------|
| A |  | Short Bolt M6x30mm | x 10 |
| B |  | Long Bolt M6x70mm | x 6 |
| C |  | Allen Wrench M4 | x 1 |

Component:

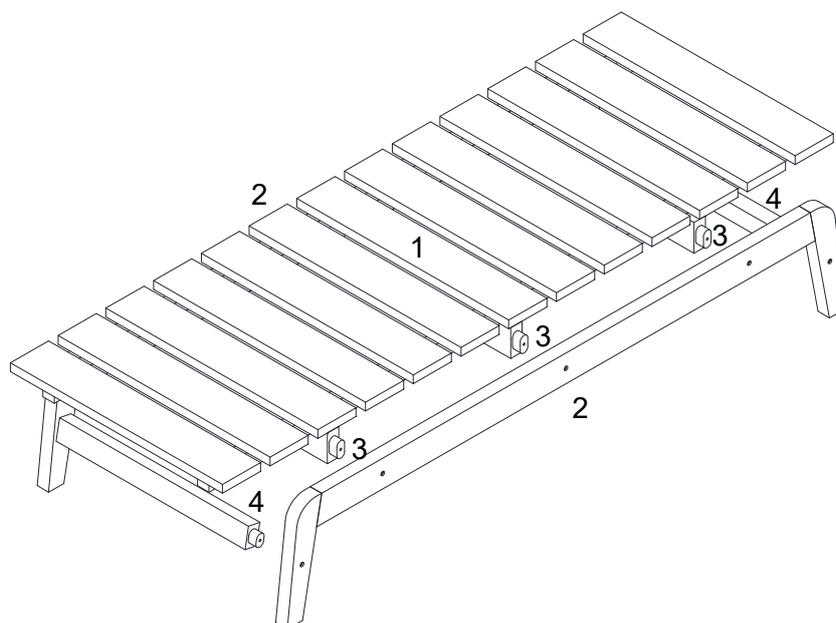

- | | | | | | | | | | | | |
|---|-----------|----|---|------------|----|---|--------------|----|---|-----------|----|
| 1 | Table Top | x1 | 2 | Side Frame | x2 | 3 | Support Rail | x3 | 4 | Stretcher | x2 |
|---|-----------|----|---|------------|----|---|--------------|----|---|-----------|----|

STEP 1:


Please put the **Table Top (1)** upside down on a carpeted or padded area.

Position 1 piece of **Support Rail (3)** into the bottom of **Table Top (1)** as shown.

Insert 2 pieces of **Long Bolt (B)** into the pre-drilled holes on bottom of **Table Top (1)** through the pre-drilled holes on **Support Rail (3)**.

Repeat the same steps for the remaining **Support Rails (3)**.

Use **Allen Wrench (C)** to tighten **Long Bolts (B)** clockwise until secure.

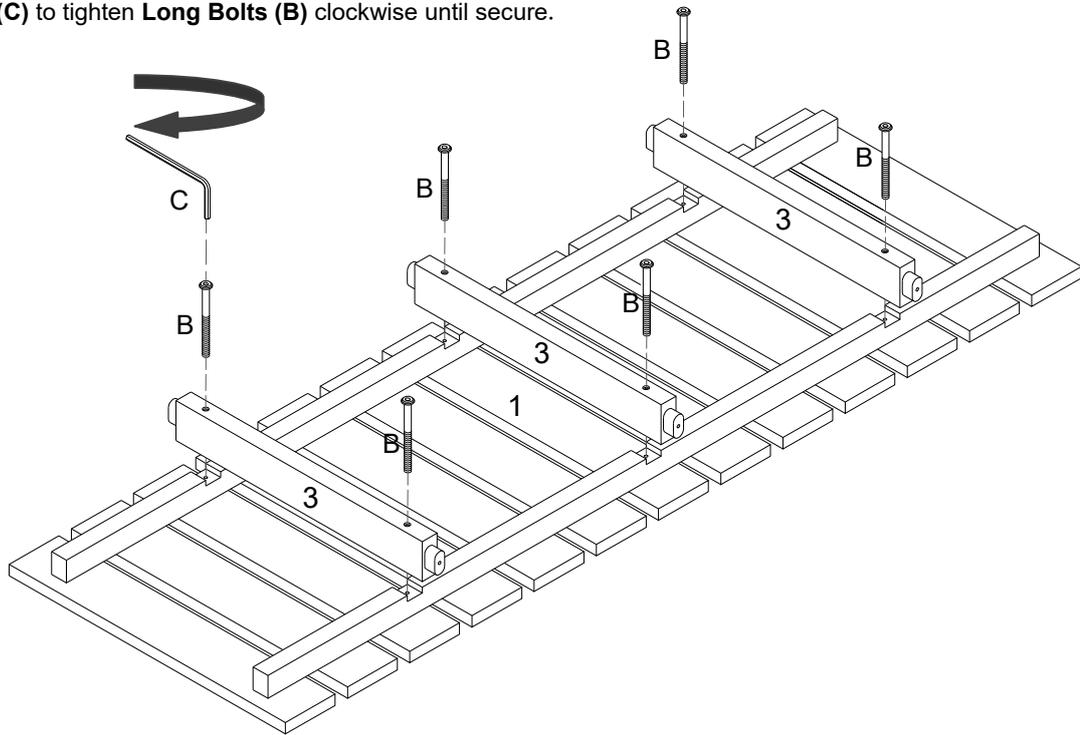

	
Bx6	Cx1


STEP 2:

Position 1 piece of **Side Frame (2)** to the assembled **Table Top (1)** and **Support Rails (3)** as shown.

Insert the tenon on assembled **Support Rails (3)** into the rabbet on the **Side Frame (2)**.

Then position 2 pieces of **Stretcher (4)** to the assembled **Table Top (1)**, **Support Rails (3)** and **Side Frame (2)** as shown.


Insert the tenon on assembled **Stretchers (4)** into the rabbet on the **Side Frame (2)**.

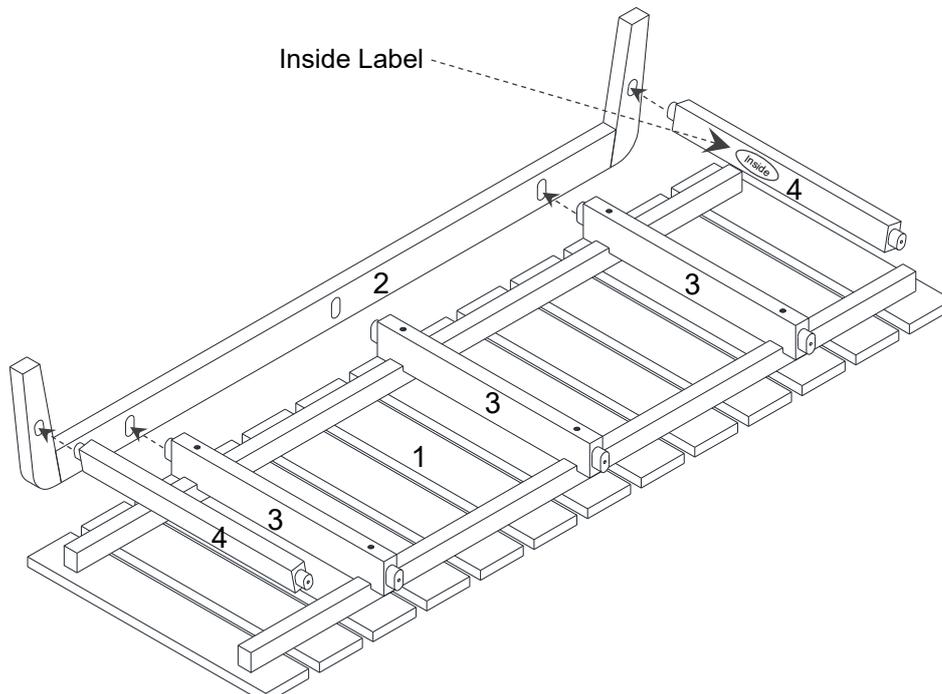

STEP 3:

Carefully position the other piece of **Side Frame (2)** to the assembled **Table Top (1)**, **Side Frame (2)**, **Support Rails (3)**, and **Stretchers (4)** as shown.


Insert the tenon on assembled **Support Rails (3)** and **Stretchers (4)** into the rabbet on the other **Side Frame (2)**.

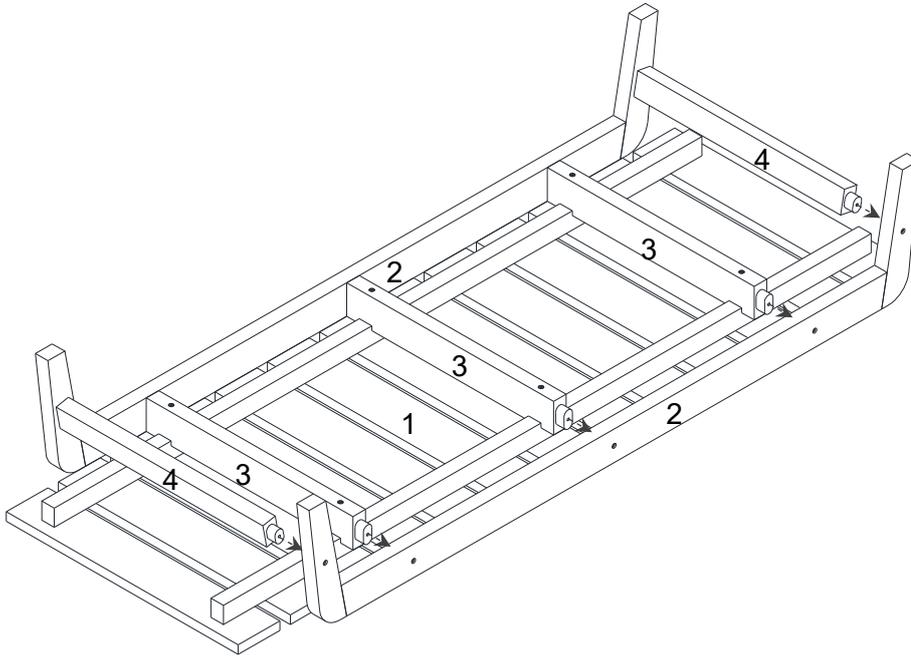


STEP 4:

Insert 10 pieces of **Short Bolt (A)** into the pre-drilled holes on **Support Rail (3)** and **Stretchers (4)** through the pre-drilled holes on **Side Frames (2)**.

Use **Allen Wrench (C)** to tighten all **Short Bolts (A)** clockwise until secure.

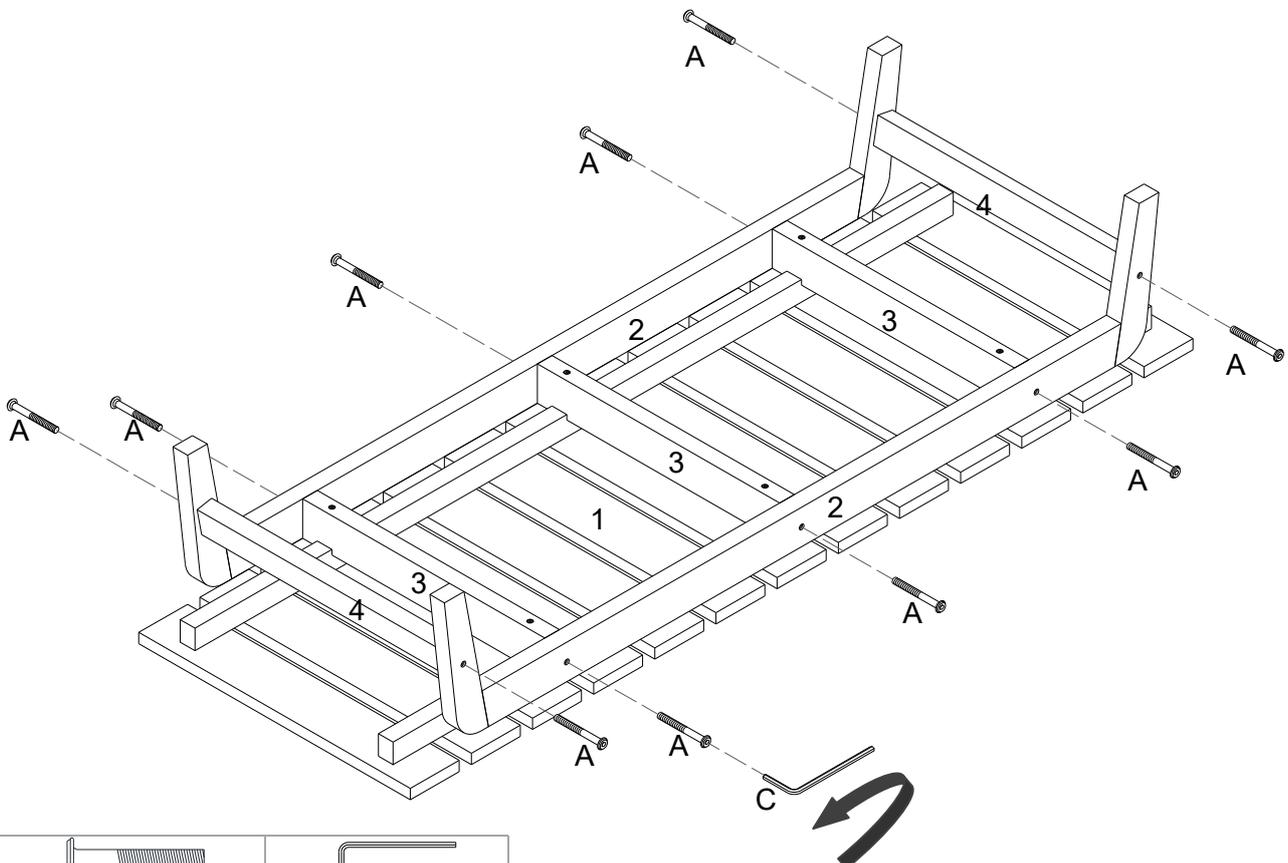


	
Ax10	Cx1

Hardware & Tool required

STEP 5:

Carefully turn over the assembled coffee table.

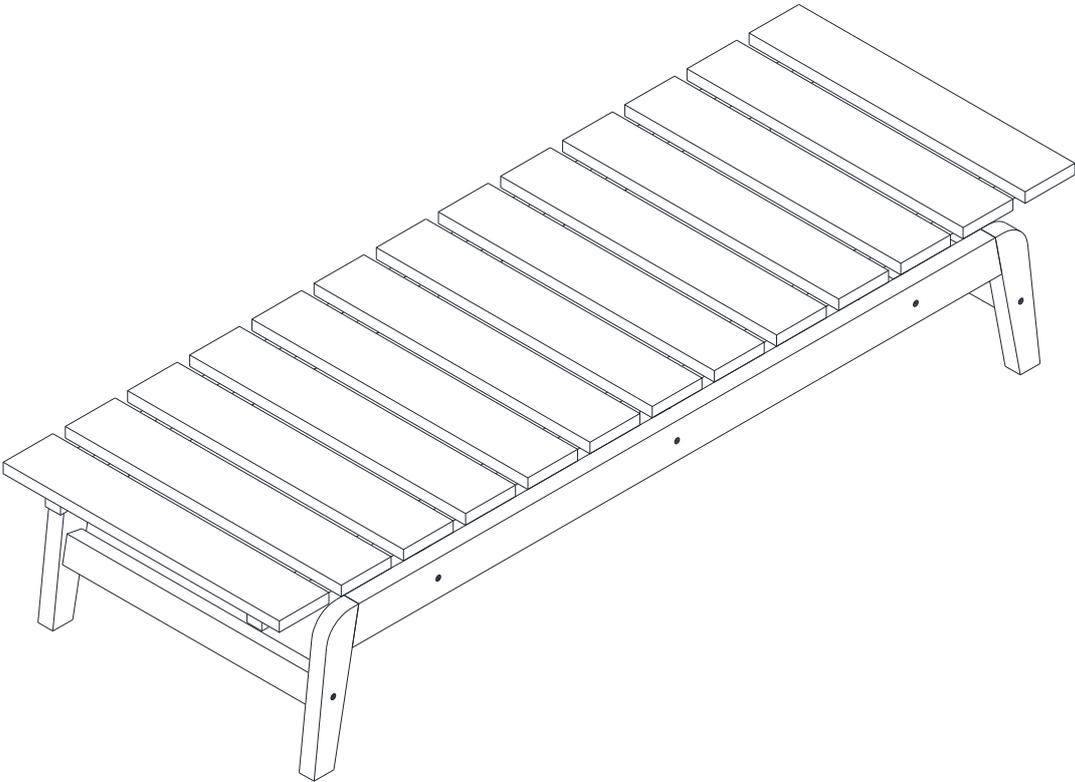

Assembly is complete. Your coffee table is ready to be used now!