


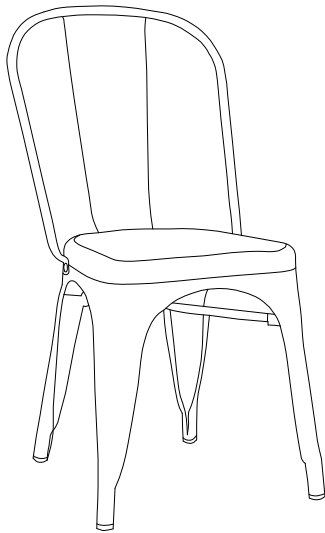



Thank you for purchasing the **MODWAY CHAIR!**

Before you start, here is some helpful advice:


1. We suggest you spend a short time reading through this leaflet and then follow the simple step by step instructions.
2. Owing to the size and weight of the chair , we recommend that it is assembled by two adults, on a carpeted or padded area, in the room that it is intended for. Approximate assembly time: 15 minutes.
3. Please do not use any tools other than those provided or recommended in these instructions.
4. Please do not throw away any of the packaging or instructions until you have checked all the components and hardware and the furniture is fully assembled.
5. Assemble all components loosely until advised to tighten. Depending on use, it may be necessary to tighten the components from time to time, so please save the tools that have been provided.
6. Please keep all pieces out of reach of small children.



### Hardware:

A		Bolt M6x14mm	x 4
B		Nut M6	x 4
C		Wrench M6	x 1
D		Allen Wrench M6	x 1

### Component:

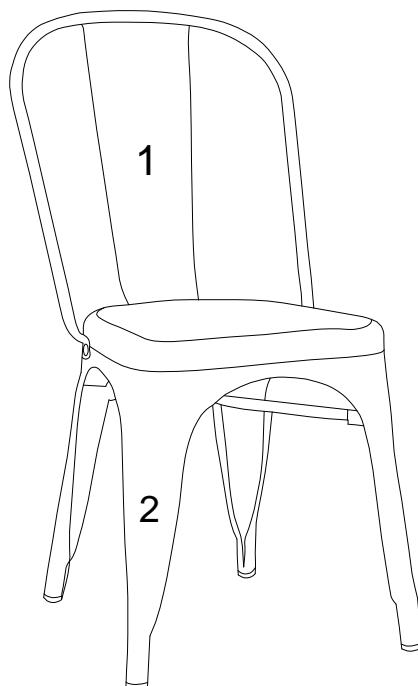

1 Chair Back x1


2 Chair Base x1





## STEP 1:

Put the **Chair Base (2)** on a carpeted or padded area.

Attach the **Chair Base (2)** to the **Chair Back (1)** by using 4 piece of **Bolt (A)** and 4 piece of **Nut (B)** as shown.

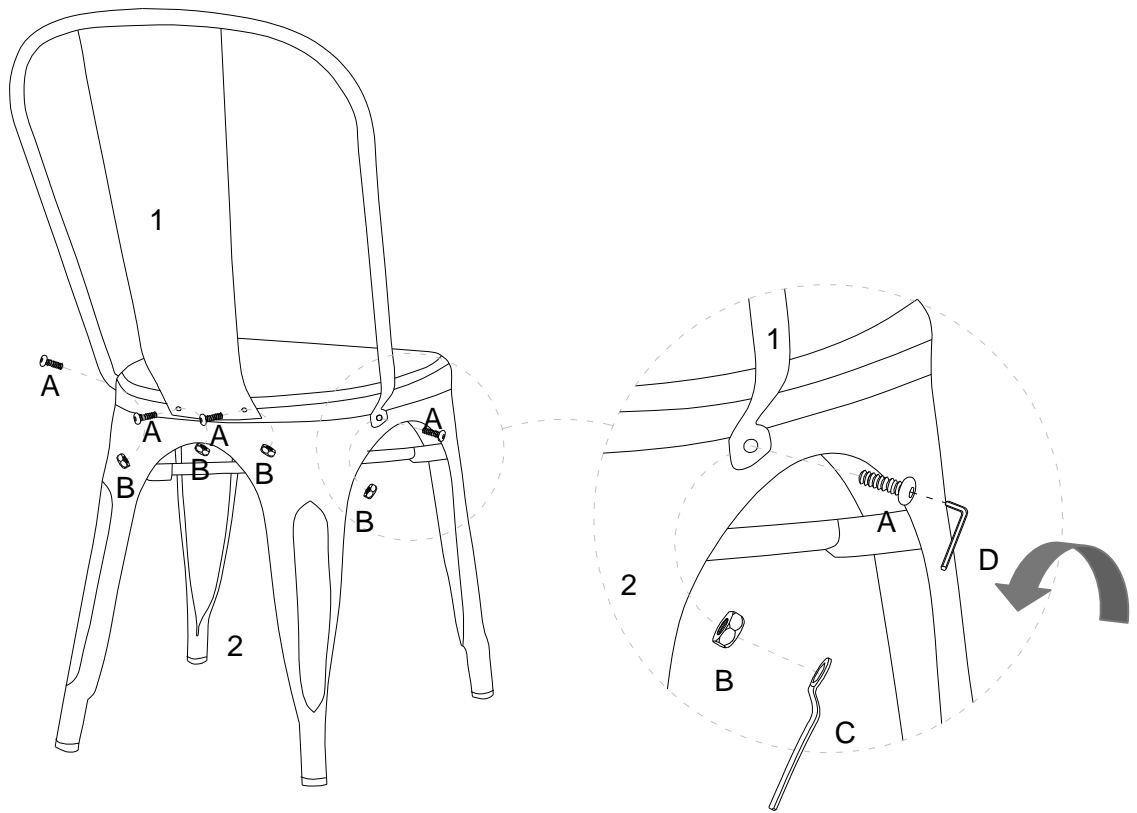Use **Wrench (C)** and **Allen Wrench (D)** to tighten the **Bolts (A)** and **Nut (B)** until secure.




			
Ax4	Bx4	Cx1	Dx1

Hardware & Tool required

## STEP 2:

Carefully put the assembled chair to the place you desired.

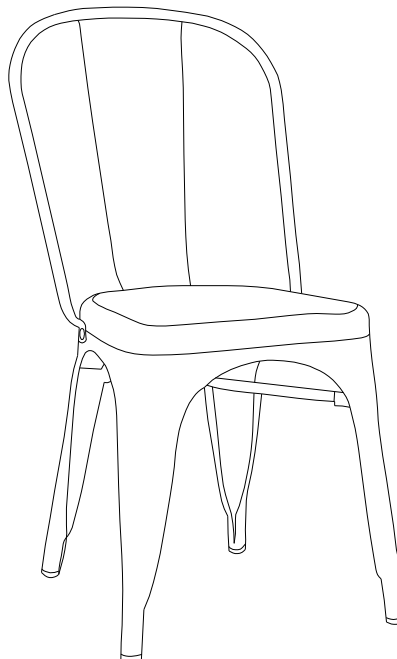

Assembly is completed. The chair is ready to enjoy now!