

Thank you for purchasing the **MODWAY COUNTER STOOL / BAR STOOL**.

Before you start, here are some helpful advice:


1. We suggest you spend a short time reading through this leaflet and then follow the simple step-by-step instructions.
2. Owing to the size and weight of the stool, we recommend that it is assembled by two adults, on a carpeted or padded area, in the room that it is intended for. Approximate assembly time: 30 minutes.
3. Please do not use any tools other than those provided or recommended in these instructions.
4. Please do not throw away any of the packaging or the instruction until you have checked all the components and hardware and the furniture is fully assembled. Please ensure that the packaging is disposed of in a safe and environmentally friendly way.
5. Assemble all components loosely until advised to tighten. Depending on use, it may be necessary to tighten the components from time to time, so please save the tools that have been provided.
6. Please keep all pieces out of reach of children.



**Hardware:**

- |    |  |               |    |
|----|--|---------------|----|
| A. |  | Bolt M6x50mm  | x4 |
| B. |  | Spring Washer | x4 |
| C. |  | Flat Washer   | x4 |
| D. |  | Allen Wrench  | x1 |

**Components:**

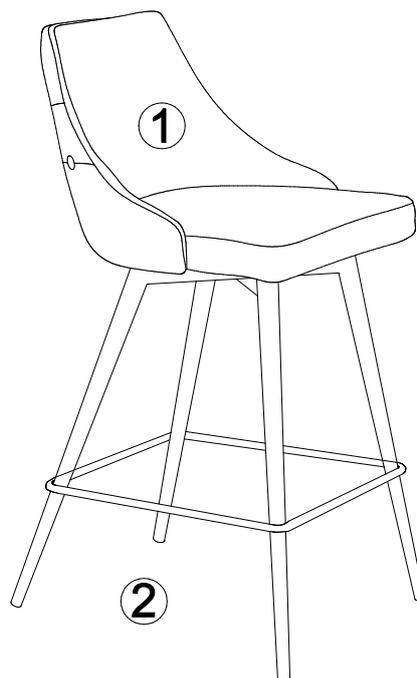

1. Stool Body                    x1


2. Stool Base                    x1

## STEP 1:

1. Remove the hardware bag from the **Stool Base (2)** package.
2. Please put **Stool Body (1)** upside down on a carpeted or padded surface.
3. Attach **Stool Base (2)** to **Stool Body (1)** by using 4 pieces of **Bolts (A)** with 4 pieces of **Spring Washers (B)** and 4 pieces of **Flat Washers (C)** as shown.

(Note: please match the holes on **Stool Base (2)** and **Stool Body (1)** carefully.)

4. Use **Allen Wrench (D)** to tighten all **Bolts (A)** clockwise until secure.

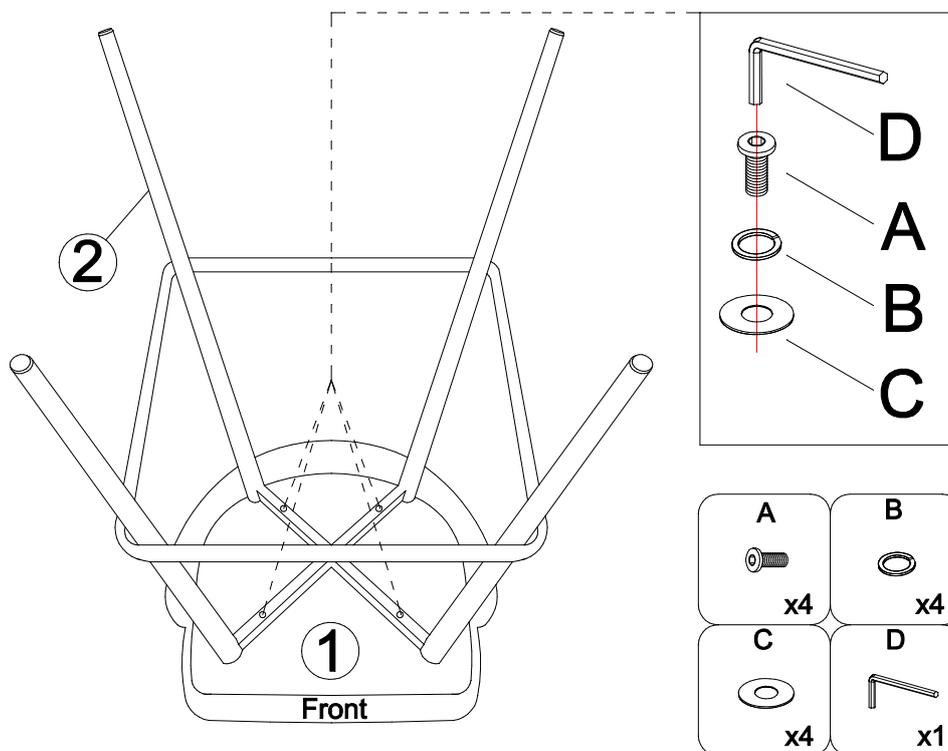

## Hardware & Tools Required

## STEP 2:

Carefully turn over the assembled stool.



Assembly is complete. Your stool is ready to enjoy now!