


ASSEMBLY INSTRUCTIONS

EEI-4553

V1.12.19.21

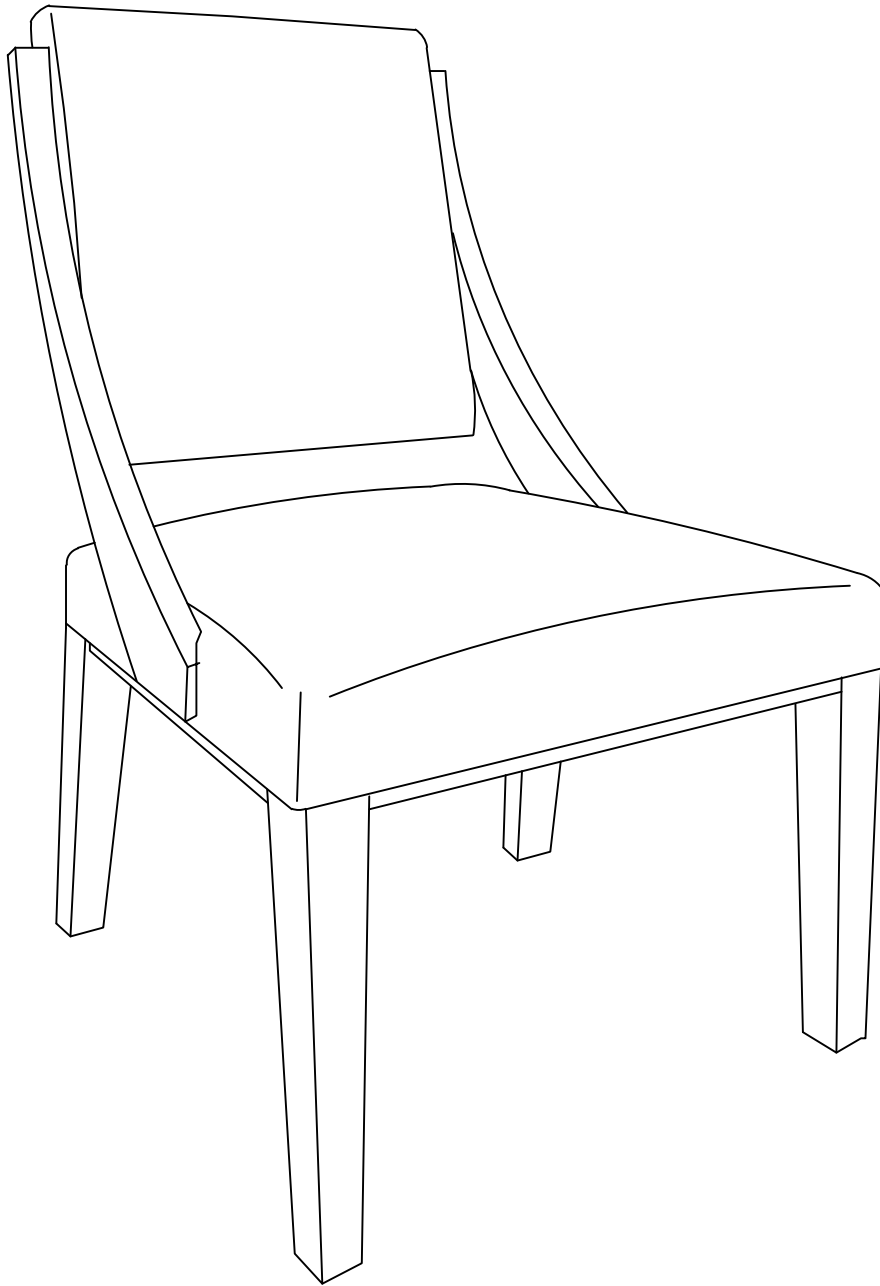

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

***modway**

Let's get started!

***modway**



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 30 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.









Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.


Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

1	Chair Back	x1
2	Chair Leg	x1
3	Chair Leg	x1
4	Front Legs	x2
5	Arm (L)	x1
6	Arm (R)	x1
7	Chair Seat & Frame	x1

Provided hardware:

A		Bolt M6x80mm	x8
B		Bolt M6x40mm	x10
C		Spring Washer	x18
D		Flat Washer	x12
E		Wood Dowel	x4
F		Allen Key	x1
G		Nail Bushes	x4
H		Wood Button	x4

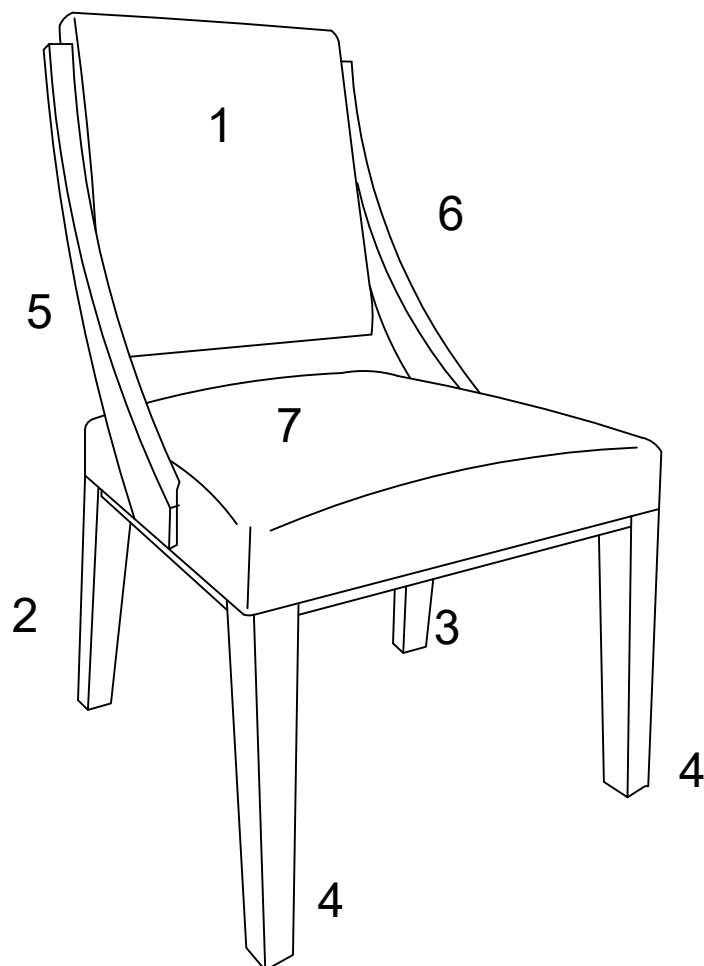

Wait!

Missing parts or hardware? Need assistance?

Contact us before returning your item. We're here to help!

609.256.9000 • cs@modway.com


Step 1

HARDWARE


A	Bolt M6x80mm	x8
C	Spring Washer	x8
D	Flat Washer	x8
F	Allen Key	x1

COMPONENTS

2	Back Leg	x1
3	Back Leg	x1
4	Front Legs	x2
7	Chair Seat & Frame	x1

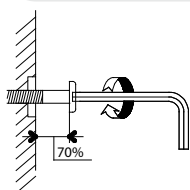

NOTE : Do not fully tighten the bolt

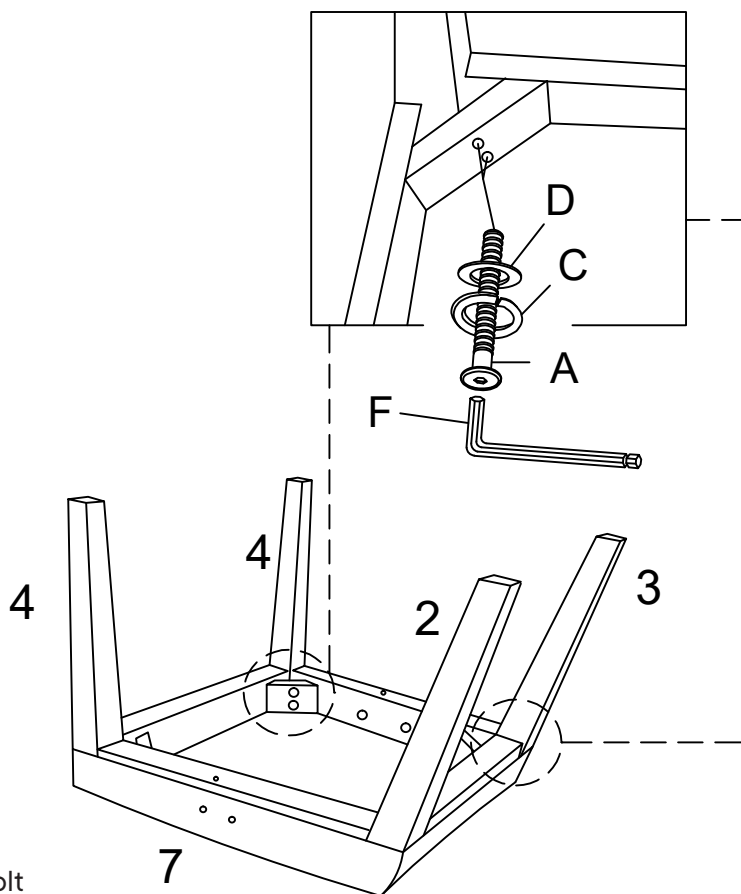


Step 2

HARDWARE


B	Bolt M6x40mm	x6
C	Spring Washer	x6
D	Flat Washer	x4
E	Wood Dowel	x2
F	Allen Key	x1

COMPONENTS

5	Arm (L)	x1
6	Arm (R)	x1
7	Chair Seat & Frame	x1

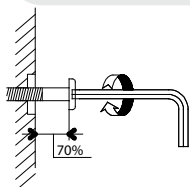

NOTE : Do not fully tighten the bolt

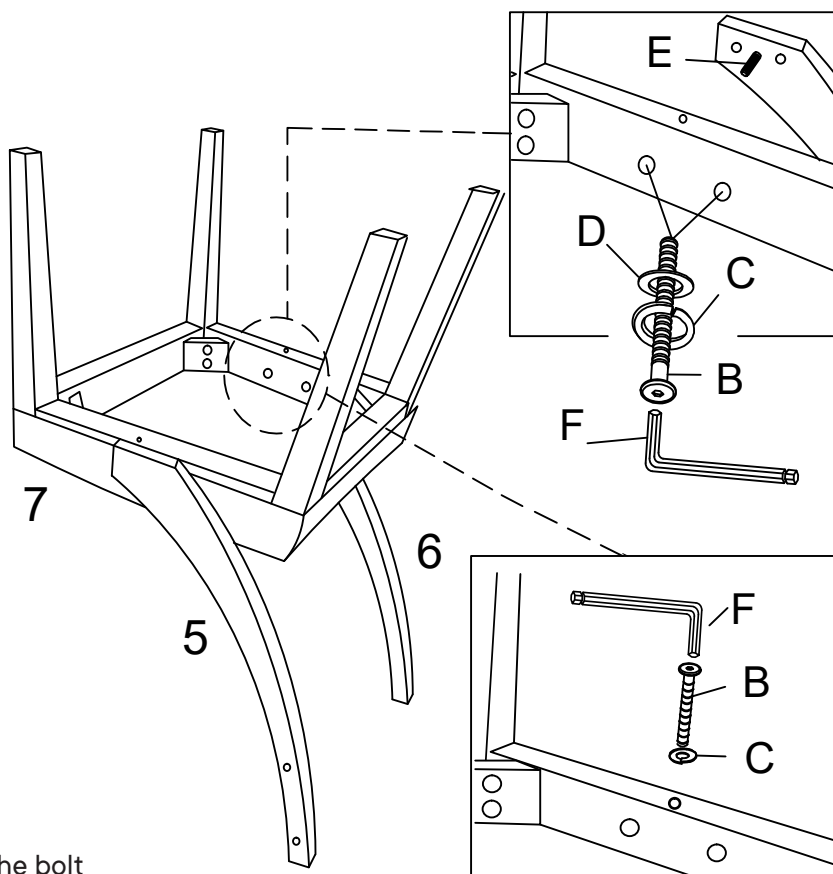



Step 3

HARDWARE

B	Bolt M6x40mm	x4
C	Spring Washer	x4
E	Wood Dowel	x2
F	Allen Key	x1
H	Wood Button	x4



COMPONENTS

1	Chair Back Chair	x1
7	Chair Seat & Frame	x1
5	Arm (L)	x1
6	Arm (R)	x1

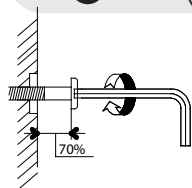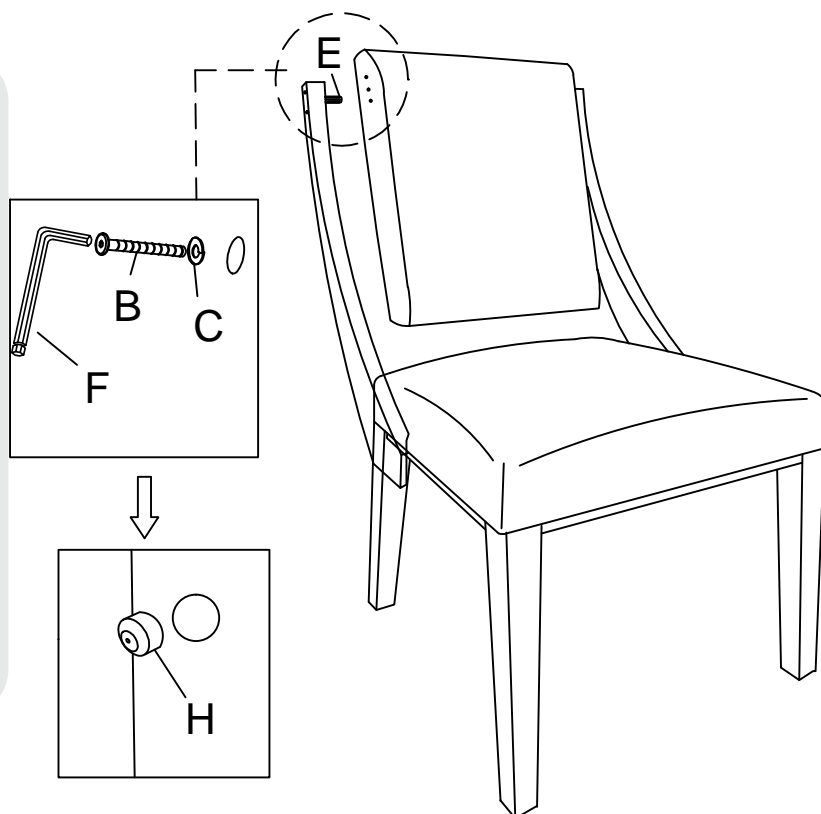

NOTE : Do not fully tighten the bolt

Step 4

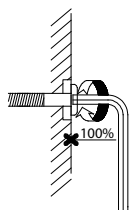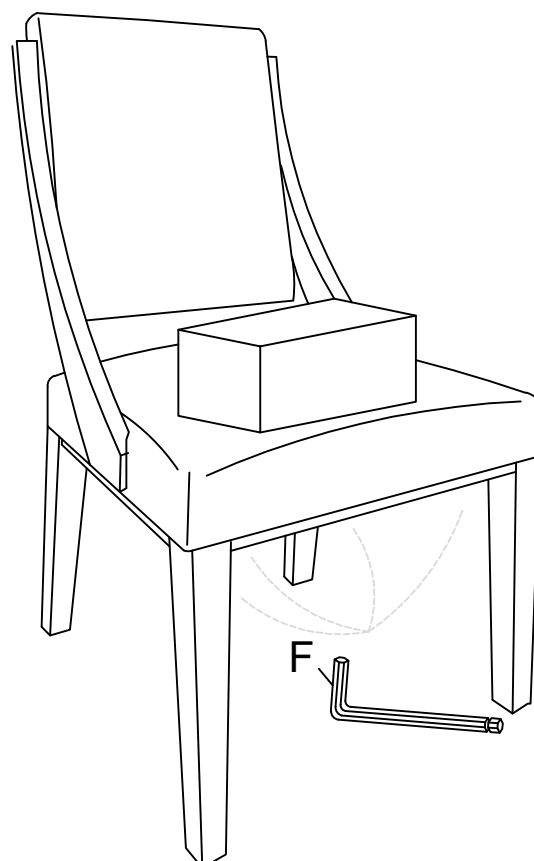

NOTE: To assist with leveling the chair, place a heavy object or have an adult sit on the Chair Seat (2) to pressure the chair for leveling and fully tighten all bolts with Allen Key (E) to secure all legs.

Step 5

HARDWARE


G Nail Basher x4

COMPONENTS

2 Back Legs x1

3 Back Legs x1

4 Front Legs x2

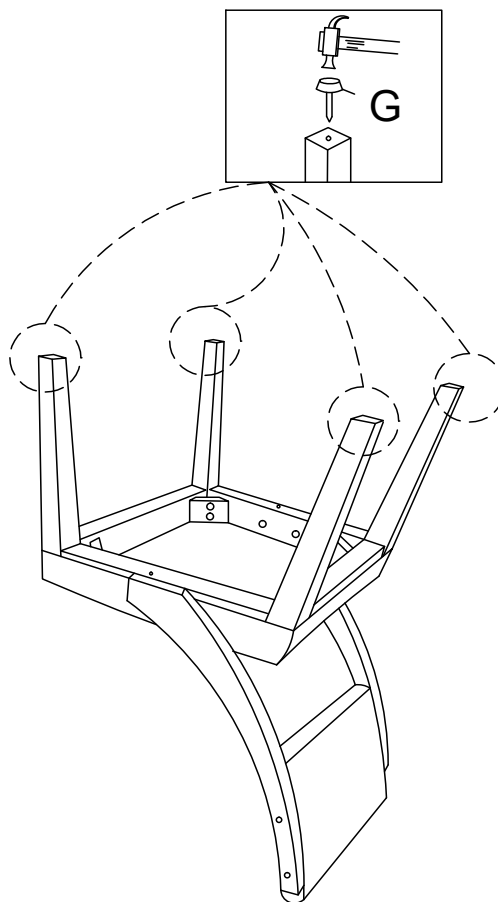

Great job!

Your chair is complete and ready to enjoy.


♥ CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Spot clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

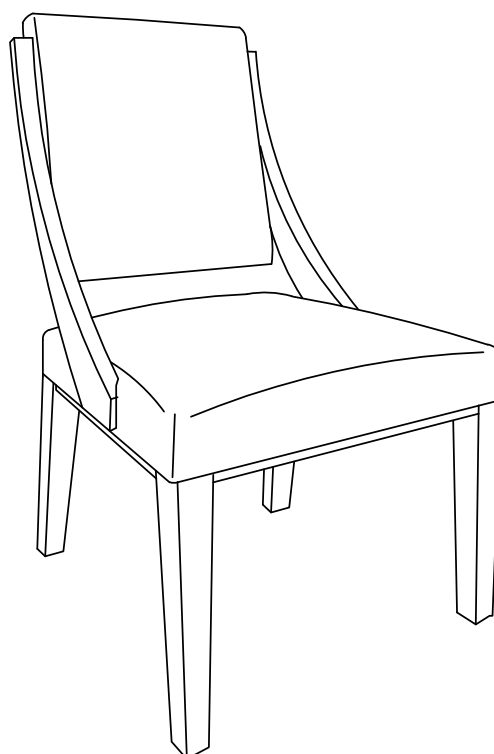

CONNECT WITH US!



Tag us @modway_furniture and #modway for a chance to be featured.