


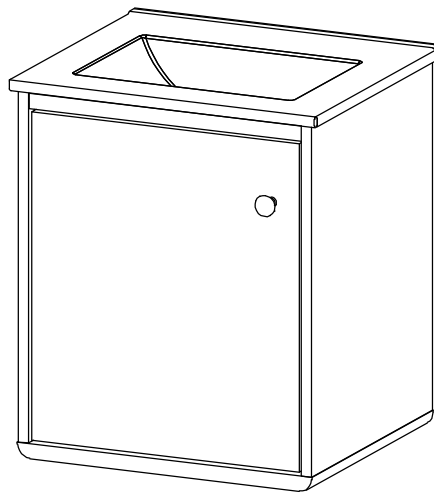


















Thank you for purchasing the **MODWAY CABINET** !

Before you start, here are some helpful advice:


1. We suggest you spend a short time reading through this leaflet and then follow the simple step-by-step instructions.
2. Owing to the size and weight of the Cabinet, we recommend that it is assembled by two adults, on a carpeted or padded area, in the room that it is intended for. Approximate assembly time: 60 minutes.
3. Please do not use any tools other than those Provided or recommended in these instructions.
4. Please do not throw away any of the packaging or instructions until you have checked all the components and hardware and the furniture is fully assembled.
5. Assemble all components loosely until advised to tighten. Depending on use, it may be necessary to tighten the components from time to time, so please save the tools that have been provided.
6. Please keep all pieces out of reach of children.



## Hardware :


<b>A)</b> Cambolt /Metal  $\varnothing$ 6 x 35 mm x 14	<b>B)</b> CamLock /Metal  $\varnothing$ 15 mm x 14	<b>C)</b> Dowel Big/Wood  $\varnothing$ 8x30 mm x 18	<b>D)</b> Bracket/Metal  x 4	<b>E)</b> Screw/Metal  M 4.5 x 12.5 mm x 36
<b>F)</b> Screw/Metal  M 4 x 22 mm x 1	<b>G)</b> Hinge Set/Metal  x 2	<b>H)</b> Door/Drawer Knob/Metal Chrome  x 1	<b>I)</b> Long Bracket/Metal  x 1	<b>J)</b> Screw/Metal  M 7 x 50 mm x 2
<b>K)</b> Hex/Allen Key/Metal  L 4 x 1	<b>L)</b> Screw/Metal  5.5 x 45 mm x 8	<b>M)</b> Hanger/Metal  x 2	<b>N)</b> Short Bracket/Metal  x 2	<b>O)</b> Screw/Metal  M 6.4 x 14 mm x 4
<b>P)</b> Wall Plug/Plastic  5002 x 8	<b>Q)</b> Screw Cap/Plastic  $\varnothing$ 15 mm x 4	<b>R)</b> Floor Protector/Sponge/Felt  25 x 15 x 2 mm x 8	<b>S)</b> Screwdriver (Not Include)  x 1	

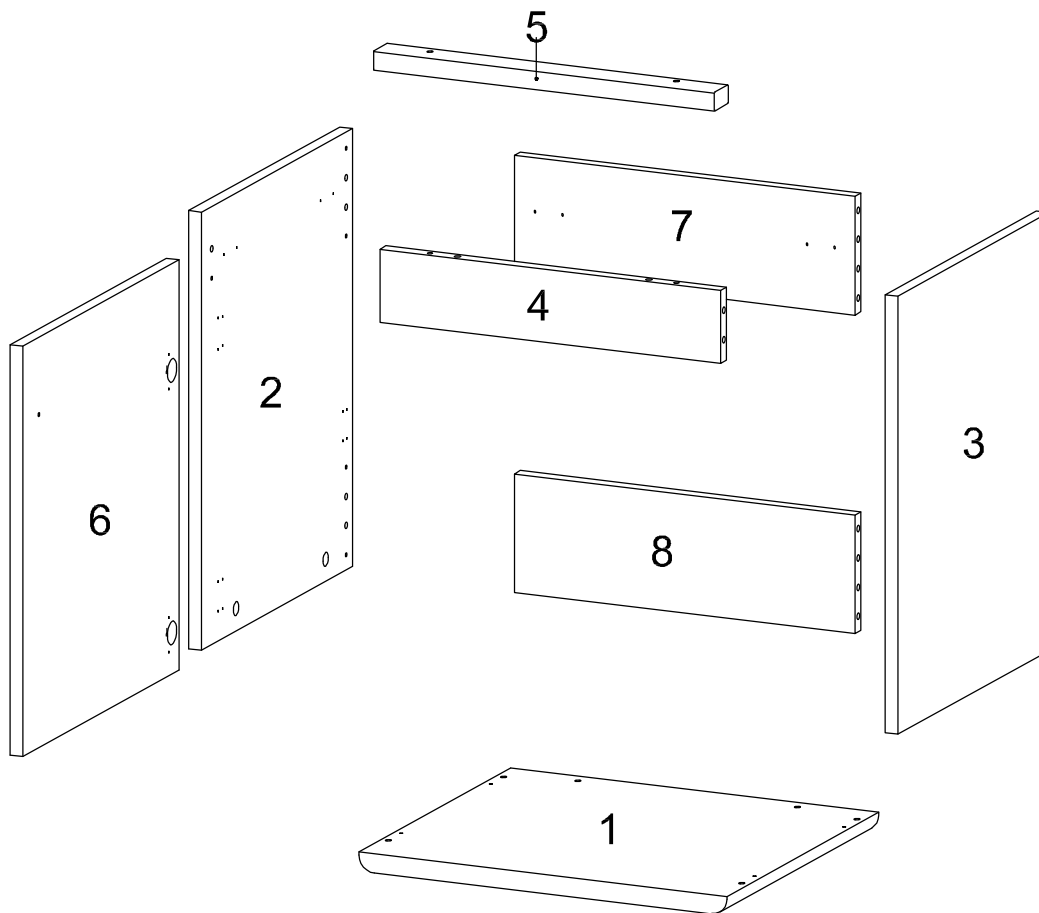


## Components:



1	Bottom Board	x1	2	Side Board Left	x1	3	Side Board Right	x1	4	Front Skirt 1	x1
5	Front Skirt 2	x1	6	Wooden Door	x1	7	Back Board 1	x1	8	Back Board 2	x1

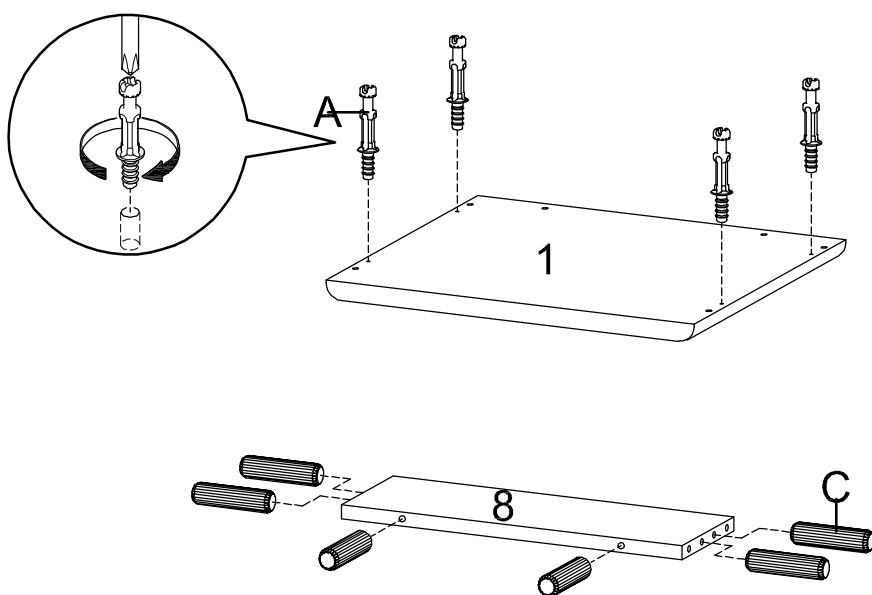
## STEP 1:




		
A x 4	C x 6	S x 1




Hardware required.  
Screwdriver not included
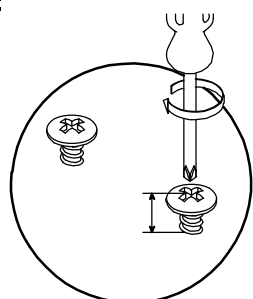
## STEP 2:

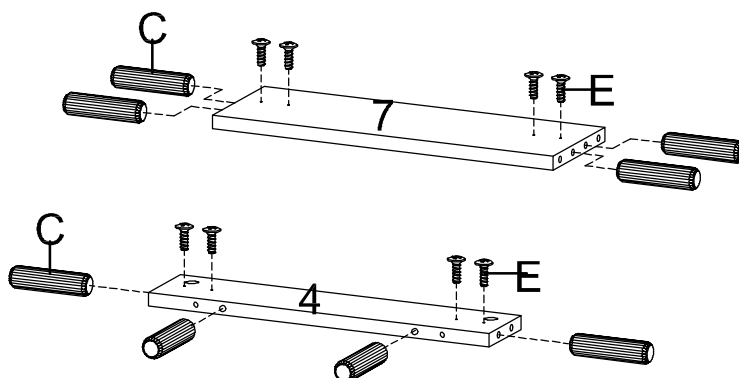


Don't over  
tighten  $\pm 2 - 3$  mm



		
C x 8	E x 8	S x 1


Hardware required.  
Screwdriver not included

## STEP 3:

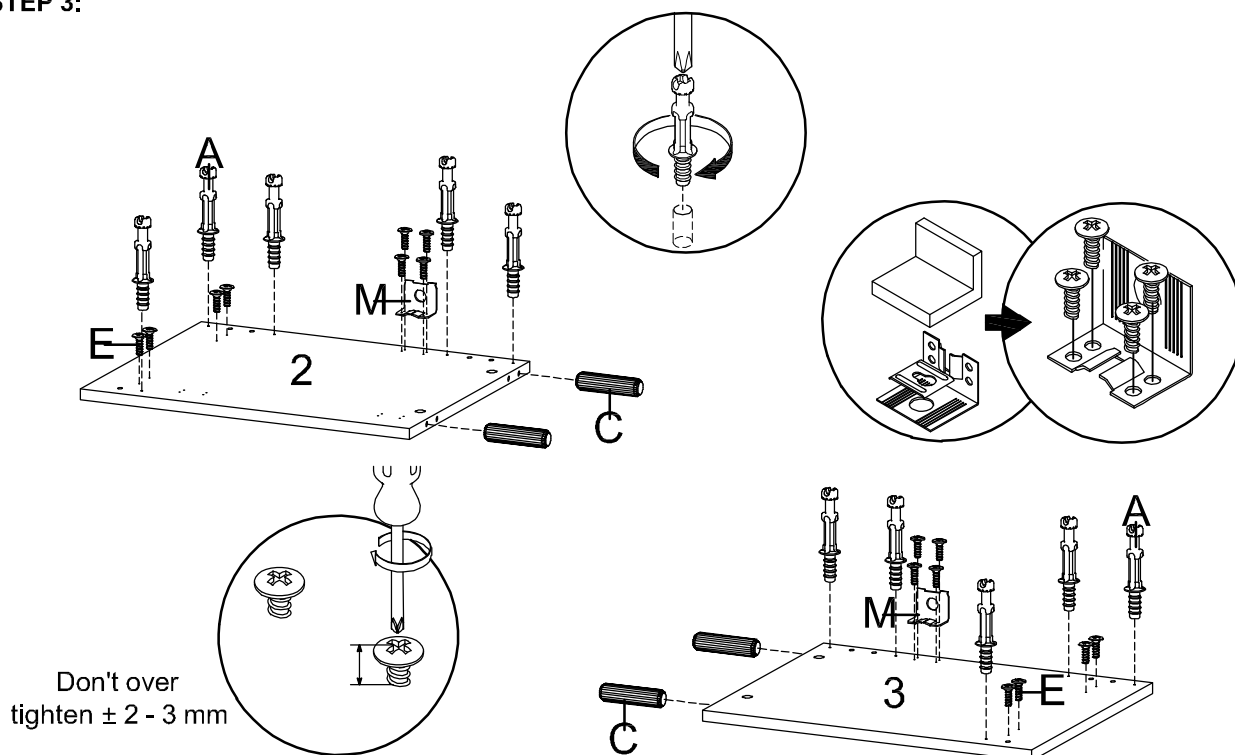

A x 10	C x 4	E x 16	M x 2	S x 1


## STEP 4:

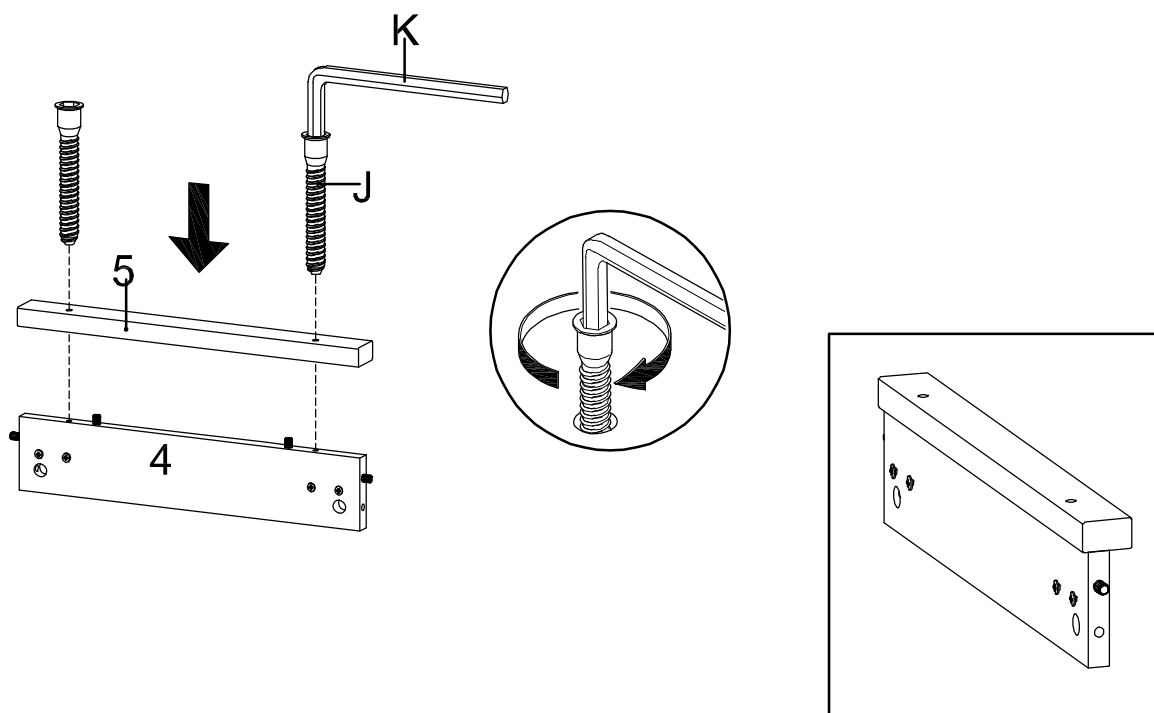



J x 2	K x 1

Hardware required.


## STEP 5:

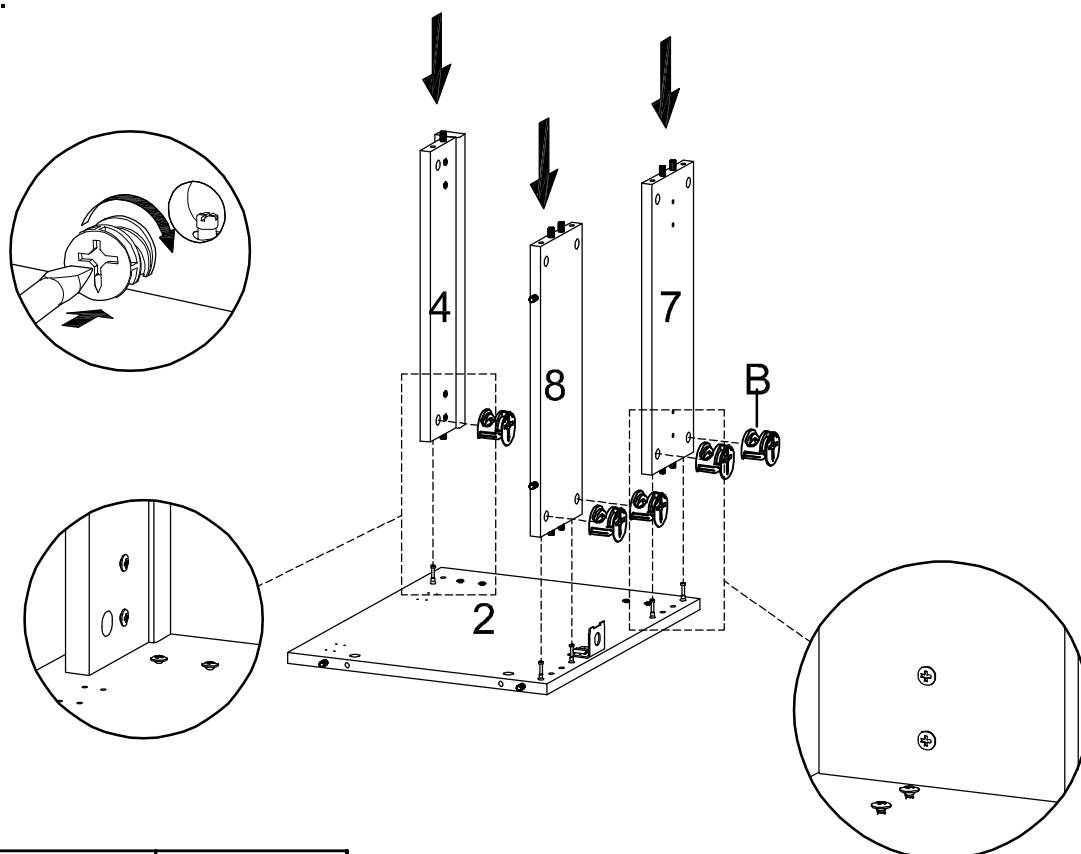



	
B x 5	S x 1

Hardware required.  
Screwdriver not included


## STEP 6:

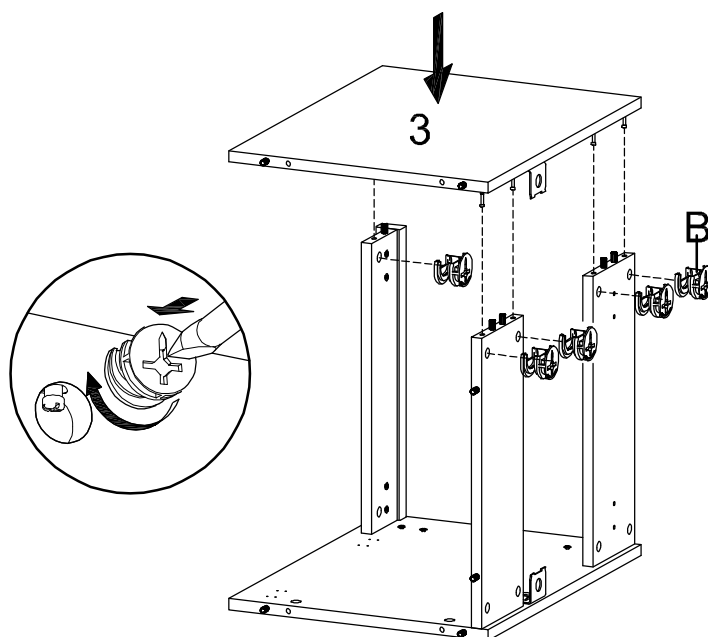




	
B x 5	S x 1

Hardware required.  
Screwdriver not included

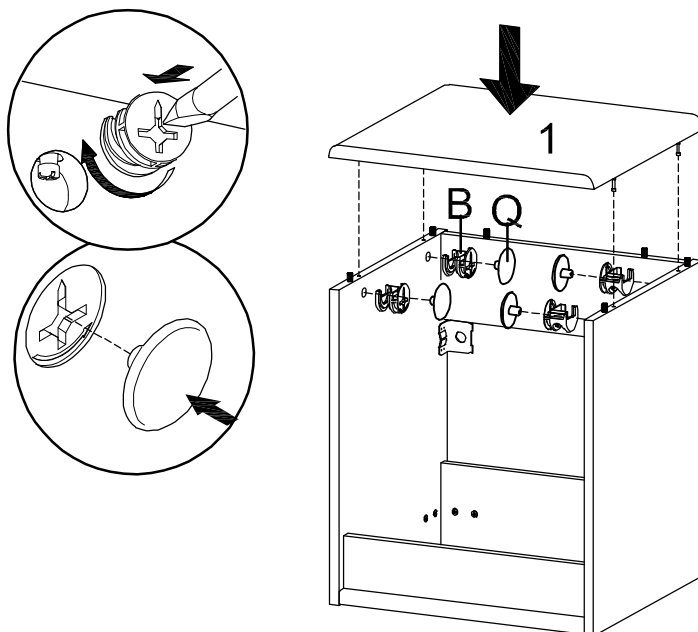
## STEP 7:





		
B x 4	Q x 4	S x 1

Hardware required.  
Screwdriver not included

## STEP 8:

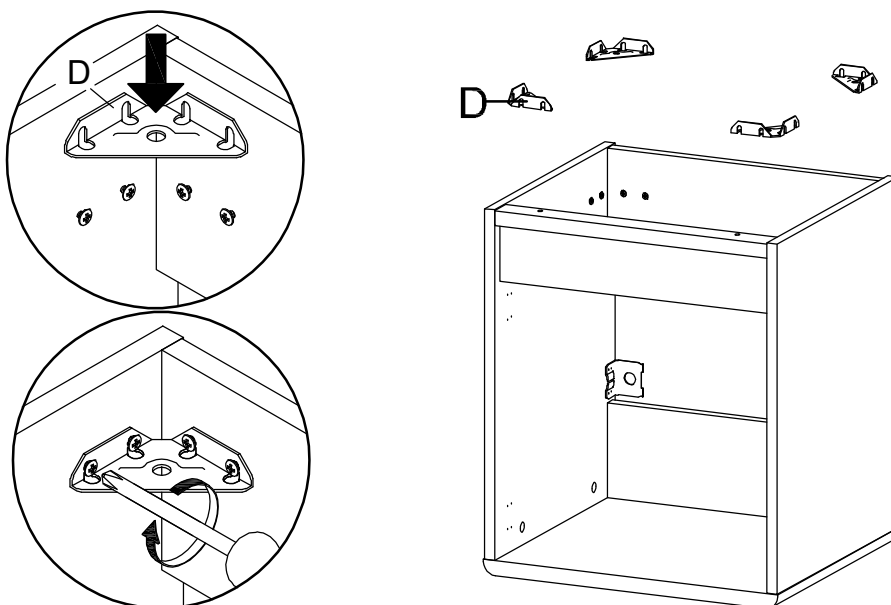


NOTE :  
Tighten all the screw

	
D x 4	S x 1

Hardware required.  
Screwdriver not included

## STEP 9:

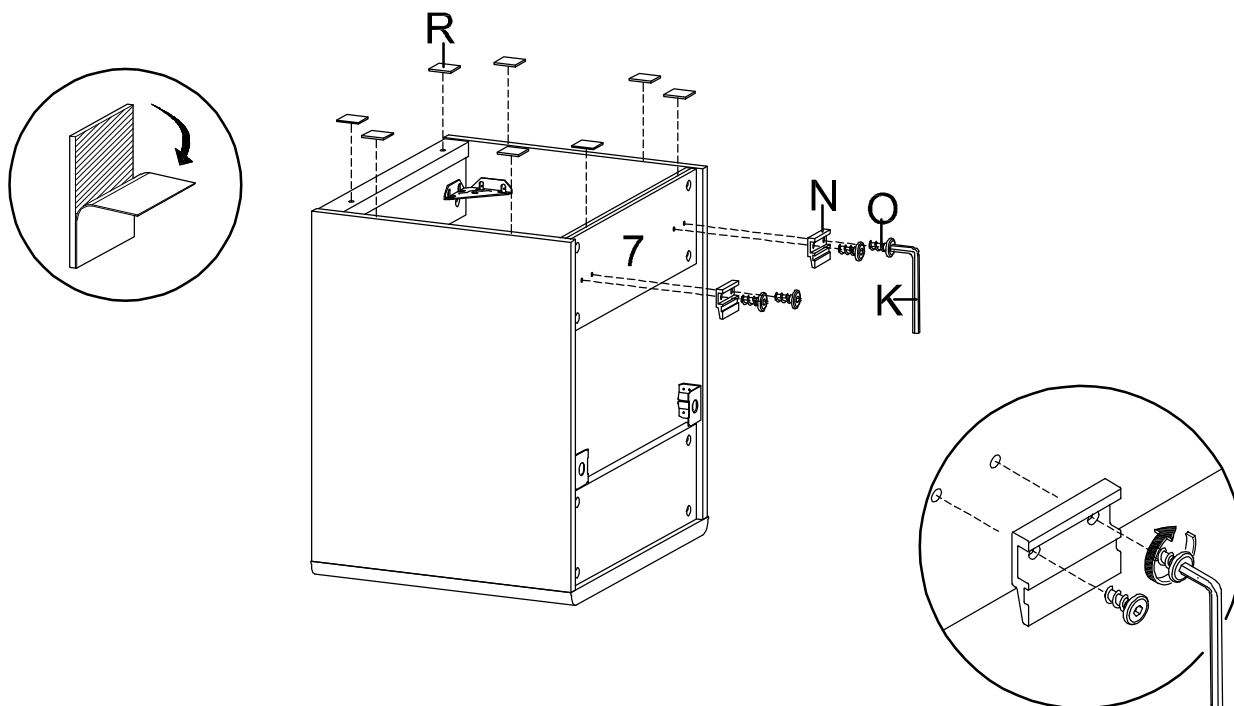


K	N x 2	O x 4	R x 8

Hardware required.

## STEP 10:


Determine your desired height (Y), then subtract by 106 mm. This is the drill holes height from the floor (Z).

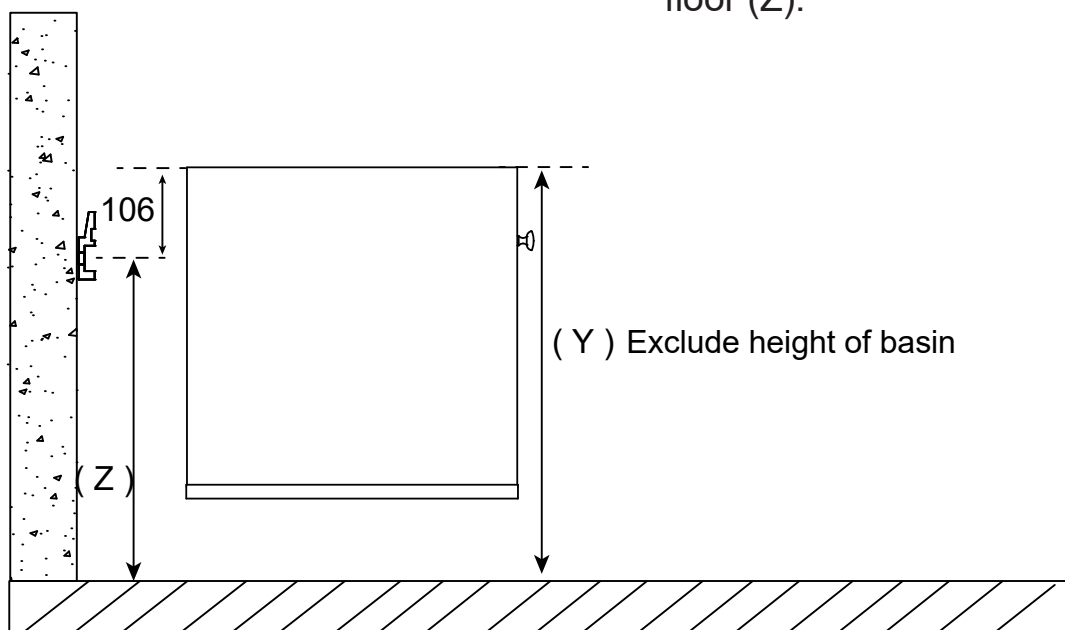

## STEP 11:

Please use minimum 2 holes each group, to apply the wall plug and screw. Use additional holes when necessary.

### \* Long Bracket


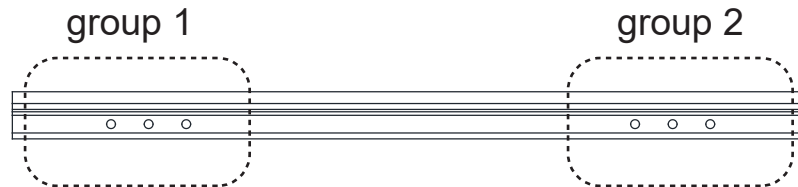


Different wall materials require unique wall fasteners.

The wall plugs (P) and screws (L) are designed for fixing to concrete walls only. Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

I	L	P

## STEP 12:

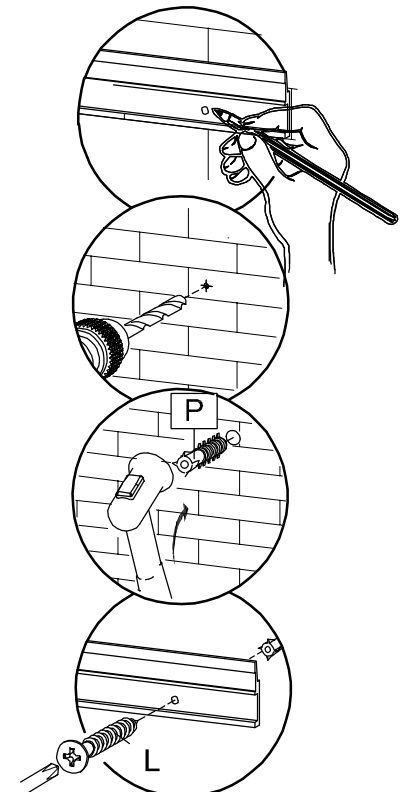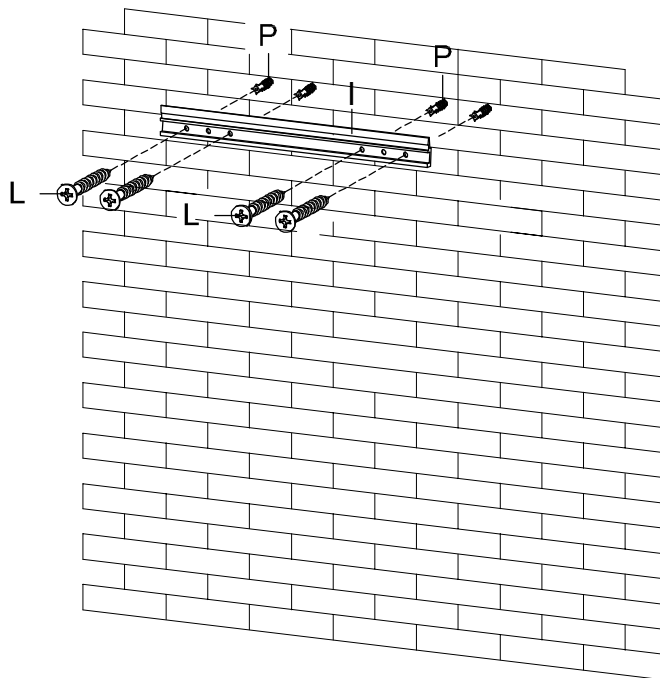





L x 4	P x 4	I x 1	S x 1

Hardware required.  
Screwdriver not included

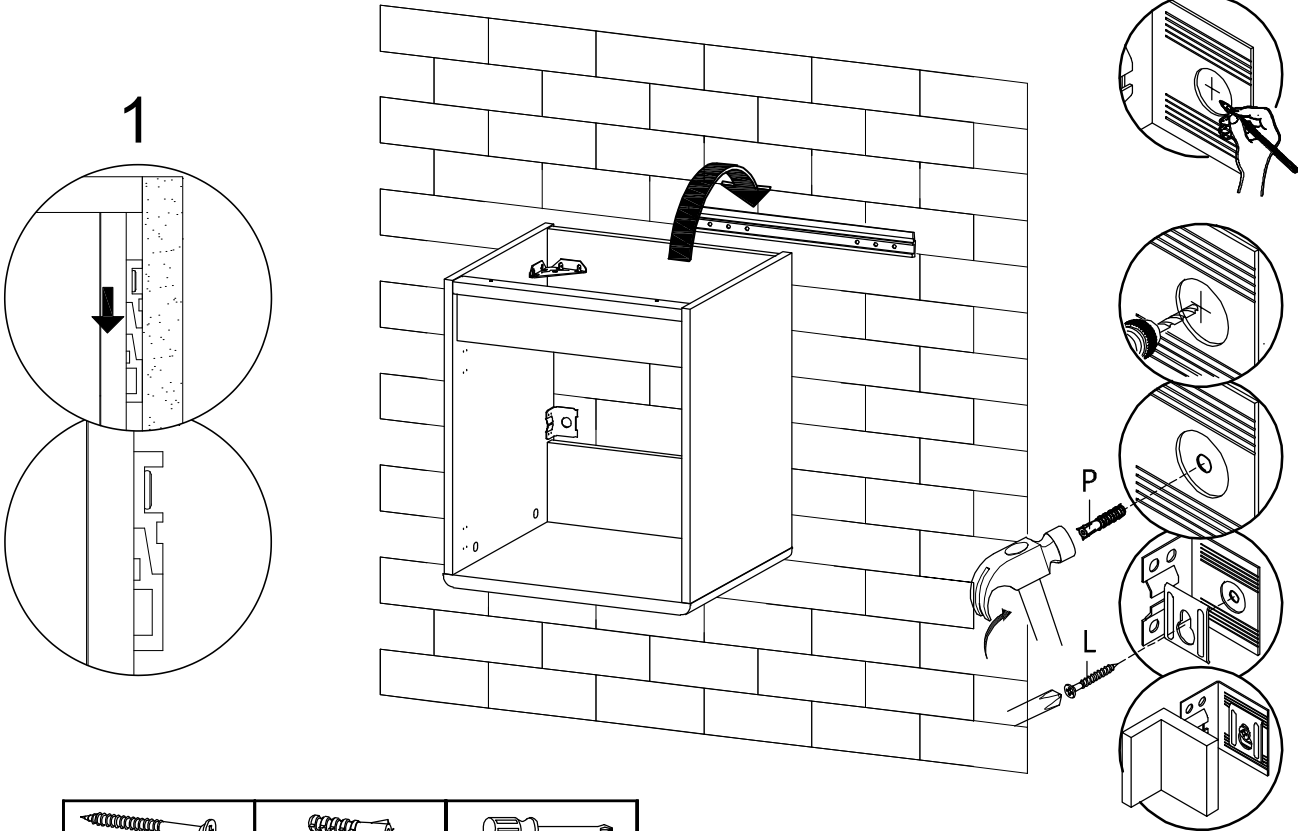


STEP 13:






		
L x 2	P x 2	S x 1

Hardware required.  
Screwdriver not included

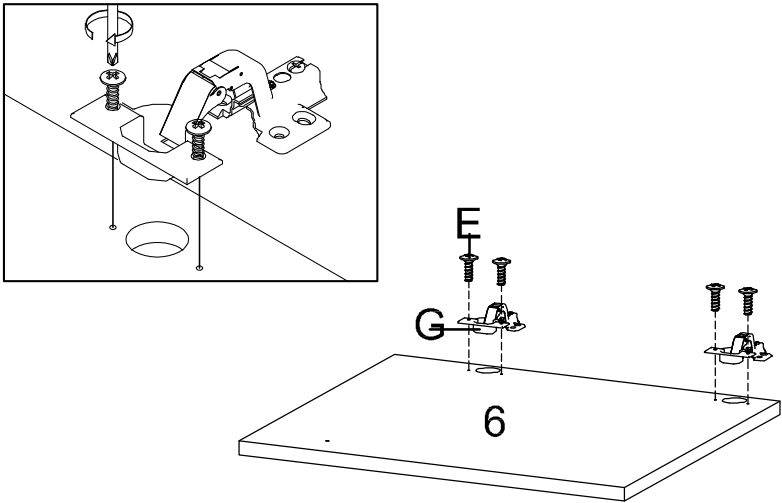
STEP 14:







		
E x 4	G x 2	S x 1

Hardware required.  
Screwdriver not included
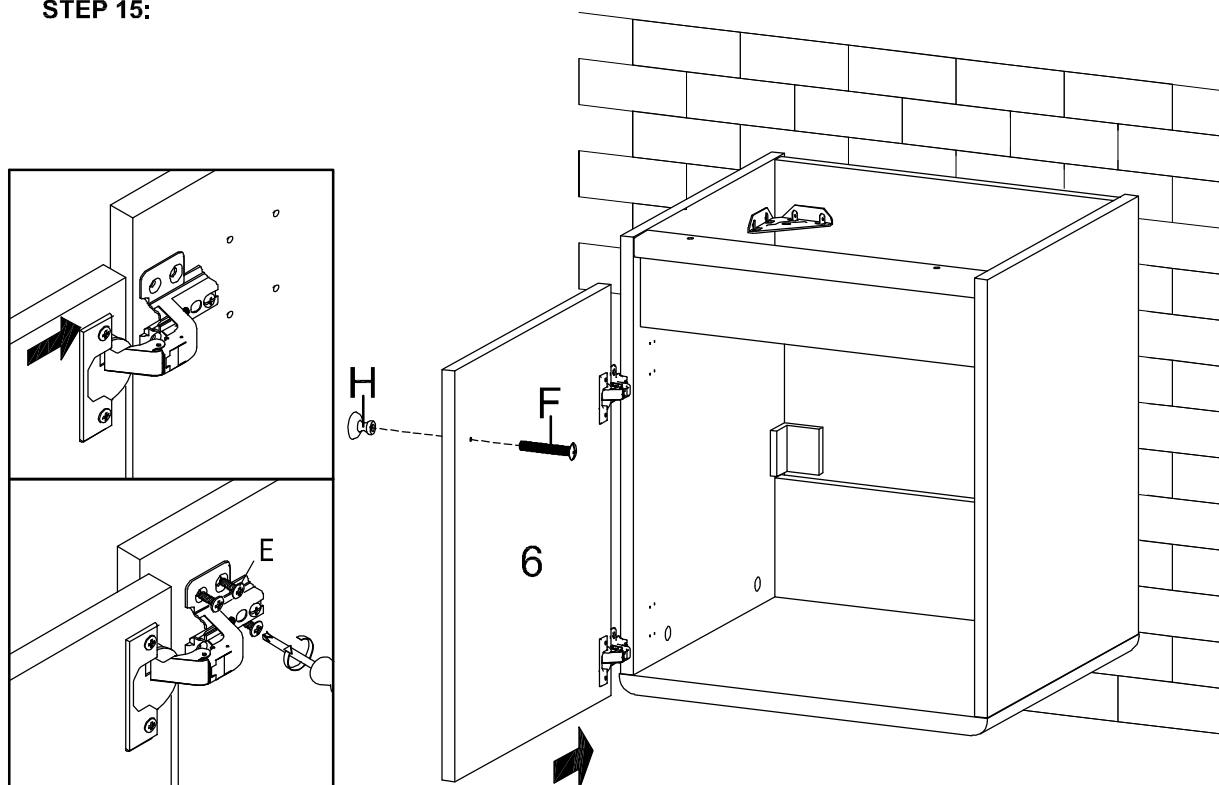
## STEP 15:




			
E x 8	F x 1	H x 1	S x 1


Hardware required.  
Screwdriver not included

## STEP 16:

Apply a thin bead of silicone compound around the vanity base and set the vanity top carefully in place. Remove any excess silicone compound with a wet rag

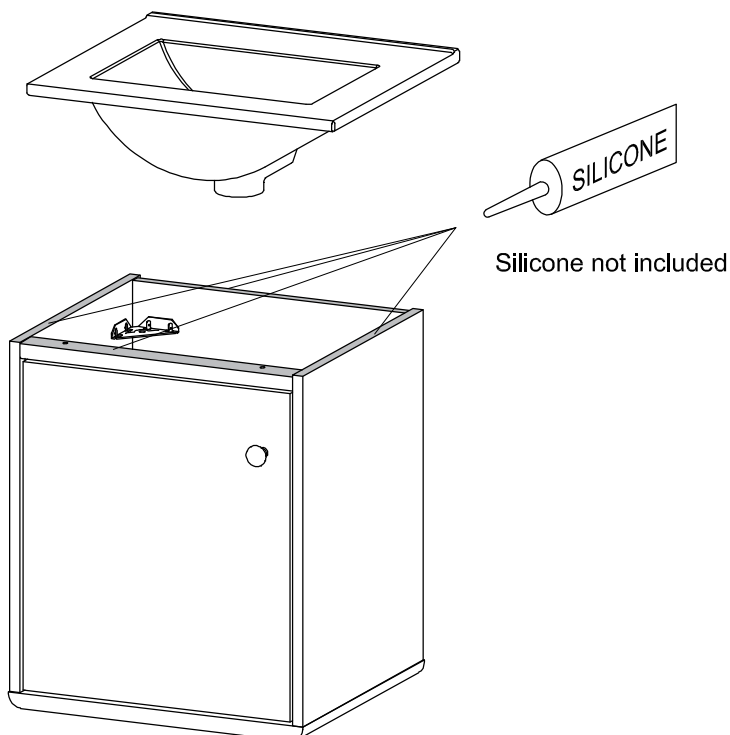

STEP 17:

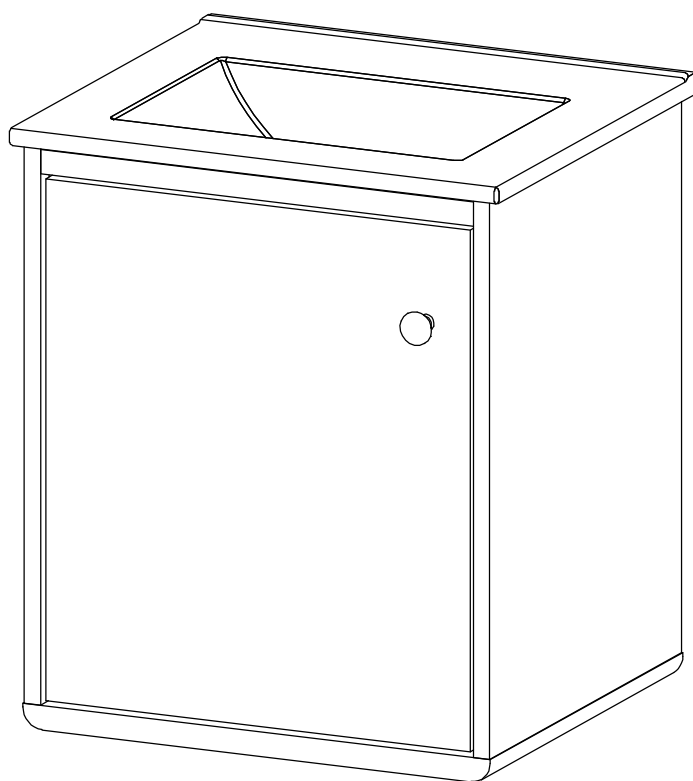

**Assembly is complete. The Cabinet is ready to enjoy now !**