
ASSEMBLY INSTRUCTIONS

EEI-5294

V1.03.22.21

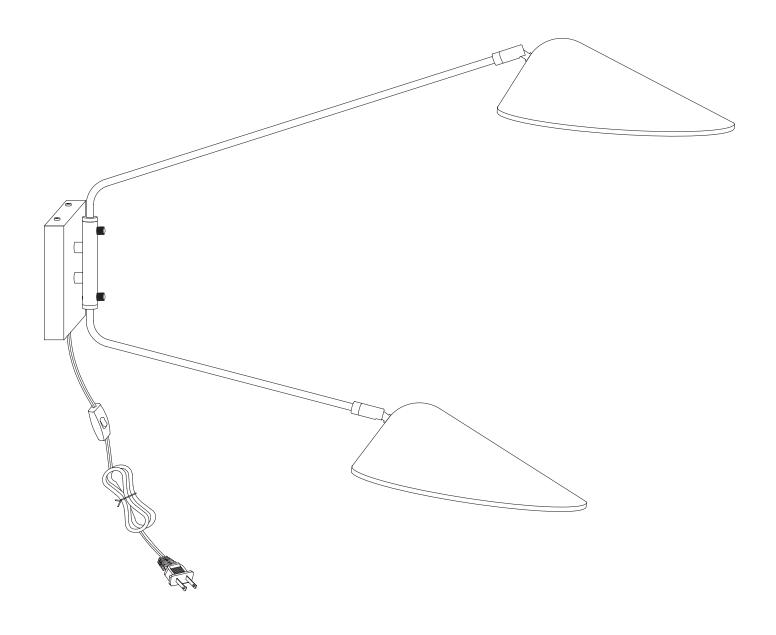


609.256.9000 • cs@modway.com www.modway.com



Let's get started!

*modway

Hardware included in the box:

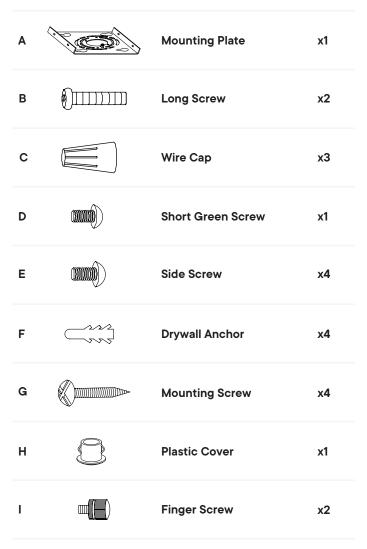

What you need:

1	Phillips	Phillips Head Screwdriver
2		Scissors

You may also need:

- + Ladder
- + Electrical Tape
- + Wire Strippers or Cutters
- + Power Drill
- + Two (2) E26 (medium-base) Light Bulbs (MAX. 60W)



Missing parts or hardware? Need assistance? Contact us before returning your item.

We're here to help!

609.256.9000 · cs@modway.com

Before you begin, here are some things to keep in mind:

Read through all of the instructions before starting.

Make sure you have all parts and components
before discarding any packing materials.

For hardwiring installation, we suggest hiring a professional electrician.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Check all parts and hardware for damage. If the product is damaged, it should not be used.

We recommend LED bulbs. LEDs are better for energy consumption and can prolong the life of the fixture.

Installation and electrical connections must follow local and National Electric Code standards.

Ensure the main power supply is OFF before starting work to prevent electrical shock.

Allow the fixture to cool before changing the bulb. Fixture may get hot when in use.

Care instructions are listed in the last step of this manual.




FOR PLUG-IN INSTALLATION

Step 1




1. Remove the **Finger Screws (I)** from the bracket on the wall base and facing the arm and lamp shade away from the wall base, insert the connector of the arm into the bracket.

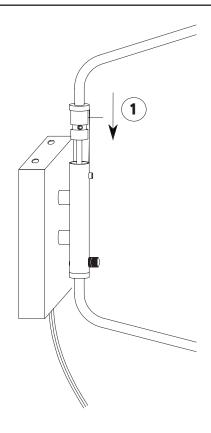

Step 2

HARDWARE Finger Screw x2


2. Affix the **Finger Screws (I)** back into the bracket to secure the lamp arms in place.

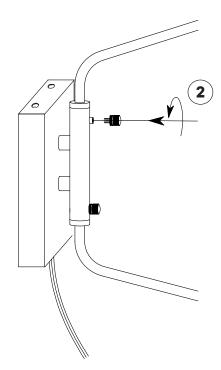

*modway

HARDWARE A Mounting Plate x1 Drywall Anchors x4


3. Remove the **Mounting Plate (A)** from the wall base and using the mounting plate as a guide, drill 4 holes into the wall and insert **4 Drywall Anchors (F)** inside the holes.

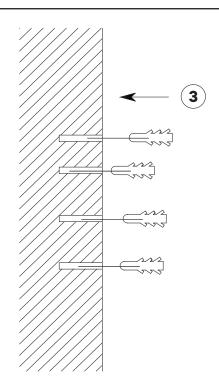

Step 4

HARDWARE				
A	Mounting Plate	x1		
•	Drywall Anchors	x4		
G	Mounting Screws	х4		
_				


4. Affix the **Mounting Plate (A)** to the wall by screwing **4 Mounting Screws (G)** into the **4 Drywall Anchors (F)**.

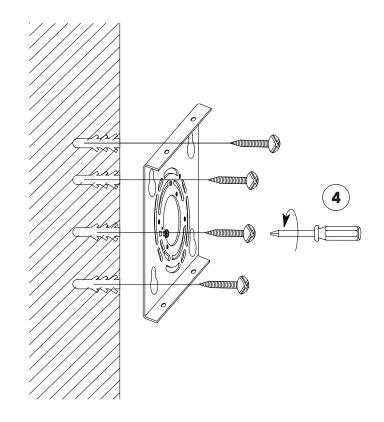


*modway




5. Attach the wall base to the **Mounting Plate (A).**

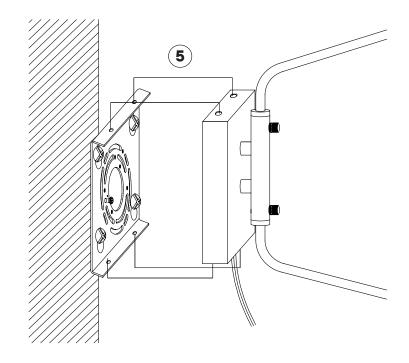

Step 6



6. Secure it with 4 Side Screws (E).

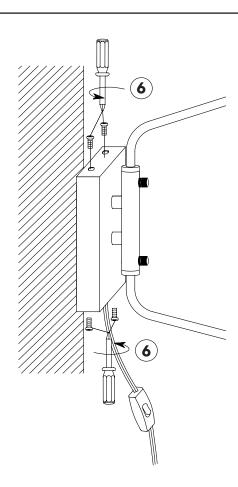


*modway

7. Install the light bulbs according to the wattage label (E26, MAX. 60W, bulb not included).

ATTENTION: To avoid risk of fire, do not exceed the recommended wattage shown on the wattage label.

NOTE: The position of the lamp shades and arms can be adjusted as shown.

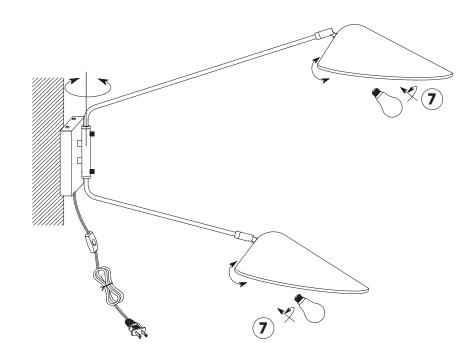

Step 8

Great job! Your new light fixture is ready for use.

CARING FOR YOUR ITEM

Indoor use only.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.


CONNECT WITH US! (In the second sec







Tag us @modway_furniture and #modway for a chance to be featured.

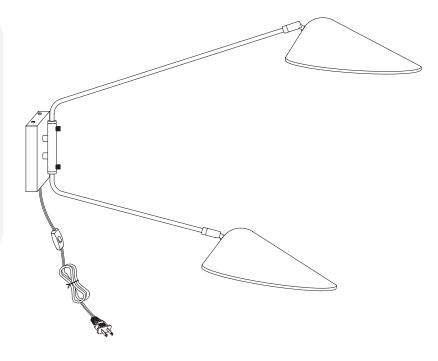

*modway

FOR HARDWIRED INSTALLATION

Step 1

HARDWARE A Mounting Plate x1 Wire Caps x2


1. Remove the Mounting Plate (A) from the wall base and disconnect the Wire Caps (C) from back side of wall base.




2. Using scissors, cut the plastic cable ties off from the wire.

Step 3

3. Loosen the screw and release the cable from cord anchorage.

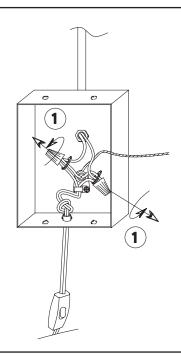

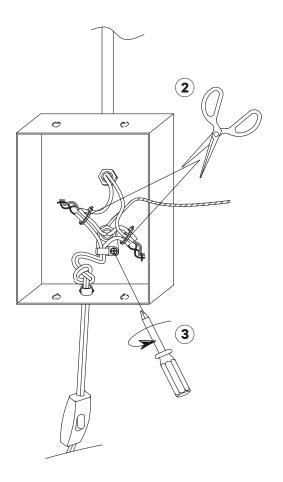

FOR HARDWIRED INSTALLATION


Step 4

*modway

4. Untie the knot in the cable.


Step 5

5. Pull out the cable from the wall base.

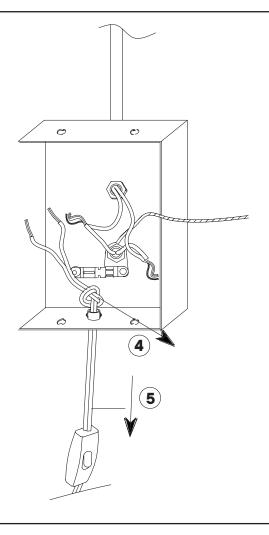

Step 6


6. Remove the bushing from bottom hole of wall base.

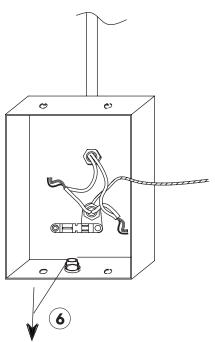

*modway




7. Insert the **Plastic Cover (H)** into the bottom hole of the wall base.

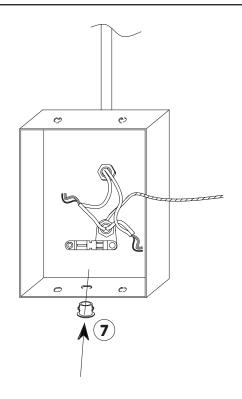

Step 8

HARDWARE A Mounting Plate x1 B Long Screws x2

8. Attach the **Mounting Plate (A)** to the junction box in the wall and affix it with **2 Long Screws (B)**.

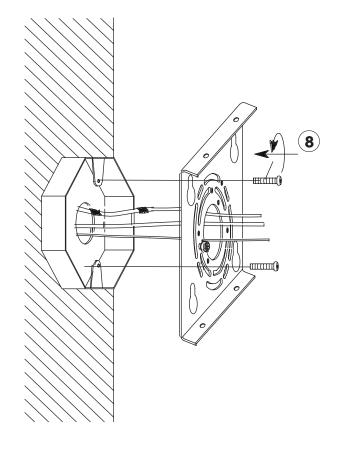


Step 9 + 10

*modway

HARDWARE © Wire Caps x2 D Short Green Screw x1


- **9.** Connect wires with matching polarity. The black fixture wire connects to the black supply wire (live wire) and the white fixture wire to the white supply wire (neutral wire). Secure each connection using a **Wire Cap (C)**.
- 10. Connect the copper fixture wire to the ground wire and secure the connection with a Wire Cap (C). If there is not a supply ground wire, attach the copper fixture wire to the Short Green Screw (D) to ground.

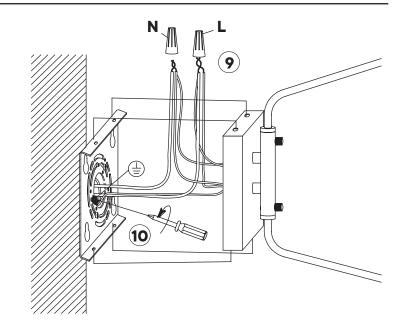

Step 11

HARI	OWARE		
A	Mounting Plate	x1	
•	Side Screws	х4	

11. Attach the wall base to the Mounting Plate (A) and secure it with 4 Side Screws (E).

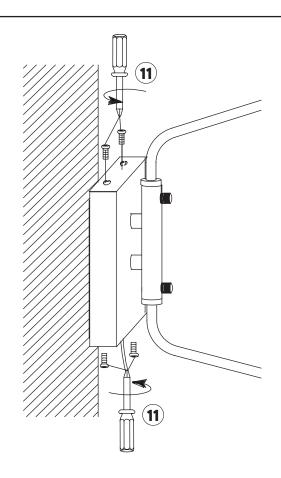


*modway

12. Install the light bulbs according to the wattage label (E26, MAX. 60W, bulb not included).

ATTENTION: To avoid risk of fire, do not exceed the recommended wattage shown on the wattage label.

NOTE: The position of the lamp shades and arms can be adjusted as shown.

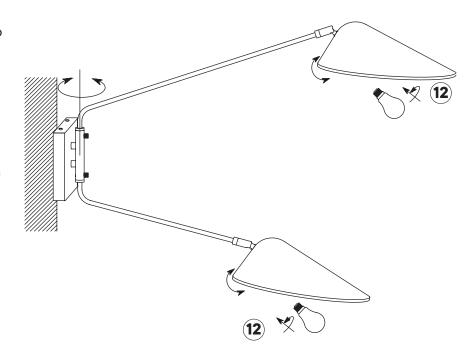

Step 13

Great job! Your new light fixture is ready for use.

CARING FOR YOUR ITEM

Indoor use only.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

CONNECT WITH US! (i) (f) (p)







Tag us @modway_furniture and #modway for a chance to be featured.

