
ASSEMBLY INSTRUCTIONS EEI-5295

V1.03.22.21

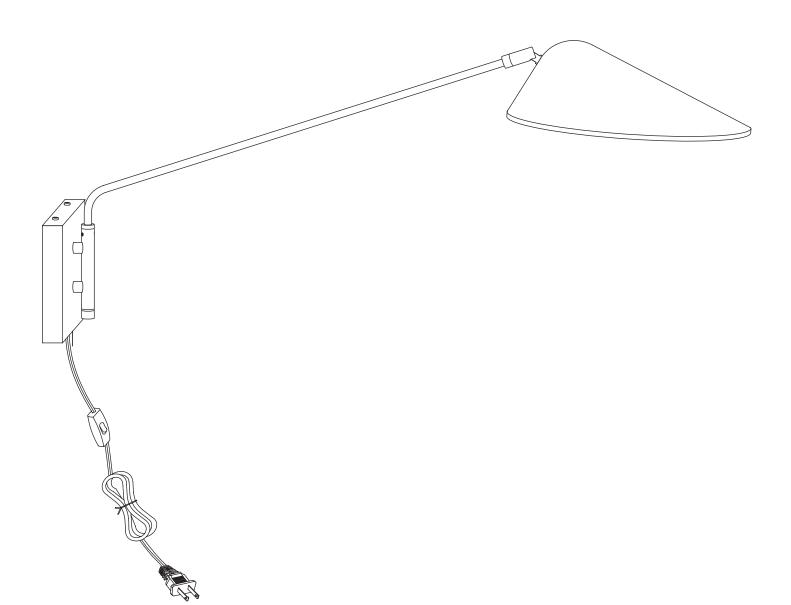

Questions? Contact us! 609.256.9000 • cs@modway.com www.modway.com



Let's get started!

Hardware included in the box:

Α	Mounting Plate	x1
В	Long Screw	x2
с	Wire Cap	хЗ
D	Short Green Screw	x1
Е	Side Screw	x4
F	Drywall Anchor	x4
G	Mounting Screw	x4
н	Plastic Cover	x1

What you need:

 1
 Image: Description of the second second

You may also need:

- + Ladder
- + Electrical Tape
- + Wire Strippers or Cutters
- + Power Drill
- + One (1) E26 (medium-base) Light Bulb (MAX. 60W)



Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!
609.256.9000 • cs@modway.com

Before you begin, here are some things to keep in mind:

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

For hardwiring installation, we suggest hiring a professional electrician.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Check all parts and hardware for damage. If the product is damaged, it should not be used.

We recommend LED bulbs. LEDs are better for energy consumption and can prolong the life of the fixture.

Installation and electrical connections must follow local and National Electric Code standards.

Ensure the main power supply is OFF before starting work to prevent electrical shock.

Allow the fixture to cool before changing the bulb. Fixture may get hot when in use.

Care instructions are listed in the last step of this manual.

*modway

Note: Skip to the next set of installation steps if you are hardwiring your product.

*modway


FOR PLUG-IN INSTALLATION

Step 1

HARDWARE

A	Mounting Plate	x1
Ð	Drywall Anchors	x4


1. Remove the **Mounting Plate (A)** from the wall base and using the mounting plate as a guide, drill 4 holes into the wall and insert **4 Drywall Anchors (F)** inside the holes.

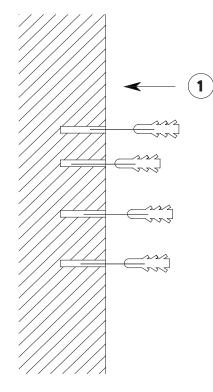

Step 2

HARDWARE						
A	Mounting Plate	x1				
Ð	Drywall Anchors	x4				
G	Mounting Screws	x4				

2. Affix the Mounting Plate (A) to the wall by screwing 4 Mounting Screws (G) into the 4 Drywall Anchors (F).

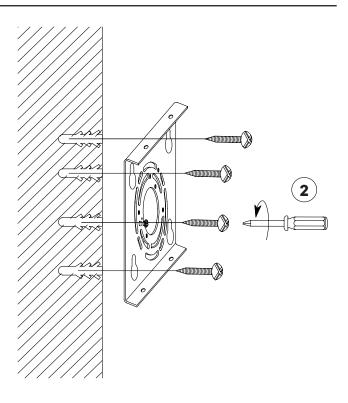

FOR PLUG-IN INSTALLATION

Step 3

*modway


HARDWARE

A Mounting Plate

ng Plate

x1

3. Attach the wall base to the **Mounting Plate (A)**.

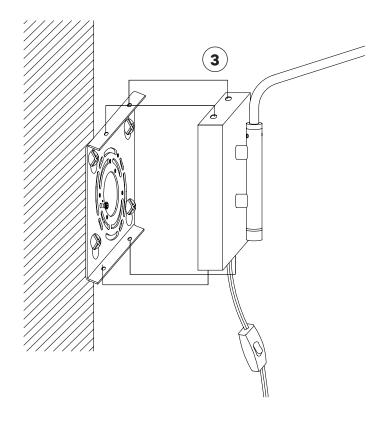


Step 4

HARDWARE

E Side Screws

x4

4. Secure it with 4 Side Screws (E).

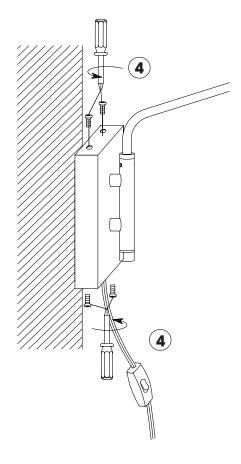

FOR PLUG-IN INSTALLATION


Step 5

*modway

5. Install the light bulb according to the wattage label (E26, MAX. 60W, bulb not included).

ATTENTION: To avoid risk of fire, do not exceed the recommended wattage shown on the wattage label.

NOTE: The position of the lamp shade and arm can be adjusted as shown.

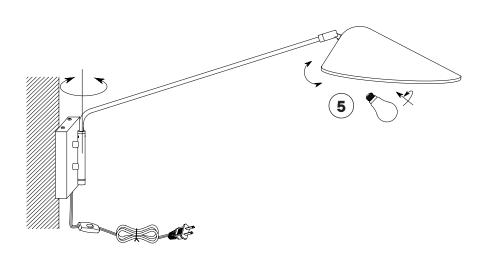

Step 6

Great job! Your new light fixture is ready for use.

CARING FOR YOUR ITEM


Indoor use only.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.





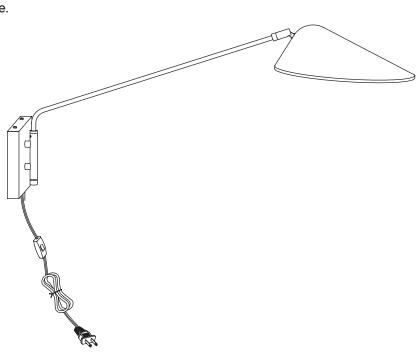

ATTENTION: If hardwiring, we suggest hiring a professional electrician.


*modway

FOR HARDWIRED INSTALLATION

Step 1

HARDWARE Mounting Plate x1 Wire Caps x2

1. Remove the **Mounting Plate (A)** from the wall base and disconnect the **Wire Caps (C)** from the back side of the wall base.

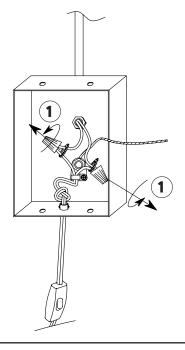


Step 2

2. Using scissors, cut the plastic cable ties off from the wire.

Step 3

3. Loosen the screw and release the cable from cord anchorage.

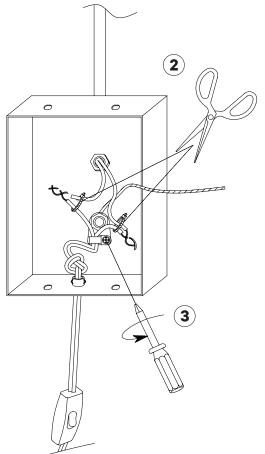


Step 4

*modway

4. Untie the knot in the cable.


Step 5

5. Pull out the cable from the wall base.

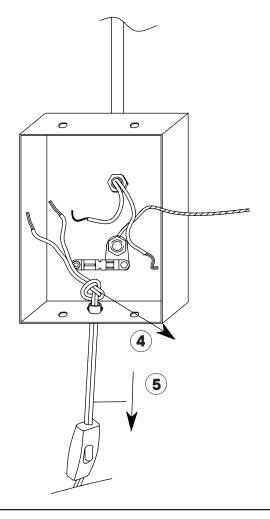

Step 6

6. Remove the bushing from bottom hole of wall base.

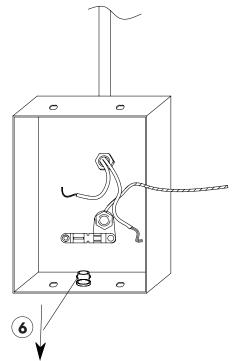

Step 7


*modway

HARDWARE

H Plastic Cover

x1

7. Insert the **Plastic Cover (H)** into the bottom hole of the wall base.

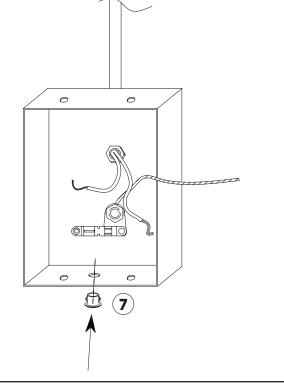


Step 8

HARDWARE

AMounting Platex1BLong Screwsx2

8. Attach the Mounting Plate (A) to the junction box in the wall and affix it with 2 Long Screws (B).

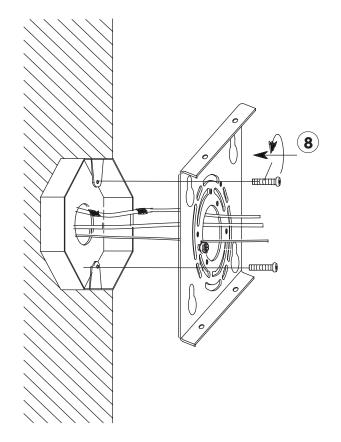

Step 9 + 10

*modway

HARDWARE

C	Wire Caps	x2
D	Short Green Screw	x1


9. Connect wires with matching polarity. The black fixture wire connects to the black supply wire (live wire) and the white fixture wire to the white supply wire (neutral wire). Secure each connection using a **Wire Cap (C)**.


10. Connect the copper fixture wire to the ground wire and secure the connection with a Wire Cap (C). If there is not a supply ground wire, attach the copper fixture wire to the Short Green Screw (D) to ground.

Step 11



11. Attach the wall base to the **Mounting Plate (A)** and secure it with **4 Side Screws (E)**.

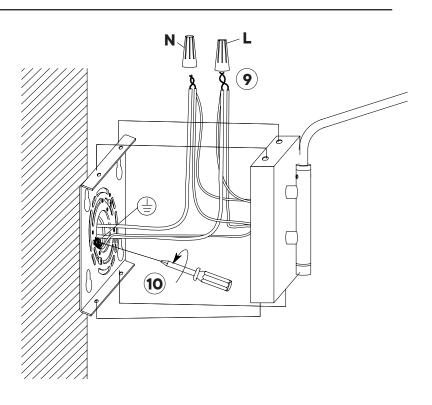

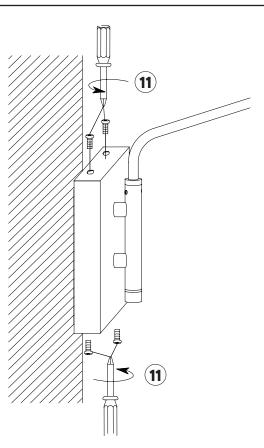


Step 12

*modway

12. Install the light bulb according to the wattage label (E26, MAX. 60W, bulb not included).

ATTENTION: To avoid risk of fire, do not exceed the recommended wattage shown on the wattage label.

NOTE: The position of the lamp shade and arm can be adjusted as shown.

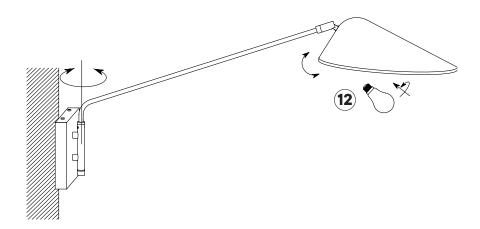

Step 13

Great job! Your new light fixture is ready for use.

CARING FOR YOUR ITEM

Indoor use only.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.





Tag us @modway_furniture and #modway for a chance to be featured.

