
ASSEMBLY INSTRUCTIONS

EEI-5665

V1 06 22 21

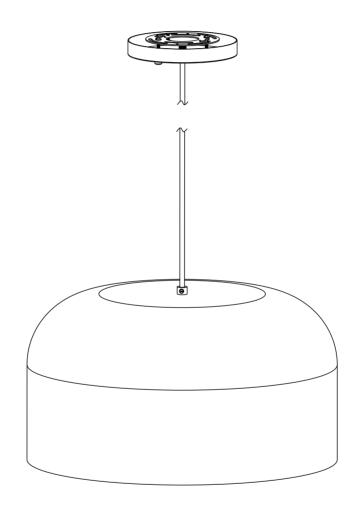

Let's get started!





Read through all of before starting

For hardwiring installation,

we suggest hiring a professional electrician.



Make sure you have all parts and components before discarding any packing materials

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Check all parts and hardware for damage. If the product is damaged, it should not be used.

We recommend LFD bulbs. LFDs are better for energy consumption and can prolong the life of the fixture.

Installation and electrical connections must follow local and National Electric Code standards.

Ensure the main power supply is OFF before starting work to prevent electrical shock.

Allow the fixture to cool before changing the bulb. Fixture may get hot when in use.

Provided hardware:



x1

x2

x2

Wire Connector хЗ

Long Screw

Short Green Screw x1 (Preassembled)

Screw Cap (Preassembled)

What you need:

Phillips Head Screwdriver

Slotted Head Screwdriver

3 One (1) E26 (medium-base) Light Bulb (MAX. 100W) Bulb not included.

You may also need:

- + Ladder
- + Electrical Tape
- + Wire Strippers or Cutters
- + Power Drill




CARING FOR YOUR ITEM

Indoor use only.

Clean using a non-abrasive cloth and a mild cleaner.


Never use harsh chemicals, as they could damage the finish or integrity of the item.

Missing parts or hardware? Need assistance? Contact us before returning your item. We're here to help! 609.256.9000 · cs@modway.com

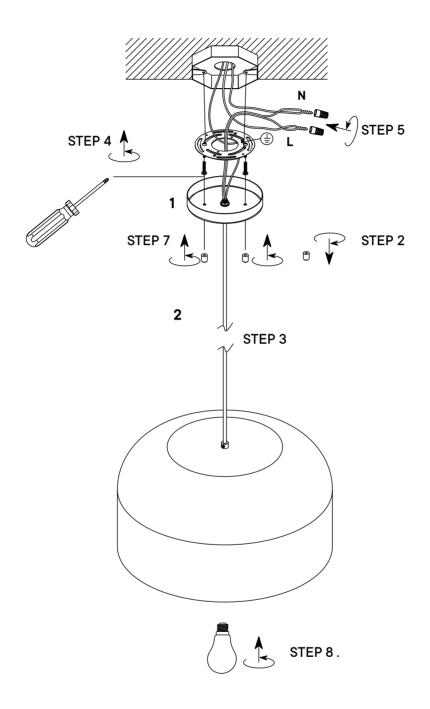


For safety, please consult a local electrician or code professional before installing your new fixture.

Before beginning **TURN OFF POWER** to the light from the fuse or circuit breaker.

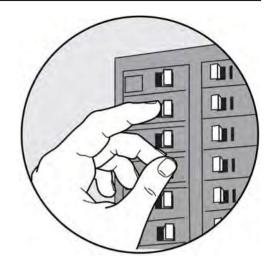



Step 2

Remove the Screw Cap (E) to dismantle Mounting Plate (A) from the Ceiling Canopy (1).

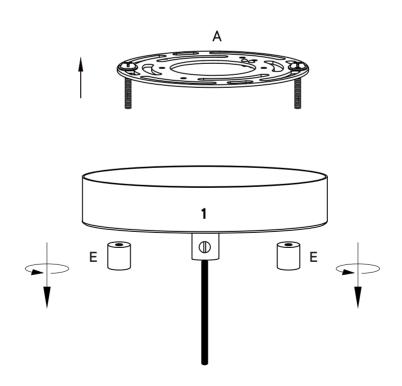

Determine your desired total drop of the Lamp Cord (2). Total drop is the distance from the ceiling to where you would like the bottom of the pendant to hang. Once decided, remove the screw on the Lock Sleeve (F) by using slotted head screwdriver, to adjust the height of hanging, secure the Lock Sleeve (F) at the Ceiling Canopy (1) by using slotted head screwdriver.

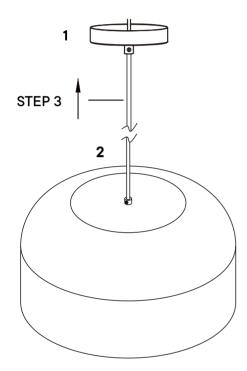

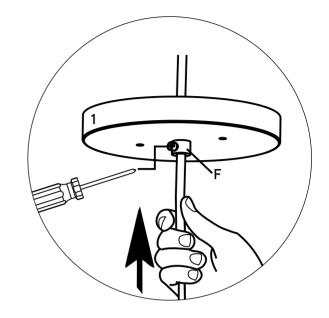


Step 4



Attach the Mounting Plate (A) to the outlet box. Insert Long Screws (B) into each hole on mounting plate and align with holes in electrical box. Tighten all screws.

Pull out all three wires from the outlet box.

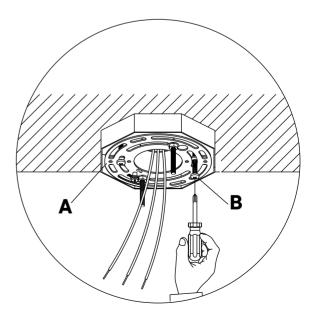



Connect wires with matching polarity.

Attach the wires from the outlet box to the wires from the light fixtures.


The black fixture wire connector to the black supply wire (Live Wire) (L) and the white fixtures wire to the white supply wire (Neutral Wire) (N).




Secure each connection using a Wire Connector (C).

If there is no supply ground wire, attach the cooper fixture wire to the Short Green Screw (D) at the Mounting Plate (A) to ground.

Make the appropriate electrical connection according to your local state, and/or country code requirements.

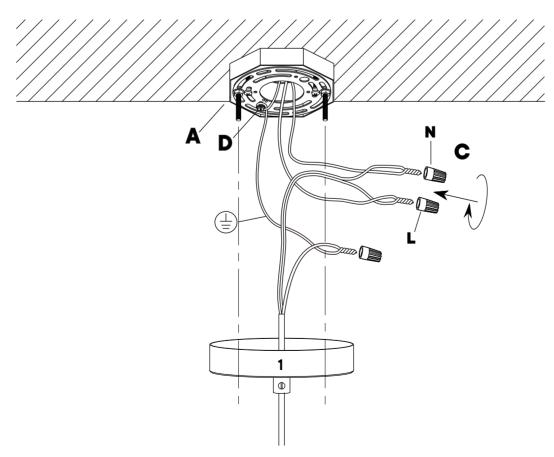


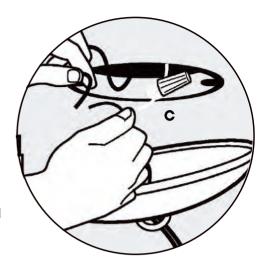

*modway

Step 6


Continue to support fixture. Make sure all connected wires are carefully placed inside of box and canopy.

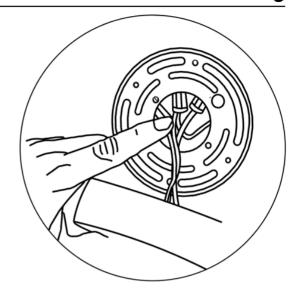


Step 7




Attach the Ceiling Canopy (1) to the Mounting Plat(A). Place the exposed ends of the two 1-Inch screws through the holes in the canopy and tightly attach the two Screw Caps (E).

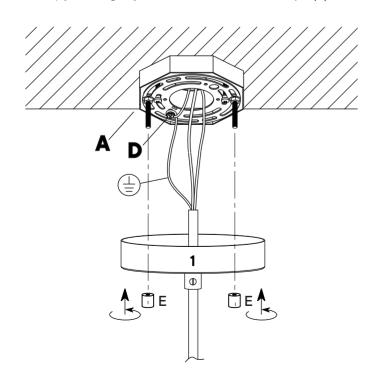

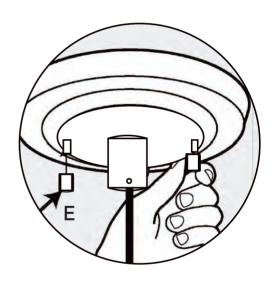

Install the light bulb according to the wattage label (E26, MAX. 100W), Bulb not included.

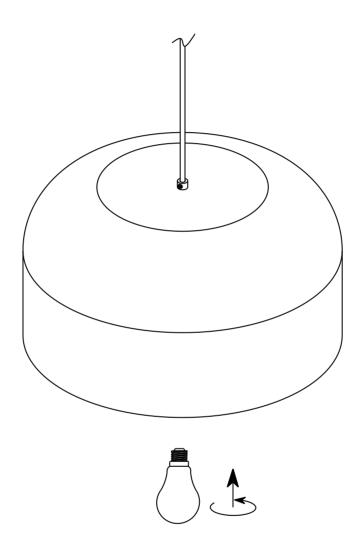

ATTENTION: To avoid the risk of fire, do not exceed the recommended wattage indicated on the wattage label.

Great job!

Your new light fixture is ready for use.



CARING FOR YOUR ITEM

Indoor use only.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

CONNECT WITH US!







Tag us @modway_furniture and #modway for a chance to be featured.

