


Thank you for purchasing the MODWAY CHAIR.

Before you start, here are some helpful advice:

- We suggest you spend a short time reading through this leaflet and then follow the simple step-by-step
 instructions.
- 2. Owing to the size and weight of the chair, we recommend that it is assembled by two adults, on a carpeted or padded area, in the room that it is intended for. Approximate assembly time: 30 minutes.
- 3. Please do not use any tools other than those provided or recommended in these instructions.
- 4. Please do not throw away any of the packaging or the instruction until you have checked all the components and hardware and the furniture is fully assembled. Please ensure that the packaging is disposed of in a safe and environmentally friendly way.
- 5. Assemble all components loosely until advised to tighten. Depending on use, it may be necessary to tighten the components from time to time, so please save the tools that have been provided.
- 6. Please keep all pieces out of reach of children.

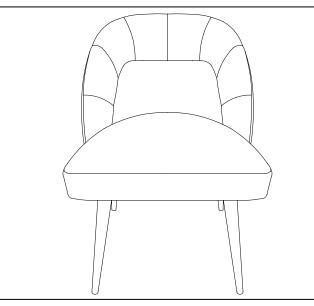

Hardware:


A. (1) Bolt M8x30mm x12

B. Spring Washer x12

C. Flat Washer x12

D. Allen Wrench x1

Components:

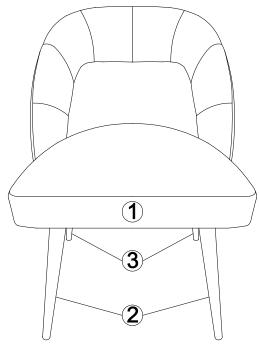


1. Chair Body x1 2. Front Leg x2 2. Back Leg

x2




STEP 1:

- 1. Please put Chair Body (1) upside down on a carpeted or padded surface.
- 2. Attach 2 pieces of Front Legs (2) to the front of Chair Body (1) by using 6 pieces of Bolts (A) with 6 pieces of Spring Washers (B) and 6 pieces of Flat Washers (C) as shown.
- 3. Attach 2 pieces of Back Legs (3) to the back of Chair Body (1) by using 6 pieces of Bolts (A) with 6 pieces of Spring Washers (B) and 6 pieces of Flat Washers (C) as shown.
- 4. Use Allen Wrench (D) to tighten all Bolts (A) clockwise until secure.

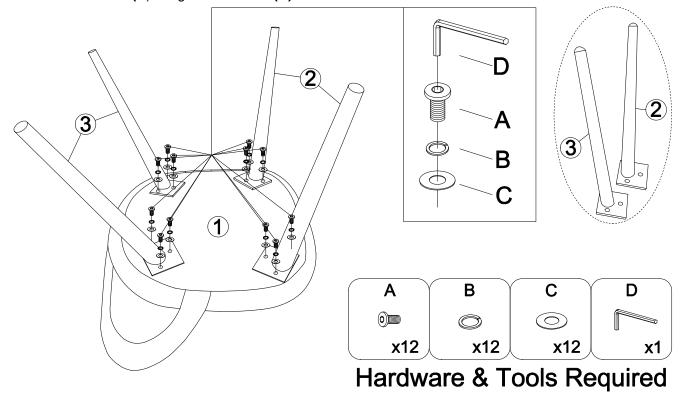

STEP 2:

Carefully turn over the assembled chair.

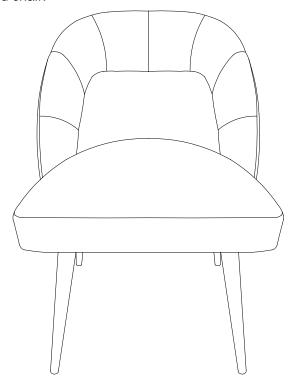

Assembly is complete. Your chair is ready to enjoy now!