
ASSEMBLY INSTRUCTIONS


EEI-6219

V1.30.11.22

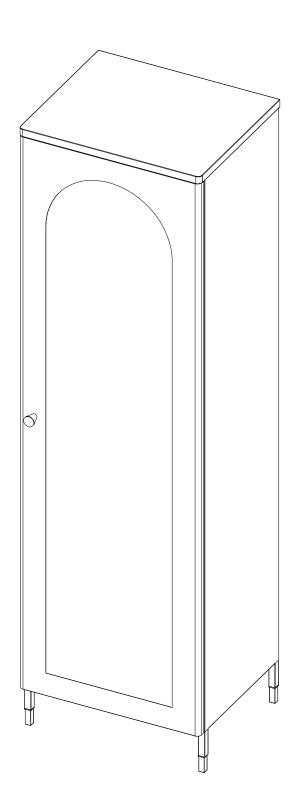



Let's get started!





Read through all of the instructions before starting



Approx. 30 minutes assembly time



2 people recommended for assembly



Care instructions are listed in the last step of this manual



Make sure you have all parts and components before discarding any packing materials **Only use hand tools to assemble this item.** Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.


Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

Α	Left Panel	x1
В	Right Panel	x1
С	Back Panel	х1
E	Top Panel	х1
F	Bottom Panel	х1
G	Shelf	х3
н	Front Leg	x1
ı	Back Leg	x1
J	Door Panel	х1


Provided hardware:

0		Door Hinge Set	x2
Р		Plastic Cap	x12
Q		Pan Head Screw M4 x 25mm	x1
s		Foot Protectors	x4
т	\bigcirc	Door Handle	x1
U		Shelf Holder	x12
٧		Shelf Stopper	x12
w		Adjustable Foot Pads	x4
х		Magnet Bar Set	x2

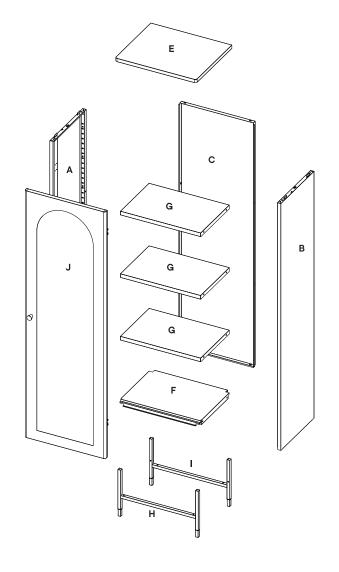

What you need:





Flat

Phillips Head Screwdriver Not Included


Flat Head Screwdriver Not Included




Missing parts or hardware? Need assistance? Contact us before returning your item. We're here to help! 609.256.9000 • cs@modway.com

COMPONENTS A Left Panel x1 B Right Panel x1 E Top Panel x1

Notes: Make sure the arrow direction for the Top Panel and Left/Right Panel is the same, then can fasten. If wrongly assembled, it won't be easy to disassembly.

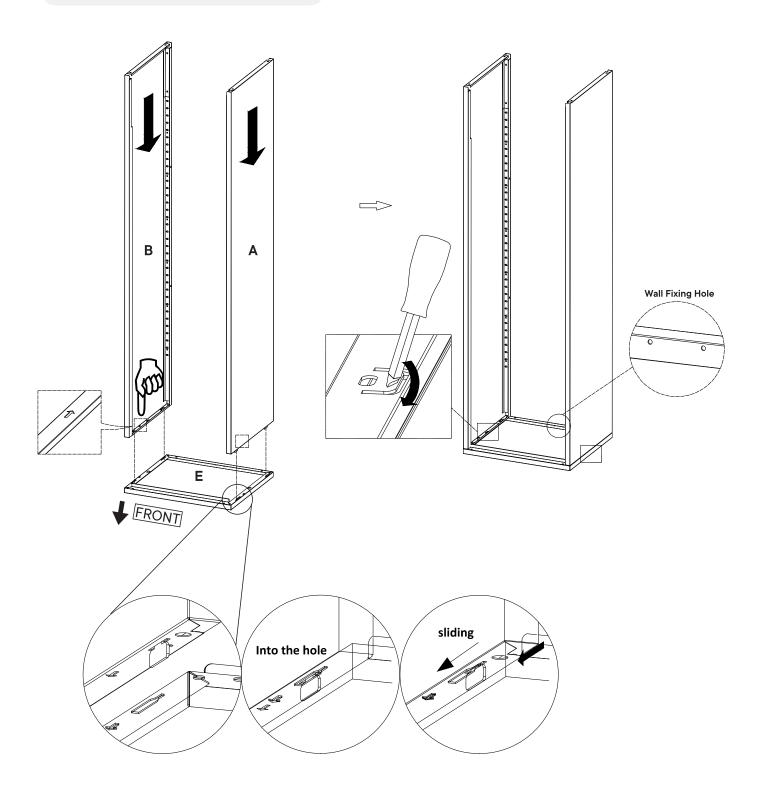


A Left Panel x1 B Right Panel x1 H Front Leg x1 Back Leg x1 HARDWARE S Foot Protectors x4 W Adjustable Foot Pads x4

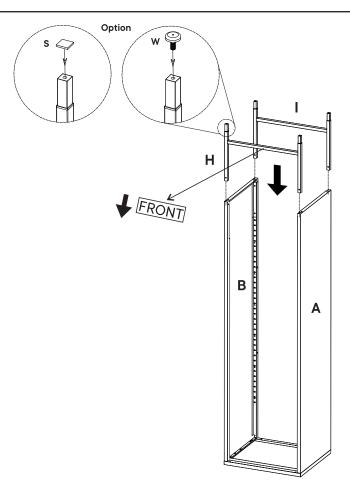


Step 3

A	Left Panel	x1
В	Right Panel	x1
ARD	WARE	

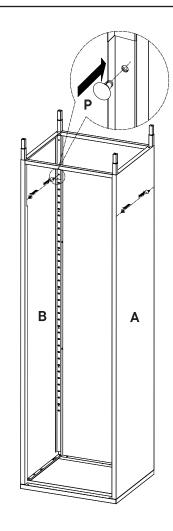


СОМ	PONENTS	
A	Left Panel	x1
B	Right Panel	x1
0	Back Panel	x1
ARD	WARE	
P	Plastic Cap	x8

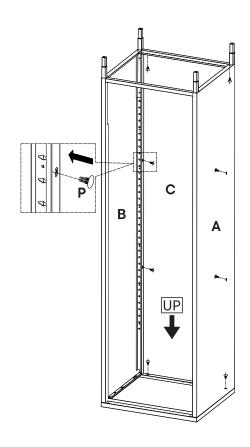


Step 5


COMPONENTS		
ОМ	PONENIS	
A	Left Panel	x1
B	Right Panel	x1
0	Back Panel	x1
ß	Bottom Panel	x1

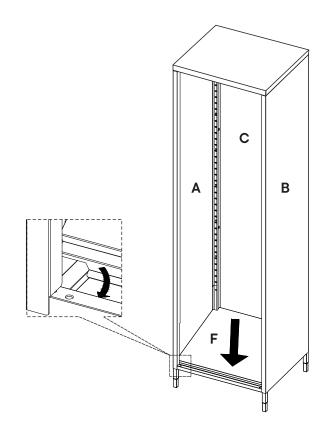


PONENTS	
Left Panel	x1
Right Panel	x1
Back Panel	x1
WARE	
Shelf Holder	x12
	Right Panel Back Panel WARE

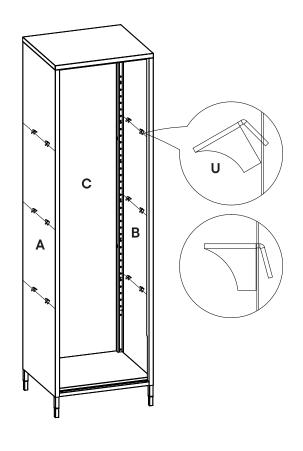


Step 7

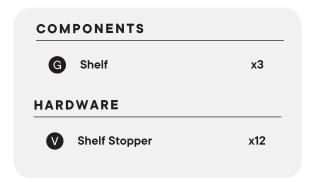

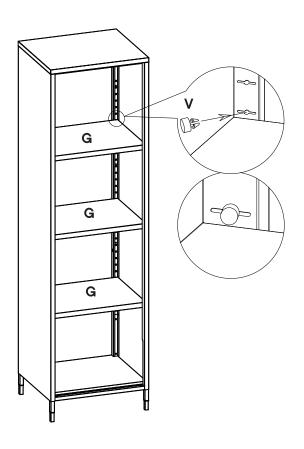


COMPONENTS Door Panel x1 HARDWARE Door Hinge Set x2

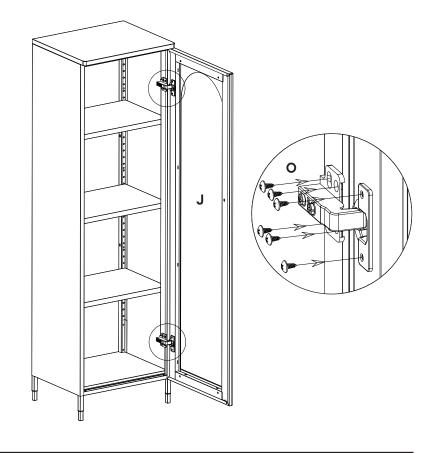

Step 9

0	Door Panel	x1
HARD	WARE	
0	Pan Head Screw M4 x 25mm	x1
	5	x1
0	Door Handle	ΧI
O	Magnet Bar Set	x2

Notes: If there is a gap in the door, it may be caused by an uneven floor, which can be adjusted by adjustable foot pads (W).



Great job!

Your cabinet is complete.



CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.


CONNECT WITH US! (6) (7)







Tag us @modway_furniture and #modway for a chance to be featured.

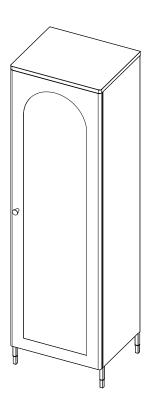


Guide to hinges adjustment facilities


Warning: To ensure all hinges continue to work smoothly, pls check them regularly and adjust them necessary.

Question 1

How to adjust the two door are not aligned and lower with screw adjustment?

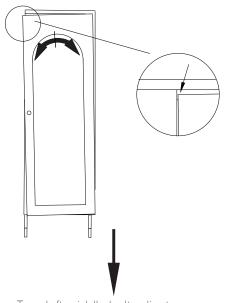


Turn left middle bolt adjuster properly until door is balanced

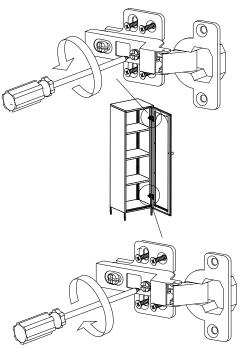


Turn right middle bolt adjuster properly until door is balanced

Question 2

How to adjust the two door are not aligned and higher with screw adjustment?

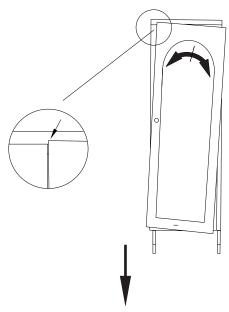

Turn right middle bolt adjuster properly until door is balanced

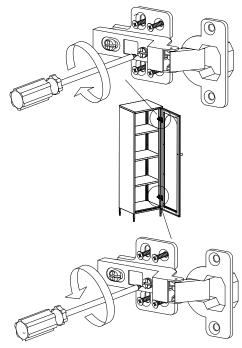

Turn left middle bolt adjuster properly until door is balanced


Guide to hinges adjustment facilities


Warning: To ensure all hinges continue to work smoothly, pls check them regularly and adjust them necessary.

Question 3

How to adjust the door gap at side with screw adjustment?

Turn left the adjuster properly until door is balanced

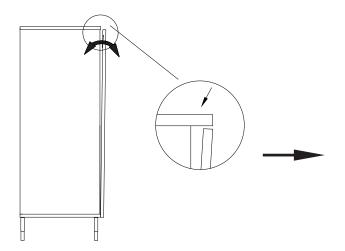

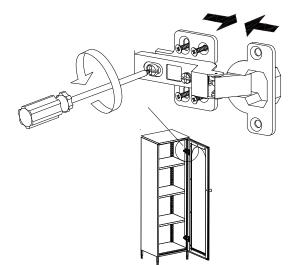



TIPPING RESTRAINTS KIT (Z) INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for you wall type.



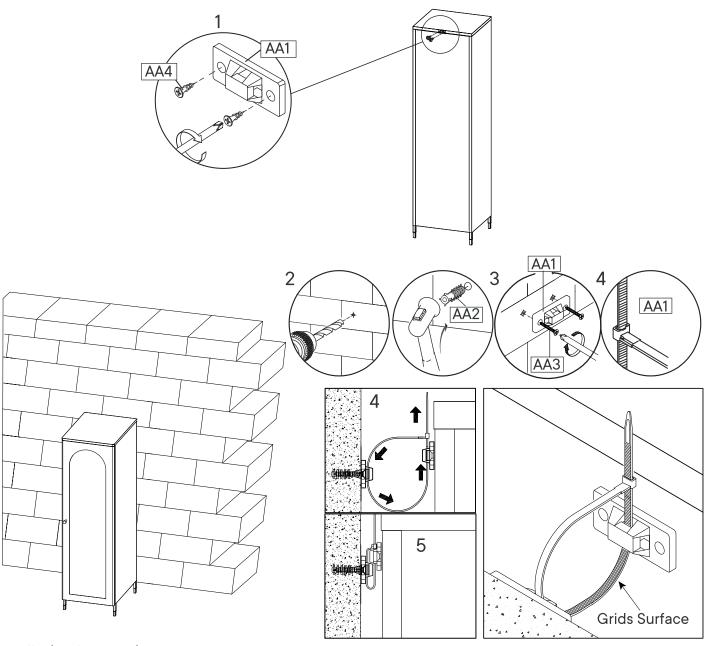

Installation Instructions:

- 1. Attach bracket (AA1) securely to the back top of the furniture using screw (AA4) provided.
- 2. Please make a hole for wall plugs position on the wall and minimum 15 mm below bracket secured to the back of unit attach the wall plugs (AA2).
- 3. Lace the end of the restrains strap through the larger hole in each bracket. Ensure the restrains strap with grids surface facing the inner loops. Bring both ends together and slide the at end through the locking end and draw it through until all slack is removed.
- 4. Make sure that the strap is securely laced & locked.