
ASSEMBLY INSTRUCTIONS

EEI-6227

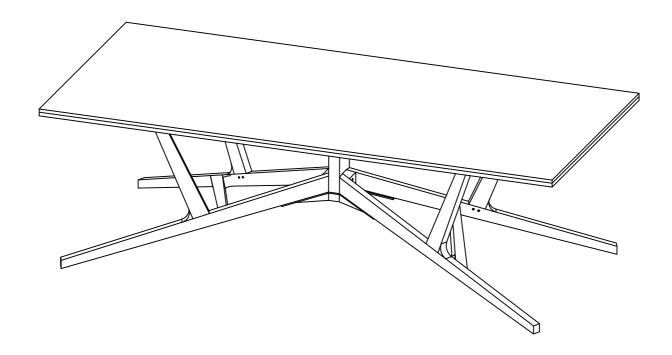

Questions? Contact us!

609.256.9000 • cs@modway.com www.modway.com



Let's get started!





Read through all of the instructions befor starting



Approx. 60 minutes assembly time



2 people recommended for assembly



Care instructions are listed in the last step of this manual



Make sure you have all parts and components before discarding any packing materials Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screw completely until all hardware is lined up and inserted into the holes.


Do not over-tighten screw and bolts to avoid stripping the hardware or cracking the item

Assemble your item on a flat carpeted area, with plenty of space to work. this will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture component:

| 1 Top | x1 |
|----------------------|------------|
| 2 Leg Bottom Support | x 1 |
| 3 Leg Support | x4 |
| 4 Leg | x2 |
| 5 Metal Plate | x1 |
| | |

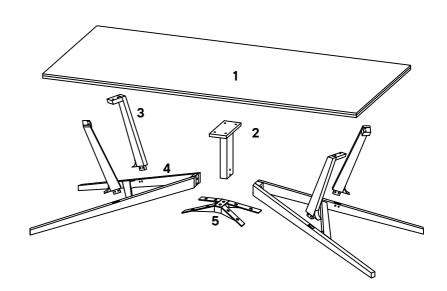


Provided hardware:

| A | | Socket Head Allen Bolt M8 X 75 MM | x2 |
|---|---|-----------------------------------|------------|
| В | | Socket Head Allen Bolt M8 X 60 MM | x2 |
| С | | Round Head Allen Bolt M8 X 40 MM | x12 |
| D | | Round Head Allen Bolt M6 X 30 MM | х8 |
| E | | Round Head Allen Bolt M6 X 25 MM | x10 |
| F | | Washer M8 X 20 MM | x16 |
| G | | Washer M6 X 20 MM | x18 |
| Н | | Allen Key 6 MM | x 1 |
| ı | | Allen Key 5 MM | x 1 |
| | 1 | Allen Key 4 MM | x1 |



Step 1

COMPONENTS 1 Top x1 2 Leg Bottom Support x1

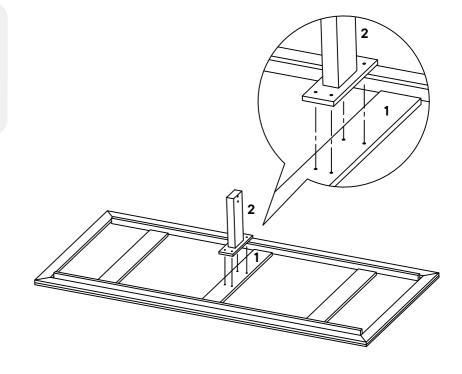


Step 2

| | Round Head Allen Bolt M8 X 40 MM | x4 |
|-----|----------------------------------|-----------|
| Ð | Washer M8 X 20 MM | x4 |
| 0 | Allen Key 5 MM | x1 |
| CON | MPONENTS | |
| 0 | Тор | x1 |
| 0 | Leg Bottom Support | x1 |
| | | |
| | | |
| | | 4 |
| | | |


Step 3

| 0 | Round Head Allen Bolt M8 X 40 MM | χ |
|----------|----------------------------------|----|
| 3 | Washer M8 X 20 MM | х8 |
| • | Allen Key 5 MM | x1 |
| U | · | ^: |
| | MPONENTS | |
| | · | x1 |

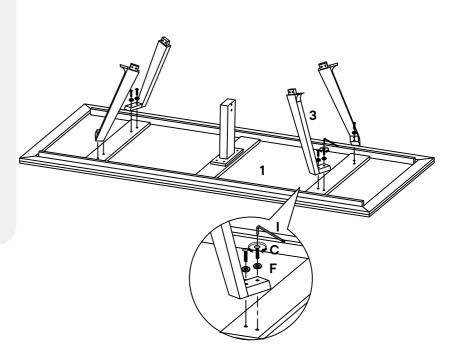


Step 4

| 0 | Round Head Allen Bolt M6 X 30 MM | x 8 |
|----------|----------------------------------|------------|
| (| Washer M6 X 20 MM | x 8 |
| • | Allow May A MANA | x1 |
| . | Allen Key 4 MM | XI |
| | MPONENTS Top | x1 |

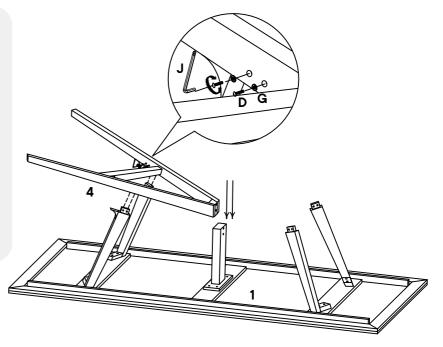


Step 5

| A Socket Head Allen Bolt M | 18 X 75 MM x2 |
|----------------------------|---------------|
| B Socket Head Allen Bolt M | 18 X 60 MM x2 |
| Washer M8 X 20 MM | x4 |
| Allen Key 6 MM | x1 |
| COMPONENTS | |
| 1 Top | x1 |
| Leg | x2 |

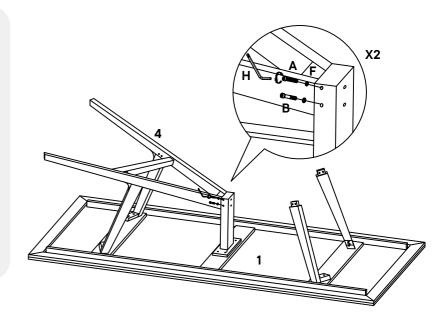

Step 6

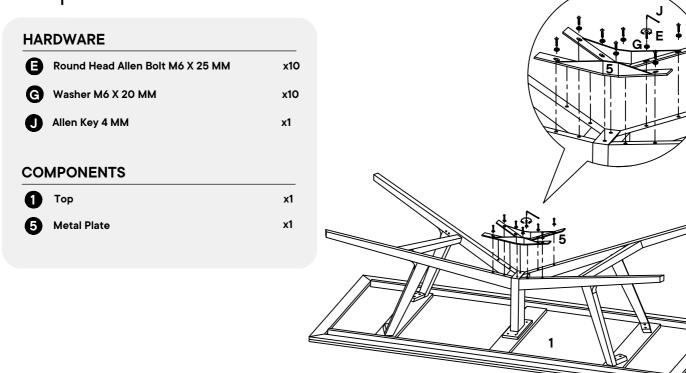

Note:- Full Tighten All Bolt.

Great job!

Dining Table assembly is complete.




CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

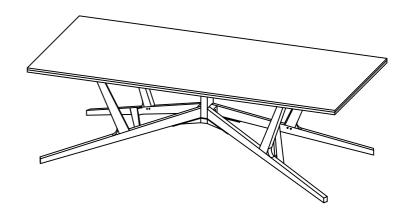

CONNECT WITH US!







Tag us @modway_furniture and #modway for a chance to be featured.