


ASSEMBLY INSTRUCTIONS

EEI-6402

V1.25.01.23

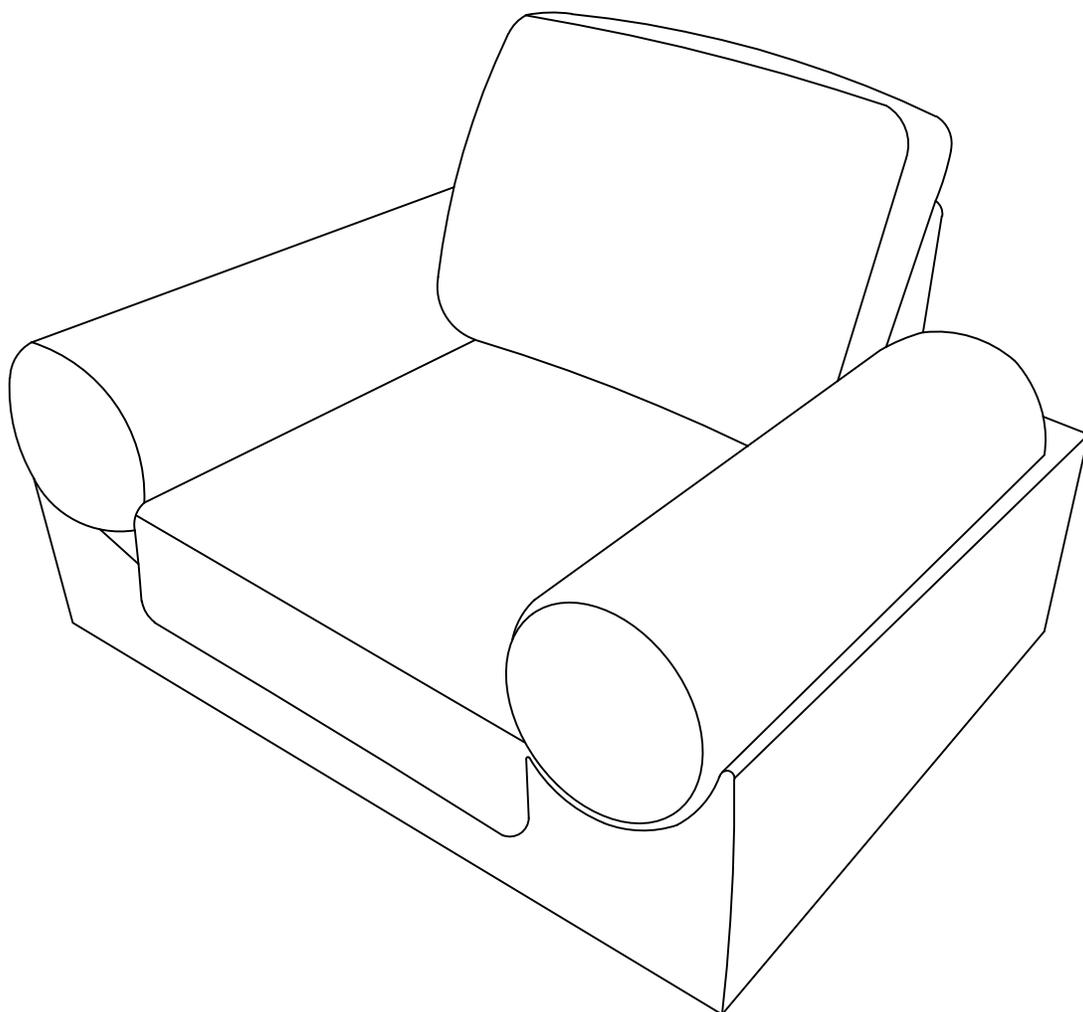

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

***modway**

Let's get started!

*modway



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 30 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.


Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.


Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

1	Sofa Base	x1
2	Backrest	x1
3	Back Cushion	x1

Provided hardware:

A		Bolt M6x50mm	x4
B		Flat Washer M6	x4
C		Allen Key	x1

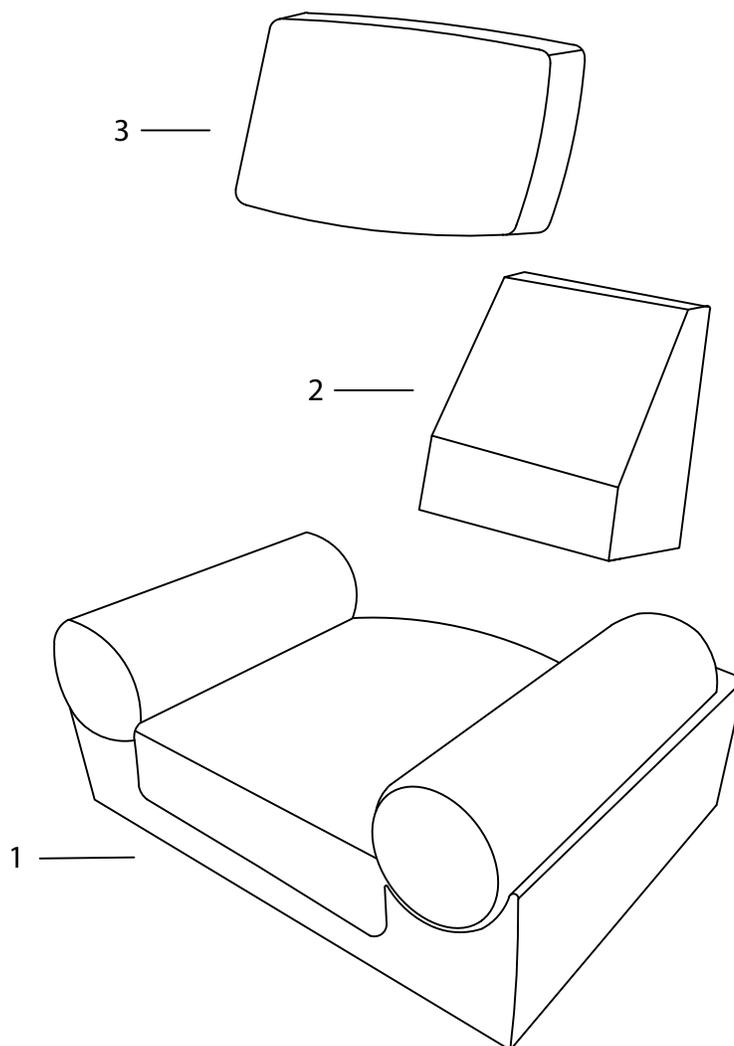

Wait!

Missing parts or hardware? Need assistance?

Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com


Step 1

HARDWARE

- A** Bolt M6x50mm x4
- B** Flat Washers M6 x4
- C** Allen Key x1

COMPONENTS


- 1** Sofa Base x1
- 2** Backrest x1

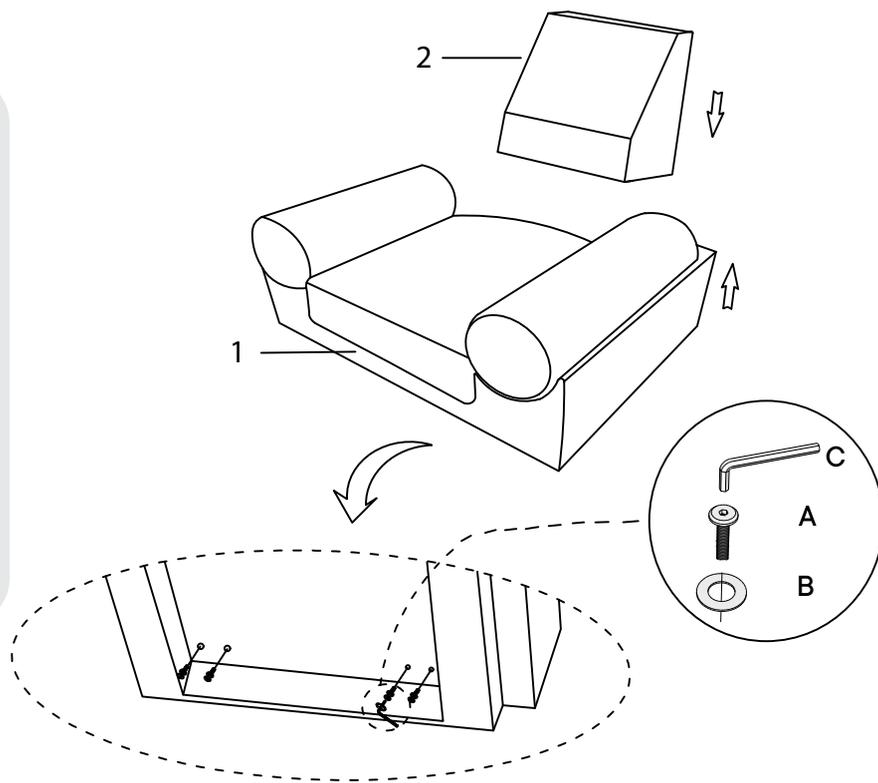

Step 2

COMPONENTS

- 3** Back Cushion x1

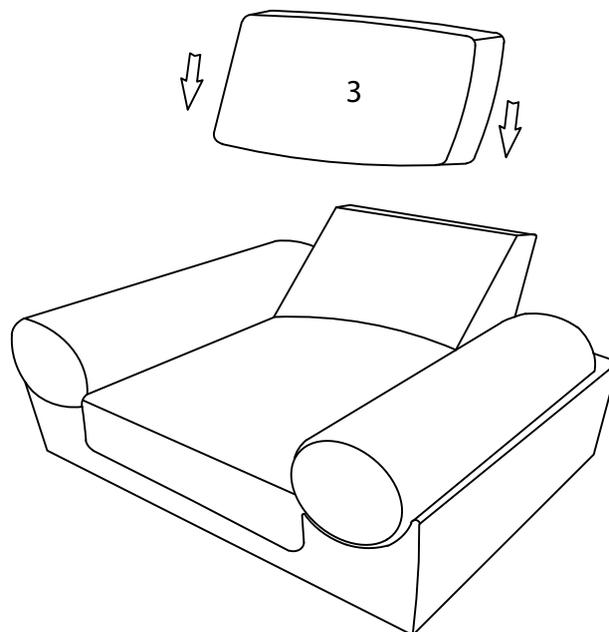

Great job!

Your sofa is complete and ready to enjoy.


♥ CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Spot clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

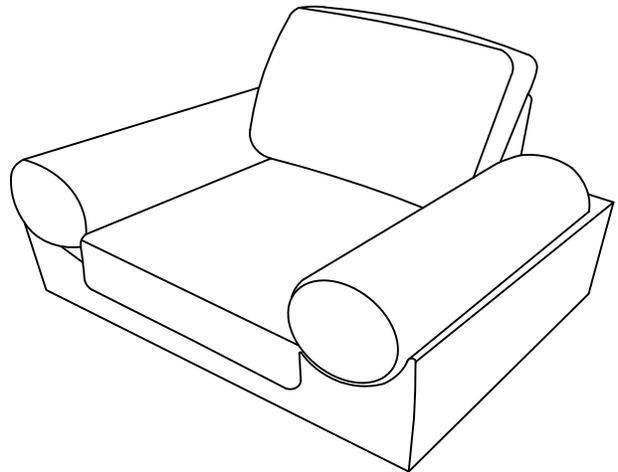

CONNECT WITH US!



Tag us [@modway_furniture](#) and [#modway](#) for a chance to be featured.