
ASSEMBLY INSTRUCTIONS

EEI-6140

V1 22 12 22

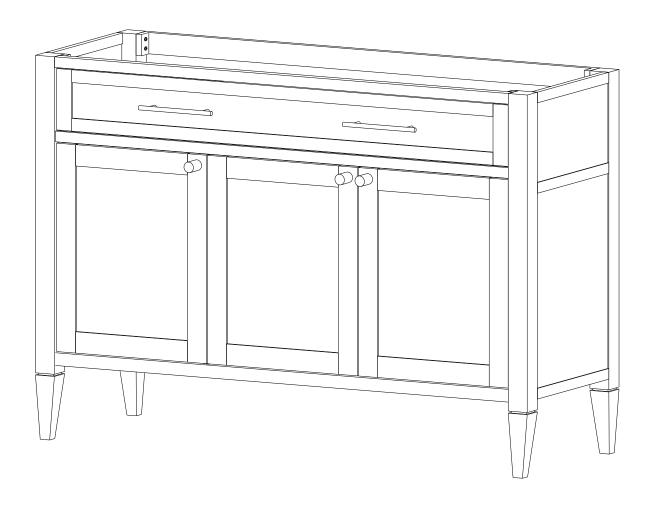



Let's get started!

*modway



Read through all of the instructions before starting



Approx. 60 minutes assembly time



2 people recommended for assembly



Care instructions are listed in the last step of this manual



Make sure you have all parts and components before discarding any packing materials Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

For vanity and plumbing installation, we suggest hiring a professional contractor and plumber. $\,$

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

1	Left Panel	x 1	11	Adjustable Small Sh	elf x1
2	Right Panel	х1	12	Plumbing Cap	x2
3	Front Panel	х1			
4	Bottom Panel	х1			
5	Back Panel	х1			
6	Left Door	x 1			
7	Right Door	х1			
8	Middle Door	х1			An
9	Middle Panel	х1			
10	Adjustable Shelf	x1			

Provided hardware:

Α		Bolt M8 x 30mm	x11	1 COOLING	Screw M4 x 30mm	х3
В	0	Flat Washer M8	x11		Screw M4 x 15mm	x4
С		Allen Key M8	x1	K CONTROL	Hinge 8°	x2
D		Screw M4 x16mm	x36		Screw M6 x 15mm	х3
E	5	Shelf Pin	х8	м 🔘	Flat Washer M6	х3
F	Car less	Hinge 15°	x4	N =	Allen Key M6	x1
G	4	Handle	x2	What y	ou need:	
н	(0)	Knob	х3	Phillips Phillips	■ Phillips Head Scr	ewdriver


Wait!

Missing parts or hardware? Need assistance? Contact us before returning your item. We're here to help! 609.256.9000 • cs@modway.com

You may also need:


- + Power Drill
- + Level
- + Silicone Adhesive or Caulk
- + Drywall Anchors and Screws
- + Other Wall-Mounting Hardware


HAR	OWARE	
A	Bolt M8 x 30mm	х 3
B	Flat Washer M8	х 3
©	Allen Key	x 1
сом	PONENTS	
2	Right Panel	x 1
4	Bottom Panel	x 1

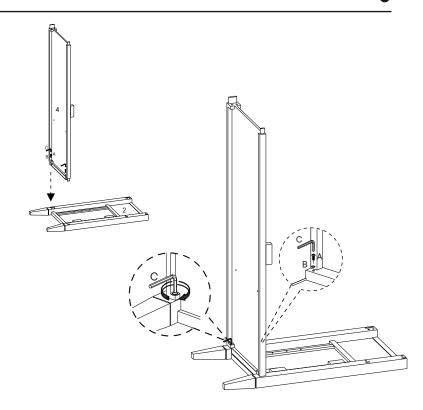


Step 2

HARDWARE A Bolt M8 x 30mm x2 B Flat Washer M8 x2 C Allen Key x1 COMPONENTS 5 Back Panel x1

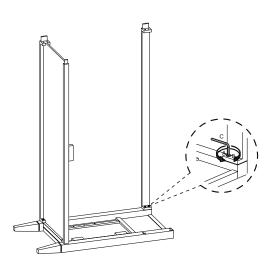

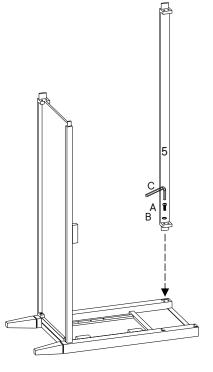


HARDWARE A Bolt M8 x 30mm x2 B Flat Washer M8 x2 C Allen Key x1 COMPONENTS 3 Front Panel x1

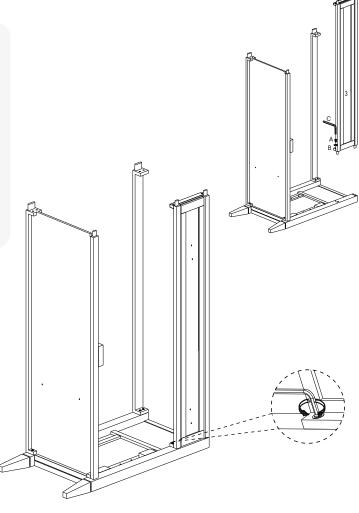


Step 4


A	Bolt M8 x 30mm	х7
B	Flat Washer M8	x7
0	Allen Key	x1
сом	PONENTS	

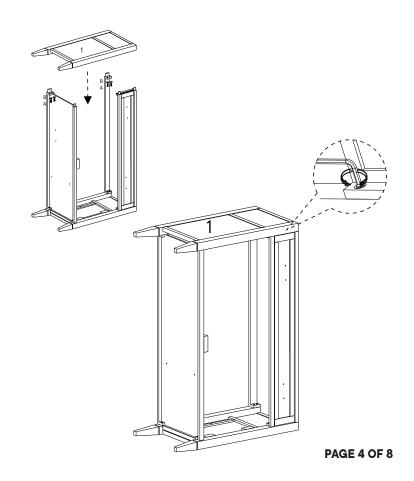

HARDWARE Bolt M6 x 30mm х3 Whaser M8 x 16mm х3 Allen Key **x1 COMPONENTS** Middle Panel **x1** 9 9


HARD	WARE	
D	Screw M4 x 16mm	x36
(Hinge 15°	x4
G	Handle	x2
(1)	Knob	х3
0	Screw M4 x 30mm	х3
•	Screw M4 x 15mm	x4
K	Hinge 8°	x2
сомі	PONENTS	
6	Left Door	x1
7	Right Door	x1
8	Middle Door	x1
8	Middle Door	



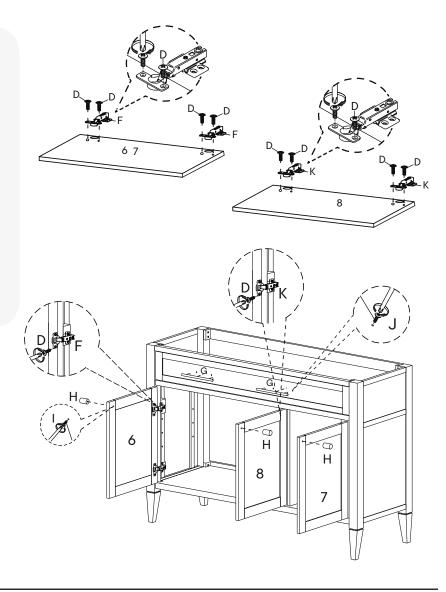


Step 7

3	Shelf Pin	х8		
COMPONENTS				
10	Adjustable Shelf	х1		
1	Adjustable Small Shelf	x1		
12	Plumbing Cap	x2		

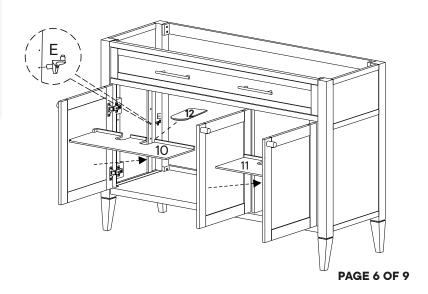

Attachment of Furniture: This furniture may represent a danger for your security ifit's attachment on the wall has been done in an incorrect way. This attachment must be done by a person with great expertise who will make sure adequacy between the device of fixing and the wall. Please source the right fitting according to the wall type. For safety, it is imperative to fix your furniture to the wall.

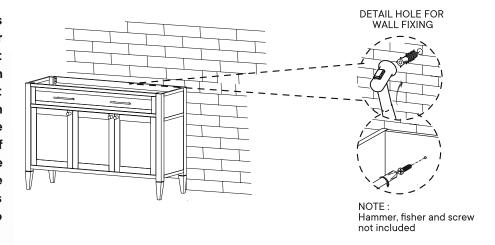


Step 9

SOLD SEPARATELY



A quick note...

Your sink basin comes complete with a silver overflow ring. If you'd like to remove this overflow ring, you can do so by hand.

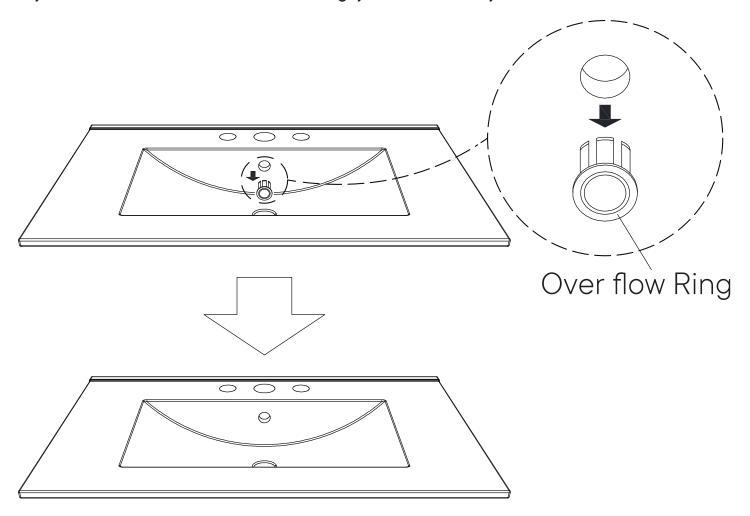

Great job!

Vanity Cabinet assembly is complete.



CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.



CONNECT WITH US! (6)





Tag us @modway_furniture and #modway for a chance to be featured.