

STEP 1:


Place the 2pcs **Side Rail with Slat (3)** into 1pc **Support Leg (4)** as shown.

Insert **2pcs Bolt (A)** into the pre-drilled Holes on the **Support Leg (4)** through the pre-drilled holes on the Side Rail.

Secure them by using **2pcs Nut (B)** from the bottom of the **Support Leg (4)**.

Tighten the **Bolt (A)** and **Nuts (B)** with **Open Wrench (C)** and **Allen Wrench (D)** as shown.

Repeat the same steps for the remaining **Support Leg (4)**.

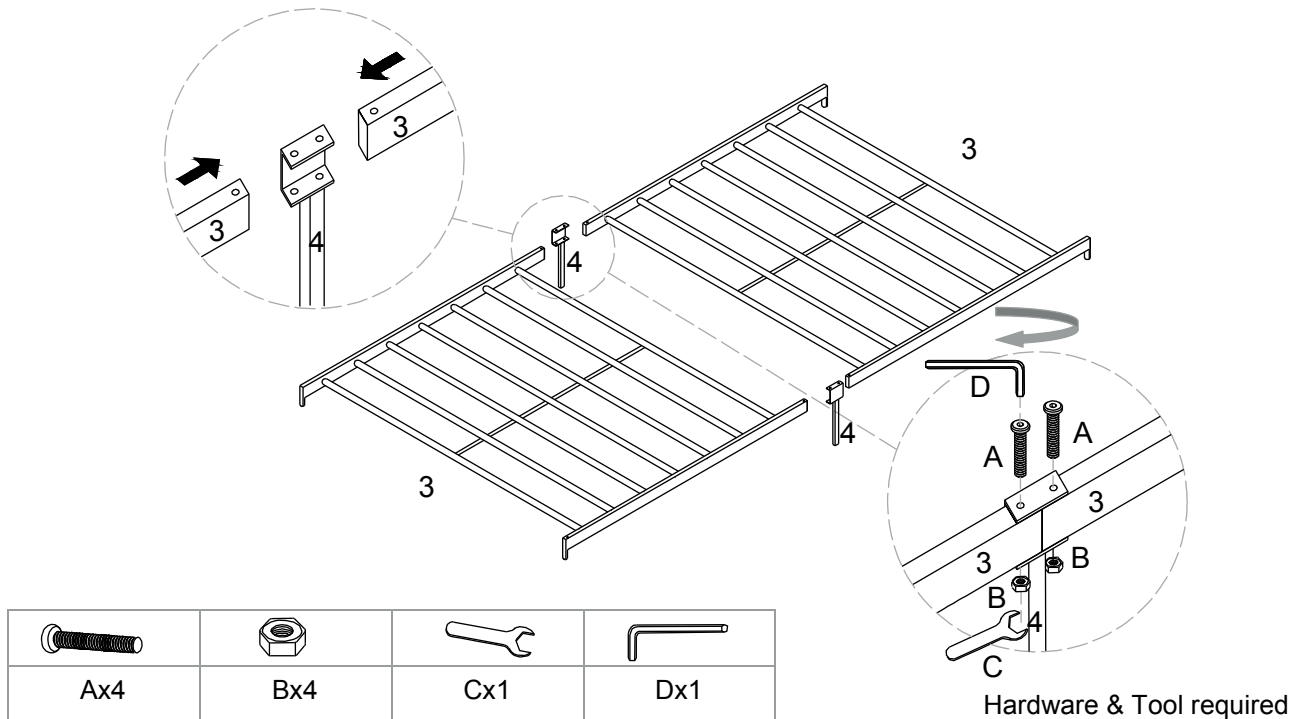


STEP 2:

Place the **Headboard (1)** close to the assembled **Side Rail with Slat (3)** and **Support Legs (4)**.

Insert the hooks on the **Side Rail with Slats (3)** into the hook holder on the **Headboard (1)** as shown.

Repeat the same steps for the **Footboard (2)**.

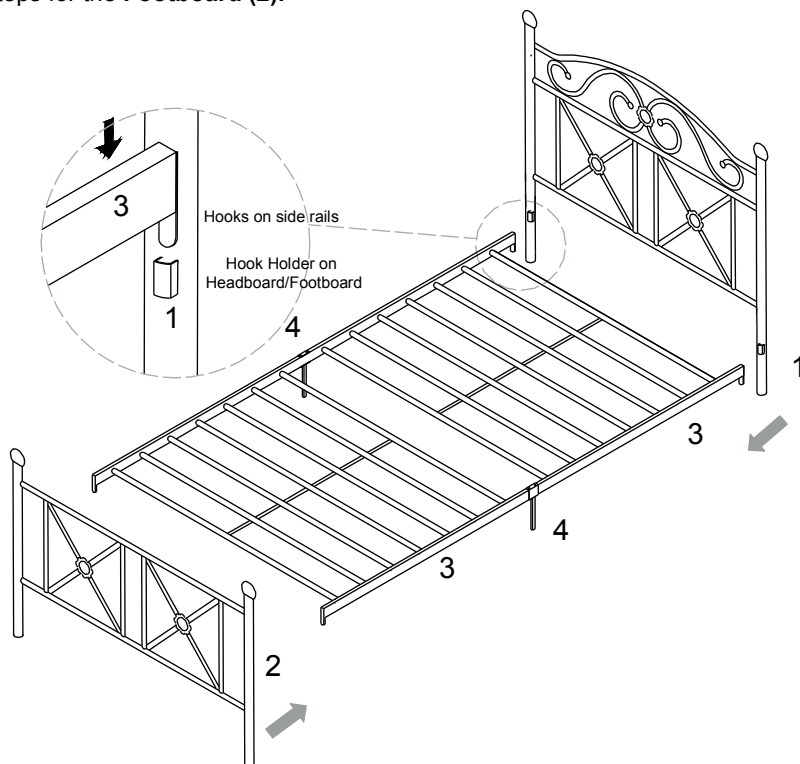

Assembly is completed. The bed is ready to enjoy now!

STEP 1:


Place the 2pcs **Side Rail with Slat (3)** into 1pc **Support Leg (4)** as shown.

Insert **2pcs Bolt (A)** into the pre-drilled Holes on the **Support Leg (4)** through the pre-drilled holes on the Side Rail.

Secure them by using **2pcs Nut (B)** from the bottom of the **Support Leg (4)**.

Fixation the **Bolt (A)** and **Nuts (B)** with **Open Wrench (C)** and **Allen Wrench (D)** as shown.

Repeat the same steps for the remaining **Support Leg (4)**.

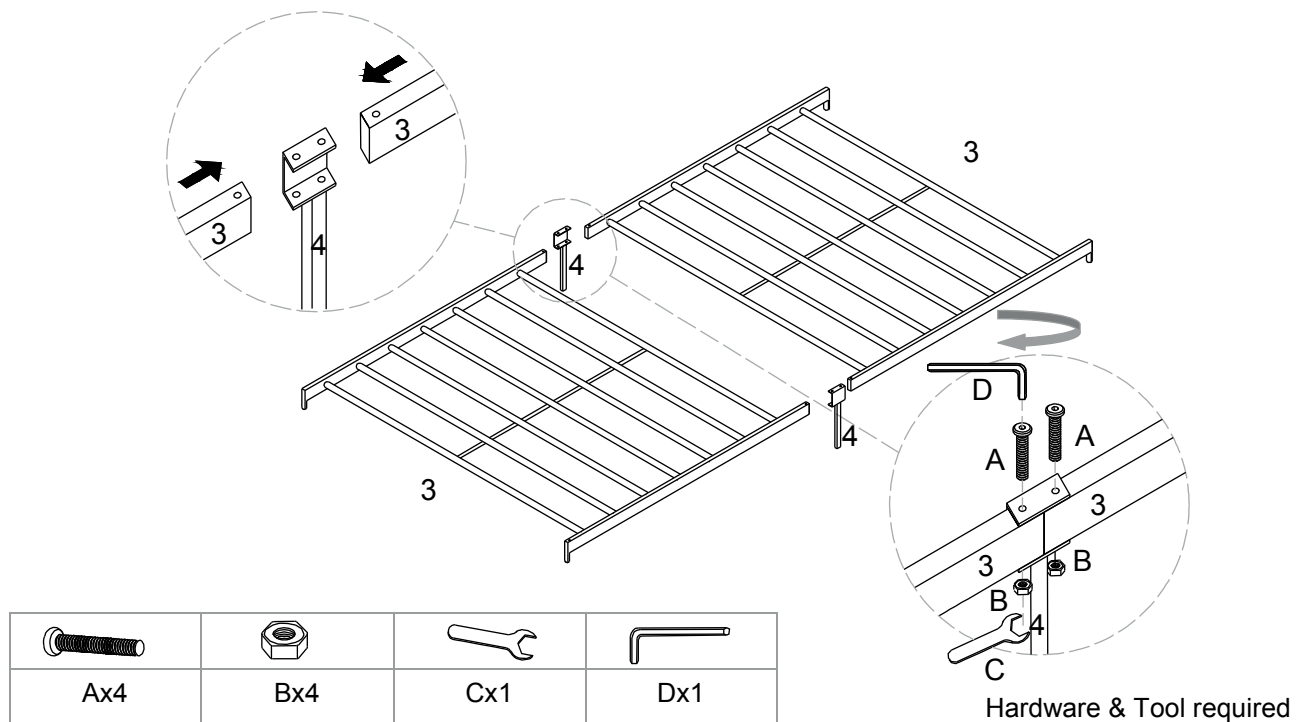

STEP 2:


Place the **Headboard (1)** close to the assembled **Side Rail with Slat (3)** and **Support Legs (4)**.

Insert the hooks on the **Side Rail with Slats (3)** into the hook holder on the **Headboard (1)** as shown.

Repeat the same steps for the **Footboard (2)**.

STEP 3:

Tighten all Bolts with Allen Wrench (C), after all assembled

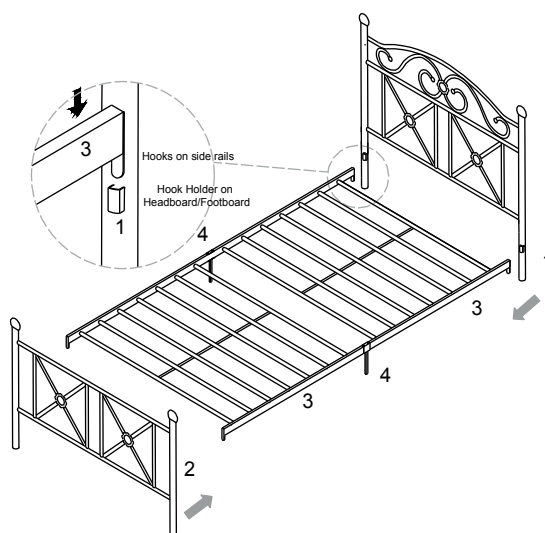

Assembly is completed. The bed is ready to enjoy now!