

ASSEMBLY INSTRUCTIONS

Read this instruction carefully. See furniture and hardware part lists, on the right, for guidance.
 Have all parts ready before assembly. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched.
 Follow the steps below to start assembling.

| FURNITURE PART LIST | | |
|---------------------|---------------|-------|
| ITEM | DESCRIPTION | QTY |
| A | HEADBOARD | 1 PC |
| B | SUPPORT BOARD | 2 PCS |


| HARDWARE PART LIST | | |
|--------------------|---------------------|-------|
| ITEM | DESCRIPTION | QTY |
| 1 | JCBB BOLT M8 x 50mm | 4 PCS |
| 2 | M8 FLAT WASHER | 4 PCS |
| 3 | M5 ALLEN KEY | 1 PC |

CAUTION :

1. Do not FULLY - TIGHTEN the nut or bolt until all nuts and bolts are assembled.
2. Do not OVER - TIGHTEN the nut or bolt to avoid causing damages to the thread.
3. Keep all hardware parts out of reach of children.


NOTE : THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.

STEP 1

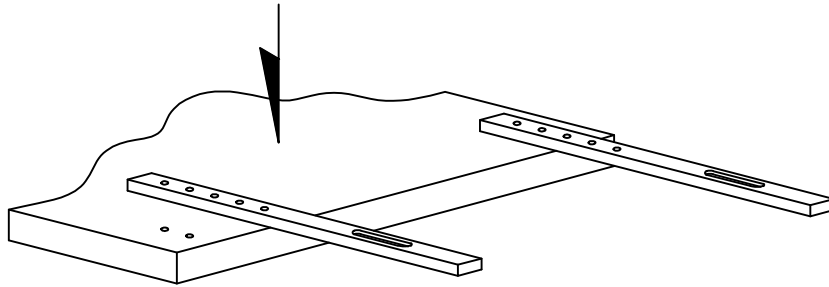


Align support board fixing holes over headboard fixing holes according to your desired height.

STEP 2

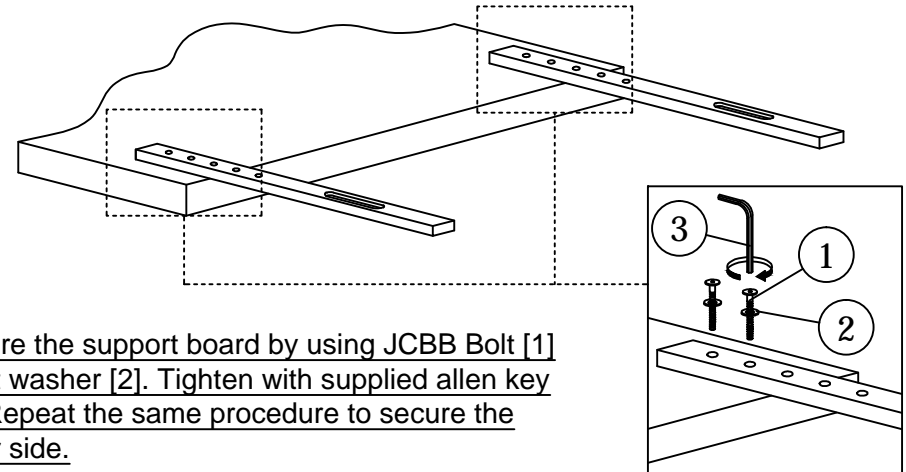

Secure the support board by using JCBB Bolt [1] & flat washer [2]. Tighten with supplied allen key [3]. Repeat the same procedure to secure the other side.

STEP 3

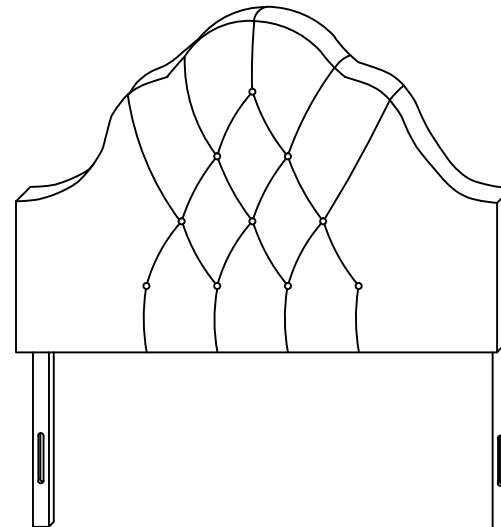

Your headboard assembly is complete.
Note: Hardware may loosen over time. Periodically check that all connections are tight.