## ASSEMBLY INSTRUCTIONS

Read this instruction carefully. See furniture and hardware part lists, on the right, for guidance.


Have all parts ready before assembly. Place all wooden furniture

MOD - 5171

parts on a clean and flat soft surface to prevent from being scratched. Follow the steps below to start assembling.


CAUTION : 1. Do not FULLY - TIGHTEN the nut or bolt until all nuts and bolts are assembled. 2. Do not OVER - TIGHTEN the nut or bolt to avoid causing damages to the thread. 3. Keep all hardware parts out of reach of children.

NOTE : THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.

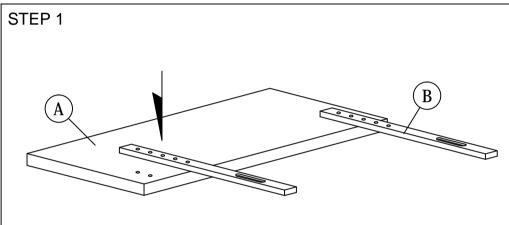

Align support board fixing holes over headboard fixing holes according to your desired height.

FURNITURE PART LIST HARDWARE PART LIST DESCRIPTION QTY ITEM DESCRIPTION QTY ITEM JCBB BOLT M8 x 40mm A Designed 4 PCS HEADBOARD 1 PC 1 Α 0 M8 FLAT WASHER 4 PCS 2 SUPPORT BOARD В 2 PCS 3 M5 ALLEN KEY 1 PC

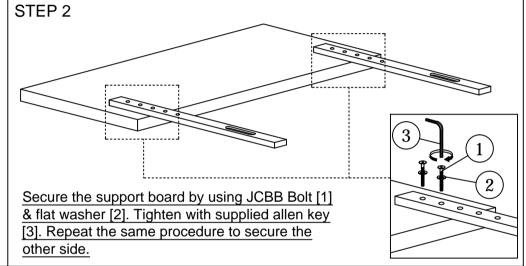

STEP 3

Your headboard assembly is complete. Note: Hardware may loosen over time. Periodically check that all connections are tight.