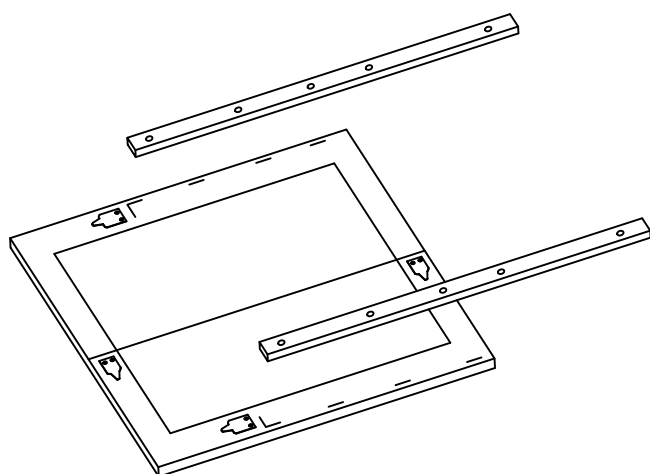


MOD-5243


Thank you for purchasing the **MODWAY MIRROR !**

Before you start, here is some helpful advice:

1. We suggest you spend a short time reading through this leaflet and then follow the simple step by step instructions.
2. Owing to the size and weight of the mirror, we recommend that it is assembled by two adults, on a carpeted or padded area, in the room that it is intended for. Approx assembly time: 30 minutes.
3. Please do not use any tools other than those provided or recommended in these instructions.
4. Please do not throw away any of the packaging or the instruction until you have checked all the components and hardware and the furniture is fully assembled. Please ensure that the packaging is disposed of in a safe environmentally friendly way.
5. Assemble all components loosely until advised to tighten. Depending on use, it may be necessary to tighten the components from time to time, so please save the tools that have been provided.
6. Please keep all fitting out of reach of children.



Hardware for Support Rail on MIRROR

A  M4 x 32MM WOOD SCREW **x6**

Hardware for Support Rail on Dresser

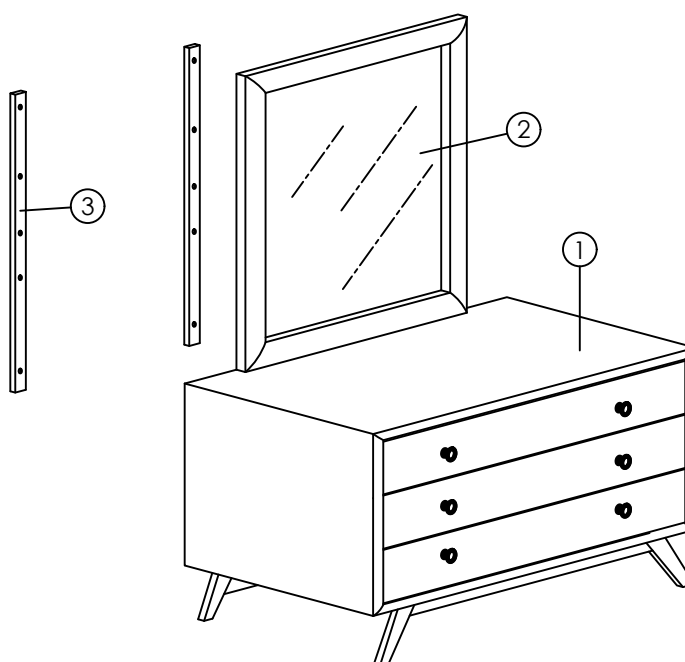
B  M4 x 32MM WOOD SCREW **x4**

Component :

1- DRESSER


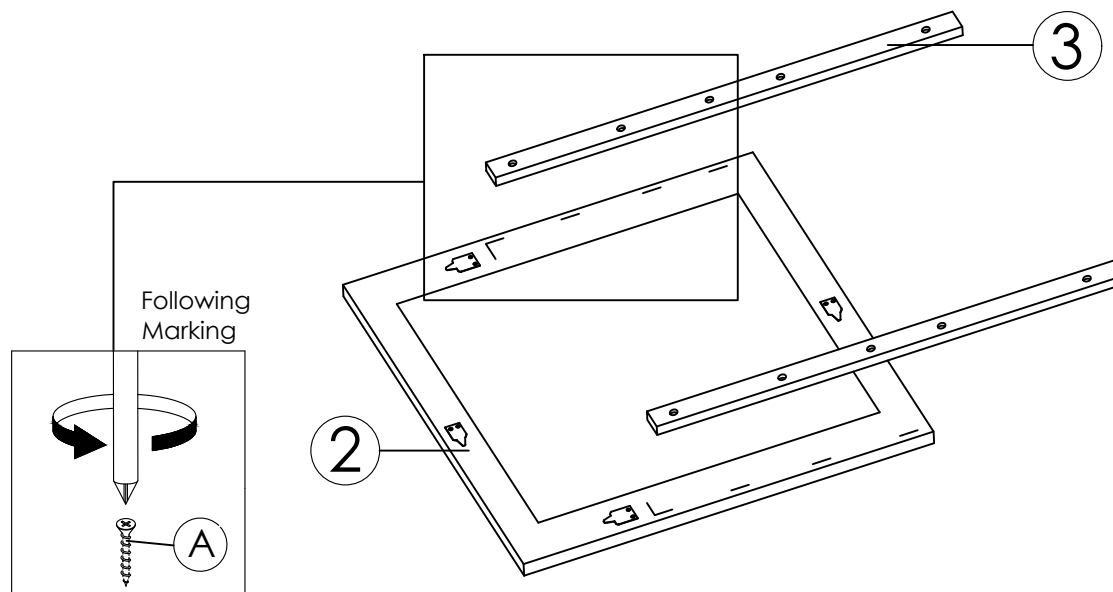
2- MIRROR

3- SUPPORT RAIL


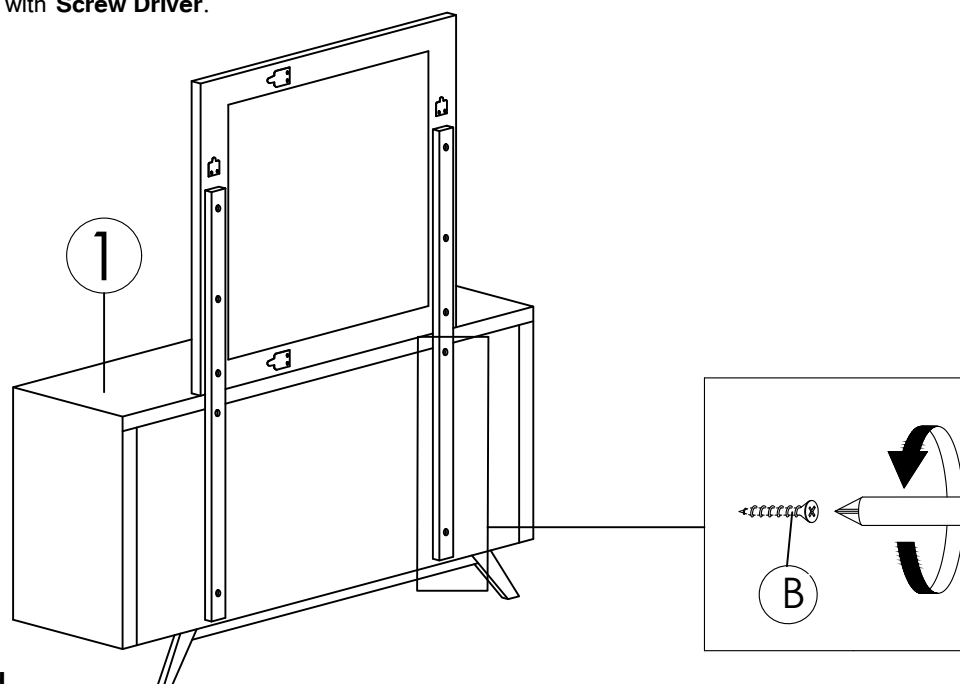


STEP 1 :

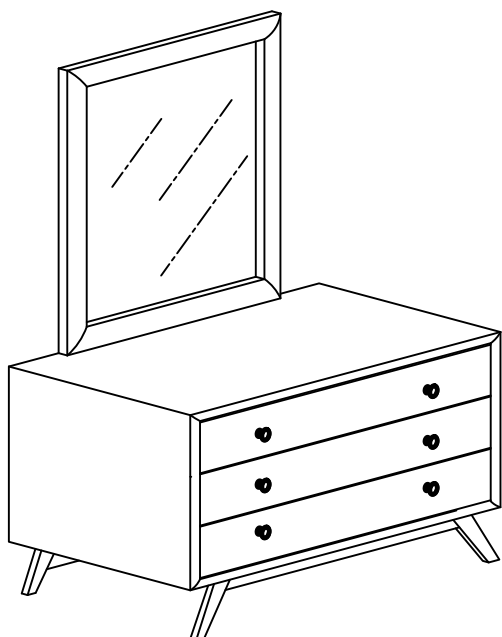
1. Attach **Mirror(2)** and **Support Rails(3)** on a carpeted or padded area as shown. Attach **Support Rails(3)** into **Mirror(2)** by inserting **M4 x 32mm Wood Screw(A)** into the holes on the back of **Support Rails(3)** and **Mirror(2)**. Tighten with **Screw Driver**.

**Hardware & Tool required****STEP 2 :**

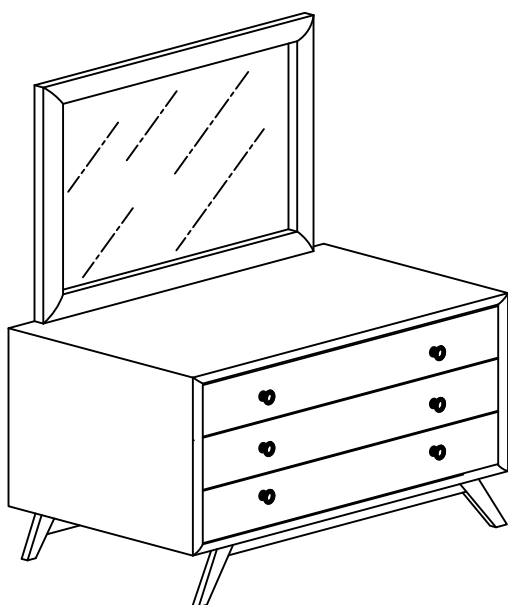
1. Attach **Support Rails(5)** and **Mirror(4)** with **Dresser(3)** together. Then, insert **M5 x 32mm Wood Screw (D)** through the **Support Rails(5)**. Tighten with **Screw Driver**.

**Hardware & Tool required**

STEP 3 :



OR



Assembly is completed.
The Dresser(with mirror support) is ready to enjoy now !