
## **ASSEMBLY INSTRUCTIONS**

# MOD-7061

V0.09.15.22



## Let's get started!





Read through all of the instructions before starting



Approx. 45 minutes assembly time



2 people recommended for assembly



Care instructions are listed in the last step of this manual



Make sure you have all parts and components before discarding any packing materials Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.


Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

## Furniture components:

1	Headboard	x1

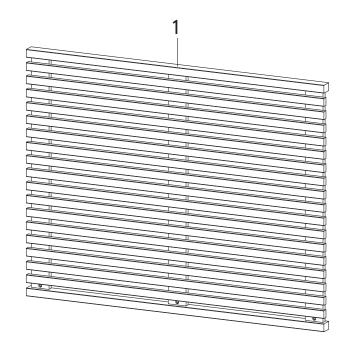

#### Provided hardware:


Α	Plat Bracket	х6
В	Screw M 4.5 x 12.5 mm	x12
С	Wall Plug	х9
D*	Screw M 5.5 x 45 mm	х9
Е	Screw Cap	хЗ


## What you need:





## Step 1

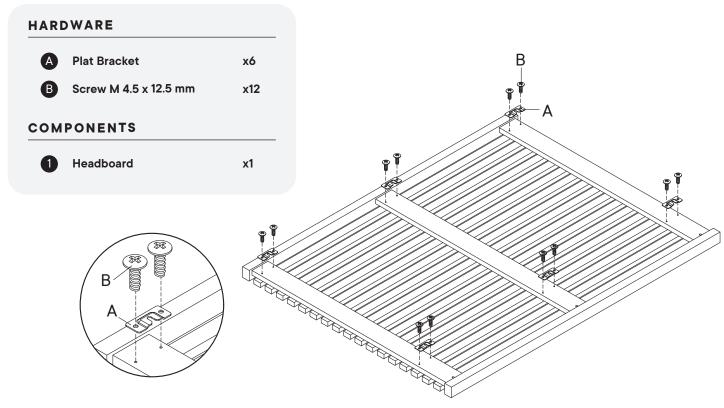

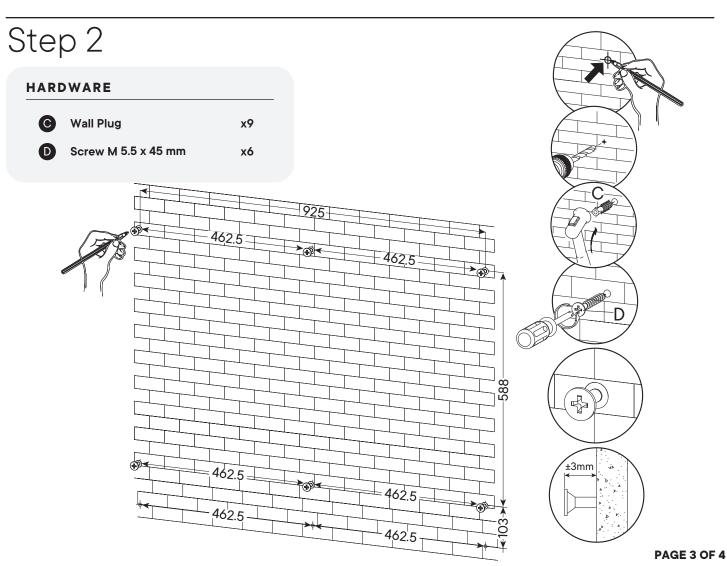

## Step 3


#### HARDWARE

Screw M 5.5 x 45 mm

х3

**Screw Cap** 

хЗ

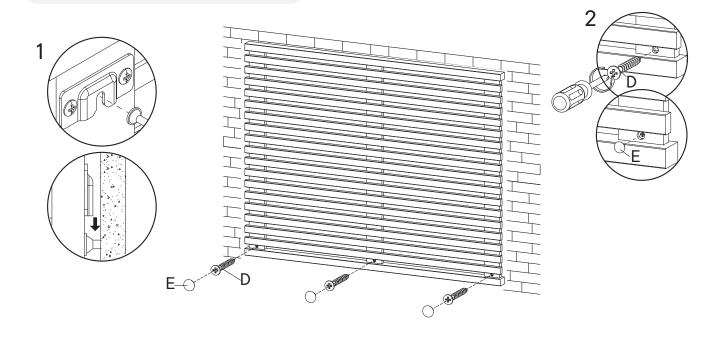

## Great job!

Headboard assembly is complete.


#### CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

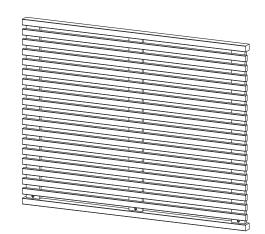

## CONNECT WITH US! (6) (f) (9)







Tag us @modway\_furniture and #modway for a chance to be featured.