


ASSEMBLY INSTRUCTIONS

MOD-7062

V0.09.09.22

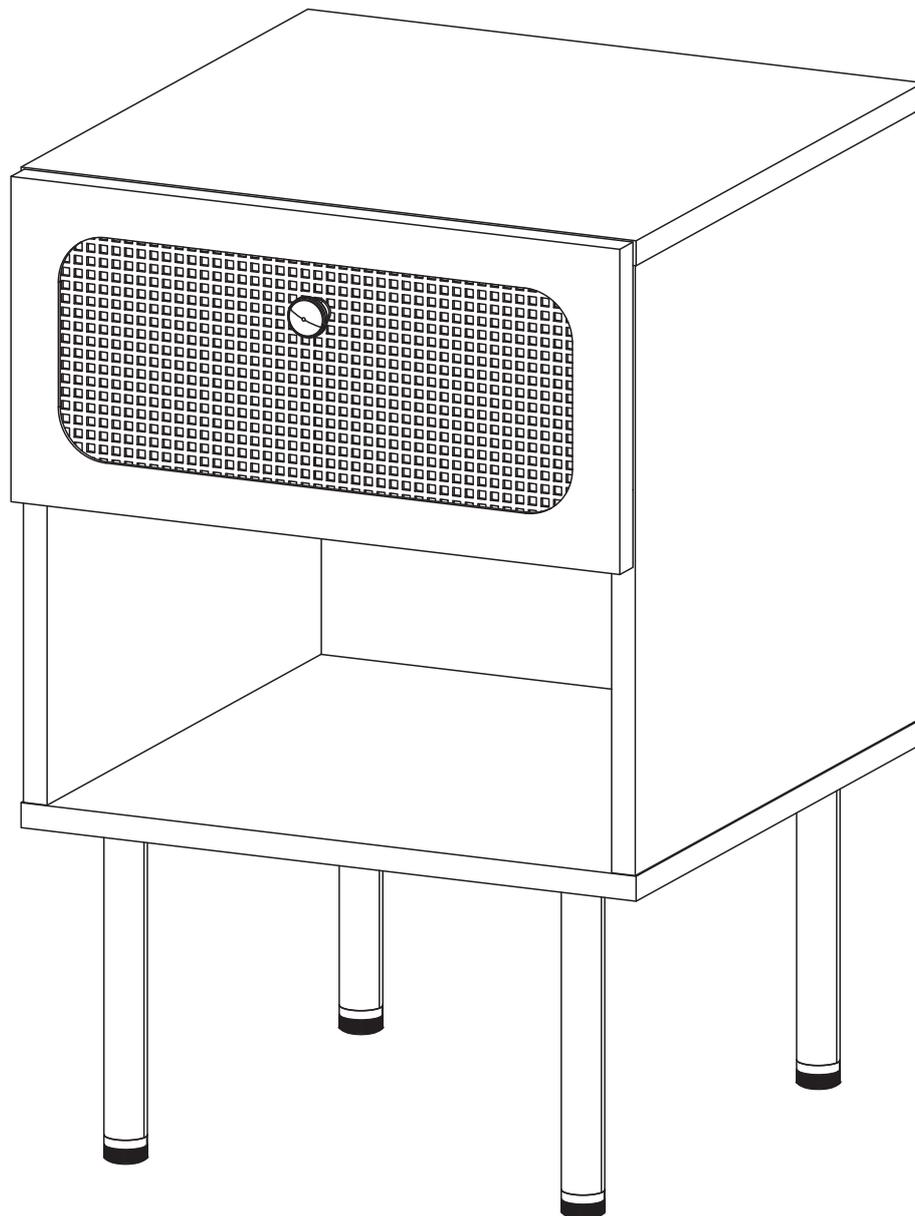

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

*modway

Let's get started!

*modway



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 45 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



1 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.


Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

1	Top Board	x1
2	Bottom Board	x1
3	Side Board Left	x1
4	Side Board Right	x1
5	Front Drawer	x1
6	Side Drawer Left	x1
7	Side Drawer Right	x1
8	Back Drawer	x1
9	Bottom Drawer	x1
10	Back Board	x1

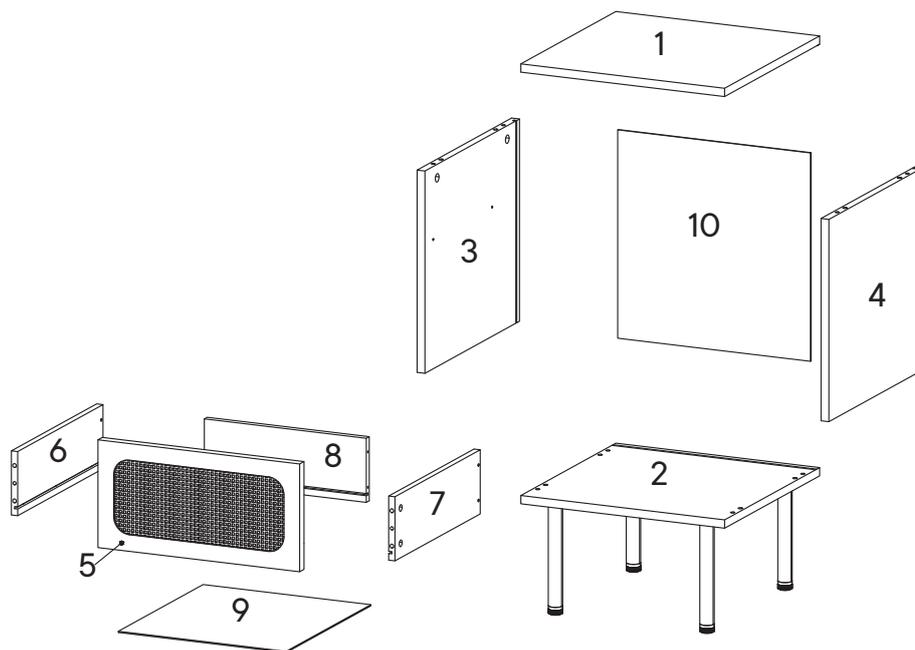

Provided hardware:

A		Cam Bolt Ø6 x 35 mm	x8
B		Cam Lock Ø15 mm	x4
C		Cam Lock Ø12 mm	x4
D		Wood Dowel Ø8 x 30 mm	x8
E		Wood Dowel Ø6 x 30 mm	x2
F		Screw M 7 x 50 mm	x4
G		Handle	x1
H		Screw M 3.5 x 13 mm	x6
I		Allen Key	x1

J		Screw M 8 x 39 mm	x4
K		Screw M 4.5 x 12.5 mm	x16
L		Screw M 6 x 10.5 mm	x4
M		Screw M 4 x 22 mm	x1
N		Wedge	x12
O		Screw M 3.5 x 15.5 mm	x12
P		Silicon Bumper	x2
RM35A		Drawer Runner	x1
LM20A1		Leg Metal	x4

What you need:

Phillips Head Screwdriver

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com


Step 1

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x4
- E** Wood Dowel Ø6 x 30 mm x2

COMPONENTS

- 5** Front Drawer x1
- 6** Side Drawer Left x1
- 7** Side Drawer Right x1

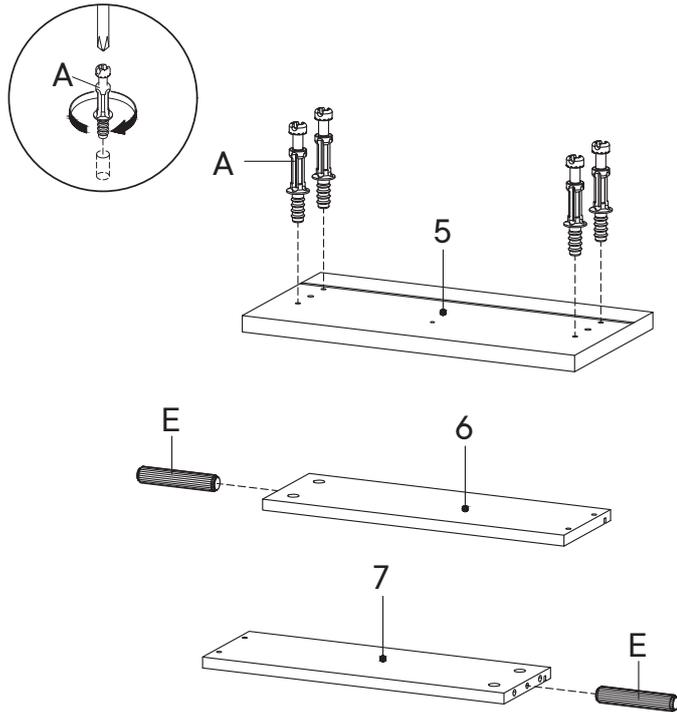


Step 2

HARDWARE

- C** Cam Lock Ø12 mm x4
- J** Screw M 8 x 39 mm x4

COMPONENTS


- 5** Front Drawer x1
- 6** Side Drawer Left x1
- 7** Side Drawer Right x1
- 8** Back Drawer x1
- 9** Bottom Drawer x1

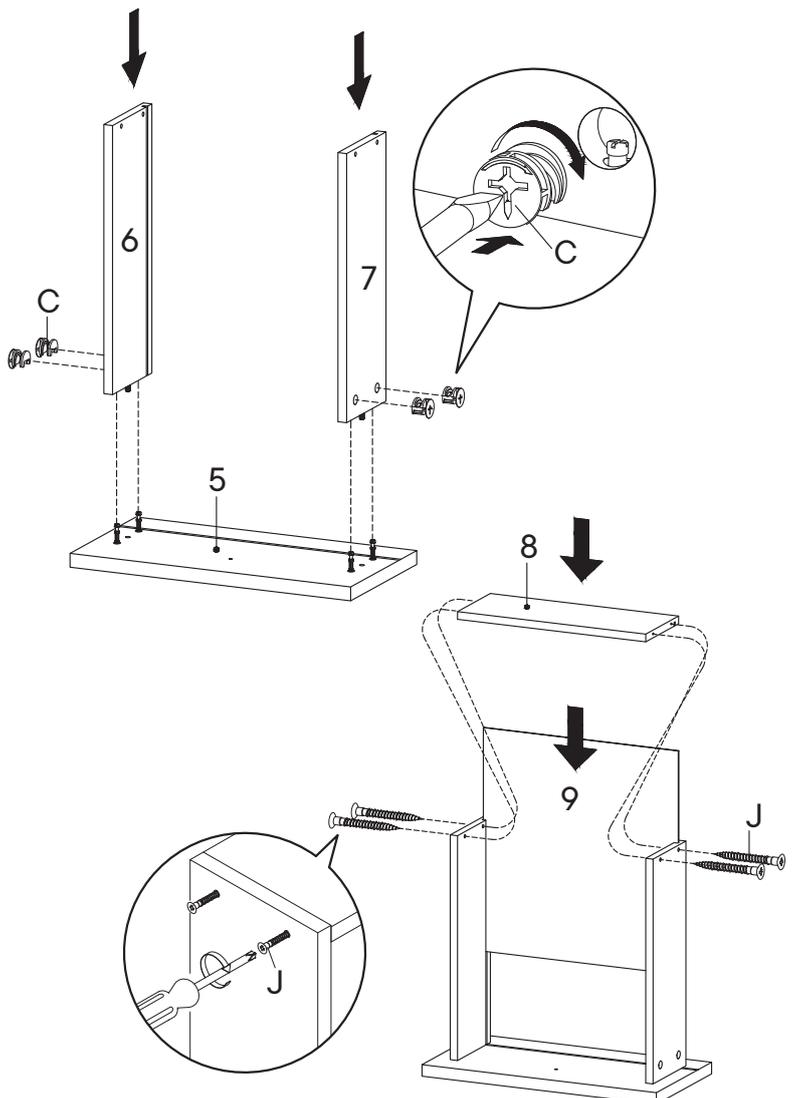

Step 3

HARDWARE


- G** Handle x1
- H** Screw M 3.5 x 13 mm x6
- M** Screw M 4 x 22 mm x1
- RM35A** Drawer Runner x1

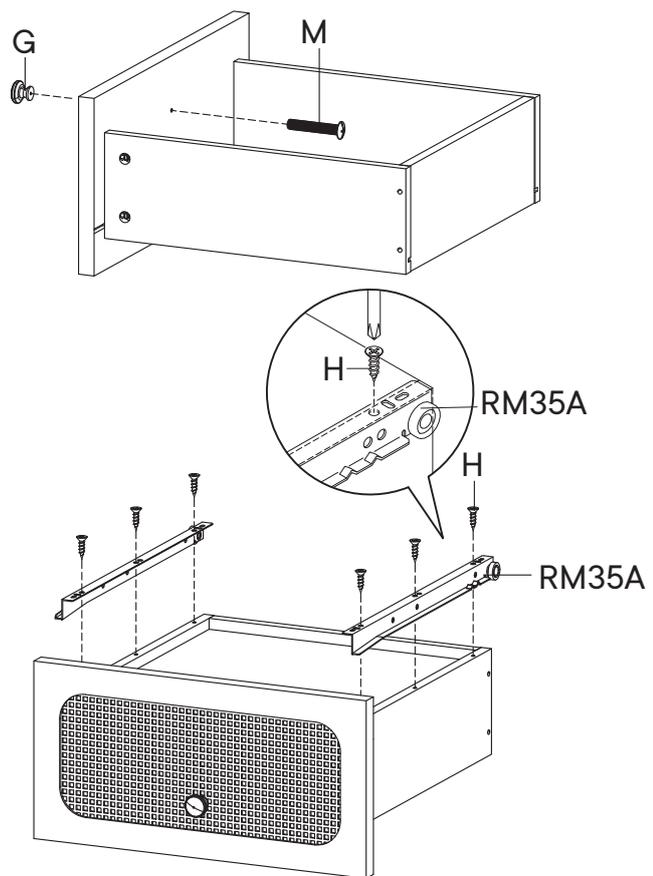

Step 4

HARDWARE

- N** Wedge x4
- O** Screw M 3.5 x 15.5 mm x4

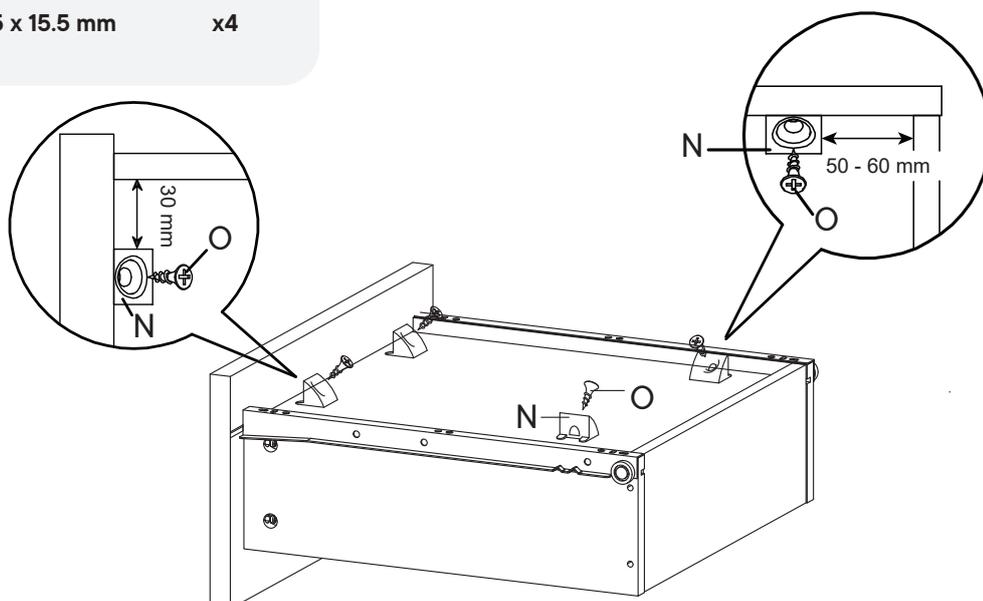


Step 5

HARDWARE

- A** Cam Bolt $\varnothing 6 \times 35$ mm x4
- D** Wood Dowel $\varnothing 8 \times 30$ mm x8
- L** Screw M 6 x 10.5 mm x4
- RM35A** Drawer Runner x1

COMPONENTS

- 1** Top Board x1
- 3** Side Board Left x1
- 4** Side Board Right x1

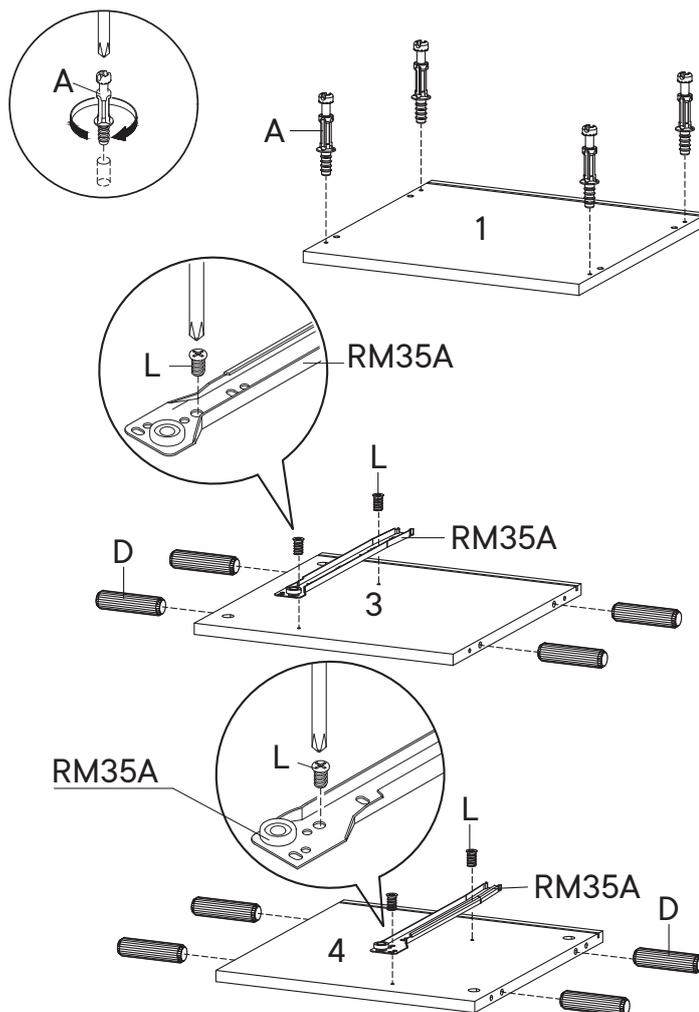



Step 6

HARDWARE

- B** Cam Lock $\varnothing 15$ mm x4

COMPONENTS

- 1** Top Board x1
- 3** Side Board Left x1
- 4** Side Board Right x1

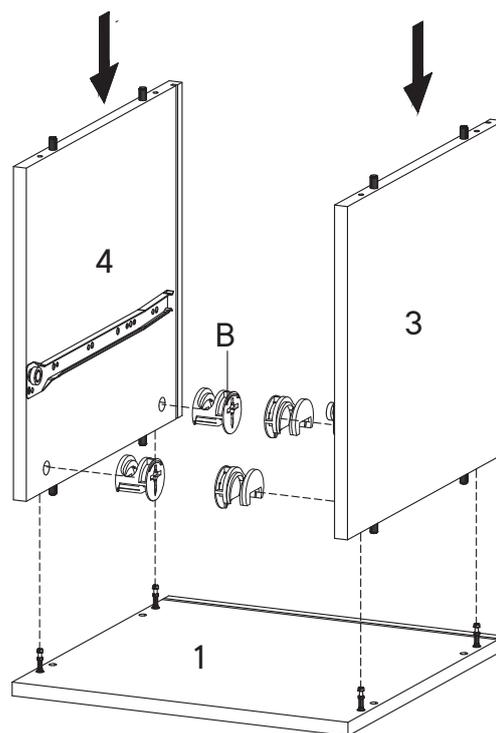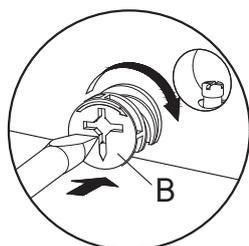


Step 7

HARDWARE

- F** Screw M 7 x 50 mm x4
- I** Allen Key x1

COMPONENTS


- 2** Bottom Board x1
- 10** Back Board x1

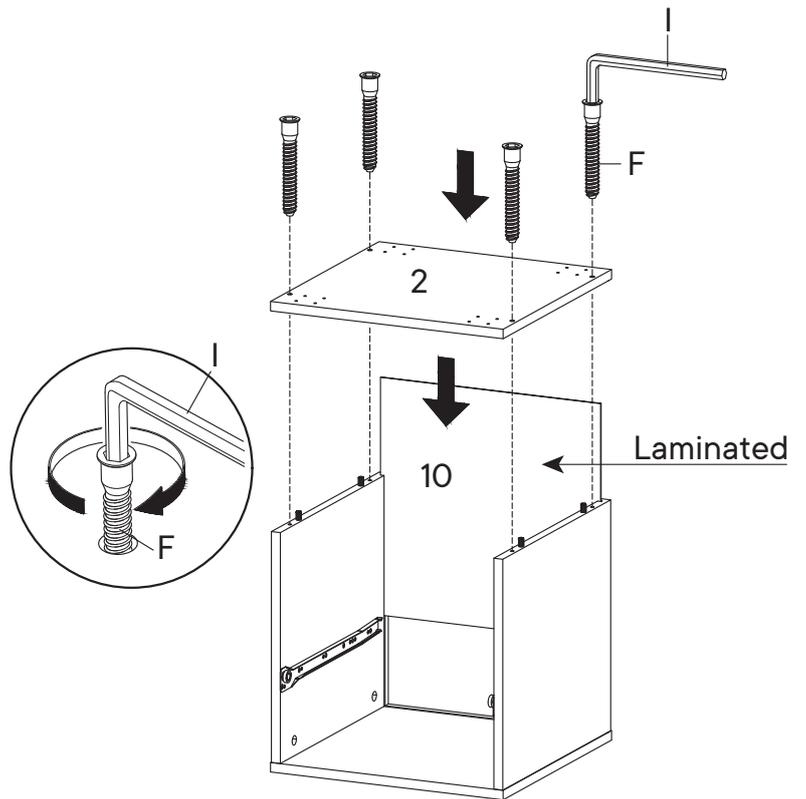

Step 8

HARDWARE



- K** Screw M 4.5 x 12.5 mm x16
- LM20A1** Leg Metal x4

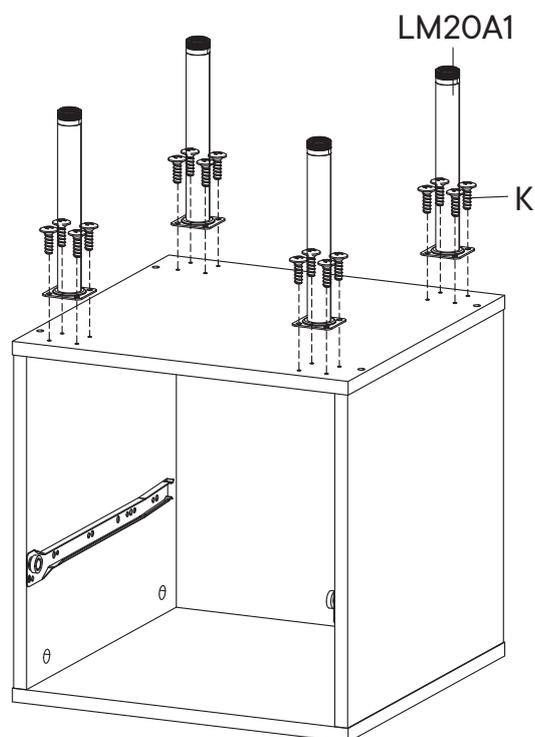

Step 9

HARDWARE


- P** Silicon Bumper x2

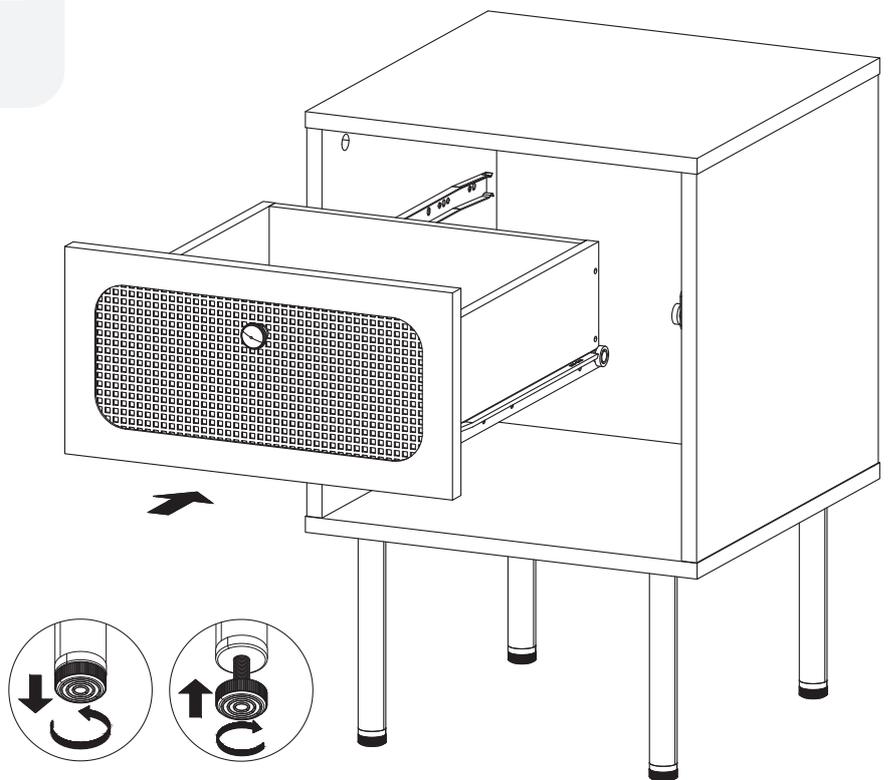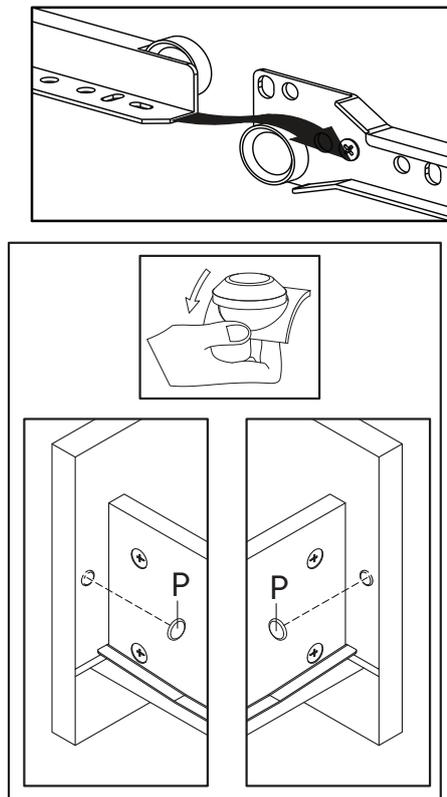

Step 10

HARDWARE

- N** Wedge x8
- O** Screw M 3.5 x 15.5 mm x8

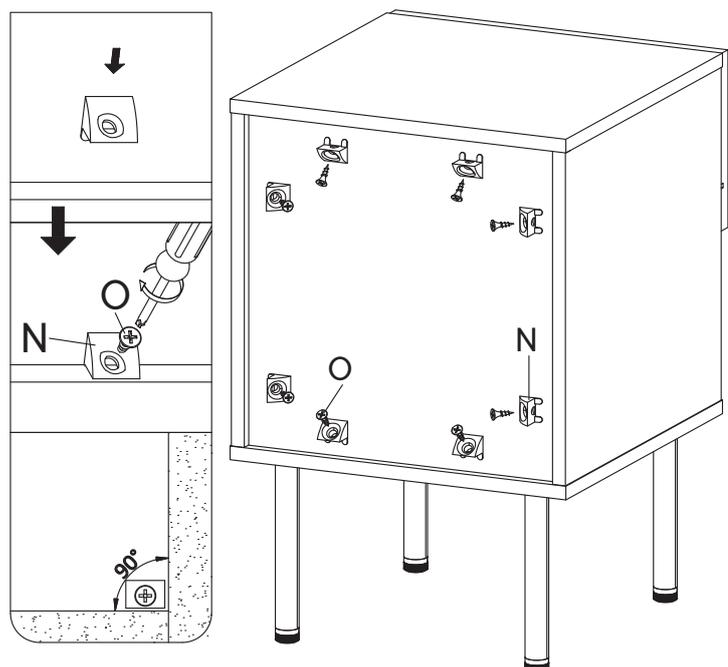

Great job!

Nightstand assembly is complete.


♥ CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

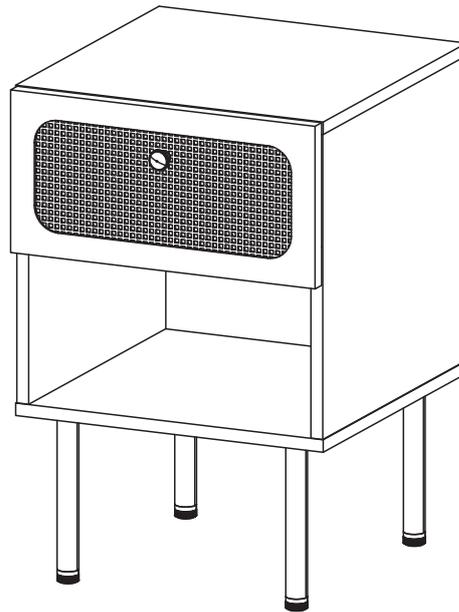

CONNECT WITH US!   

Tag us @modway_furniture and #modway for a chance to be featured.