


ASSEMBLY INSTRUCTIONS

MOD-7064

V0.09.09.22

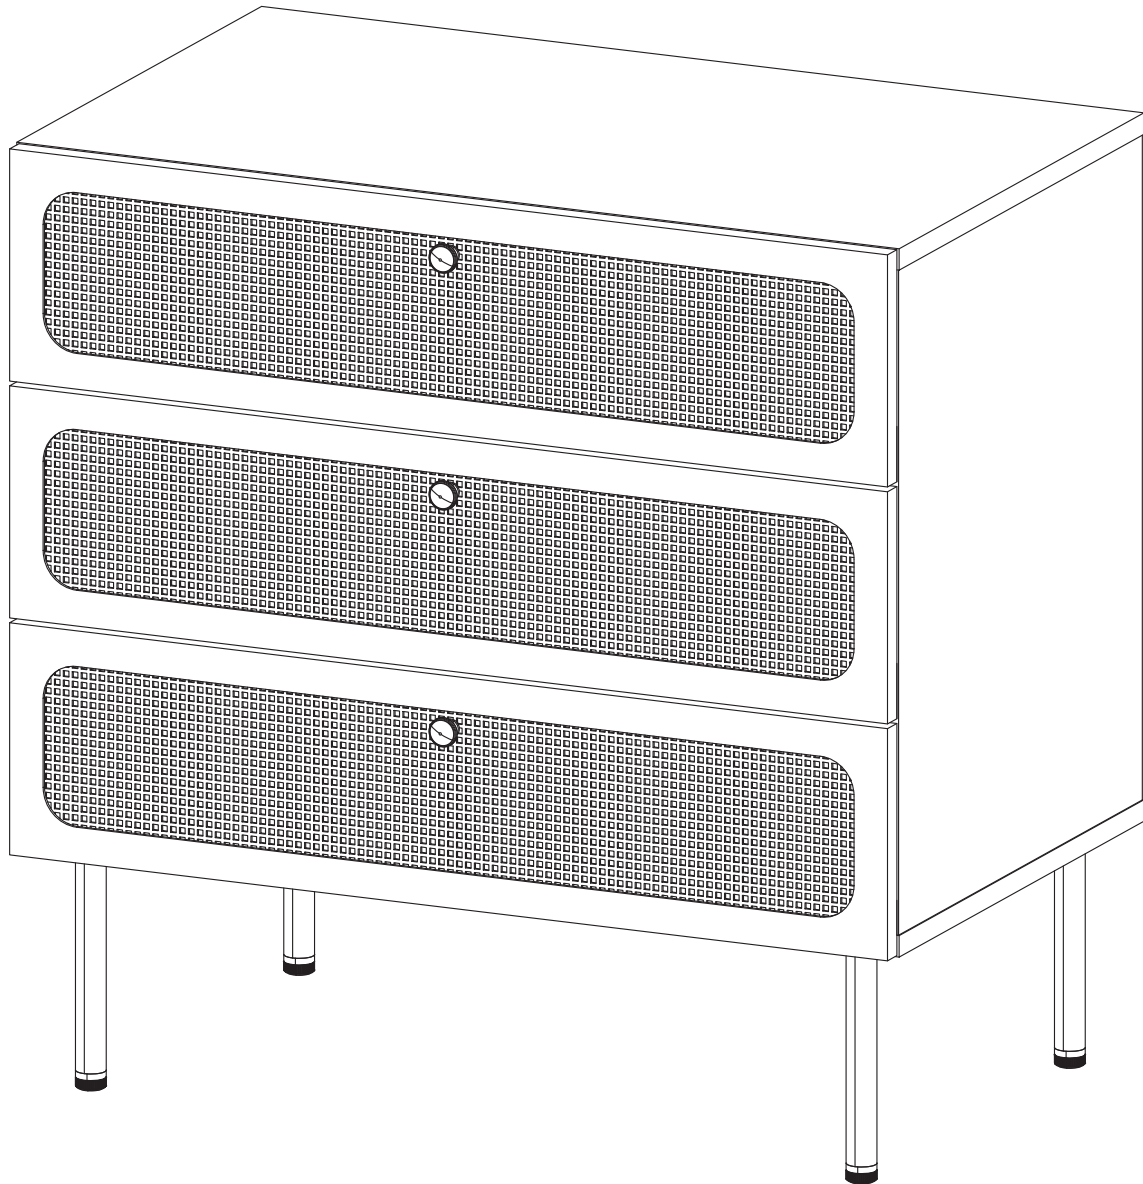

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

***modway**



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 60 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.


Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

1	Top Board	x1	11	Support Board 1	x1
2	Bottom Board	x1	12	Support Board 2	x1
3	Side Board Left	x1	13	Back Board	x2
4	Side Board Right	x1			
5	Front Drawer	x3			
6	Side Drawer Left	x3			
7	Side Drawer Right	x3			
8	Back Drawer	x3			
9	Bottom Drawer	x3			
10	Support Drawer	x3			

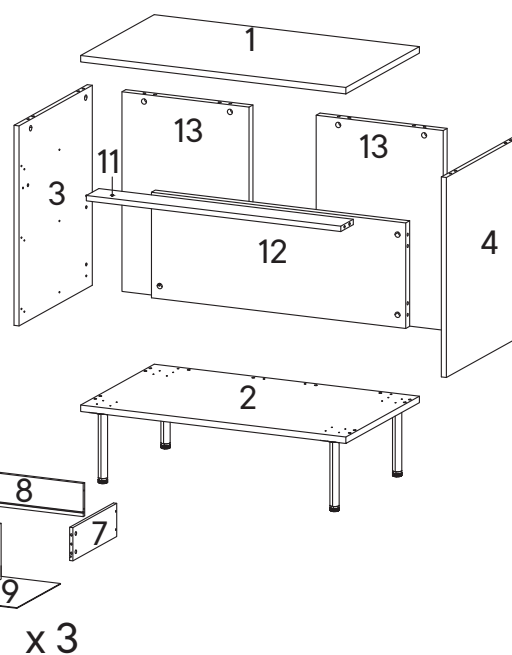

Provided hardware:

A		Cam Bolt Ø6 x 35 mm	x29	J		Screw M 8 x 39 mm	x18
B		Cam Lock Ø15 mm	x14	K		Screw M 4 x 20 mm	x16
C		Cam Lock Ø12 mm	x15	L		Screw M 6 x 10.5 mm	x18
D		Wood Dowel Ø8 x 30 mm	x22	M		Screw M 4 x 22 mm	x3
E		Wood Dowel Ø6 x 30 mm	x6	N		Wedge	x12
F		Screw M 7 x 50 mm	x8	O		Screw M 3.5 x 15.5 mm	x12
G		Handle	x3	P		Silicon Bumper	x6
H		Screw M 3.5 x 13 mm	x18	RM35A		Drawer Runner	x3
I		Allen Key	x2	LM20A1		Leg Metal	x4

What you need:



Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com


Step 1

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x15
- E** Wood Dowel Ø6 x 30 mm x6

COMPONENTS

- 5** Front Drawer x3
- 6** Side Drawer Left x3
- 7** Side Drawer Right x3

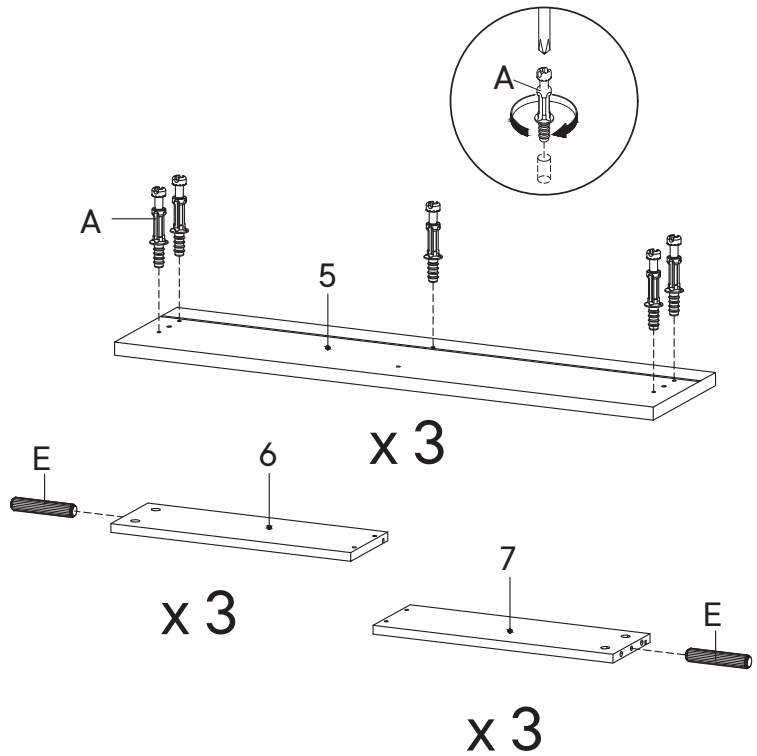


Step 2

HARDWARE

- C** Cam Lock Ø12 mm x15
- J** Screw M 8 x 39 mm x18

COMPONENTS


- 5** Front Drawer x3
- 6** Side Drawer Left x3
- 7** Side Drawer Right x3
- 8** Back Drawer x3
- 9** Bottom Drawer x3
- 10** Support Drawer x3

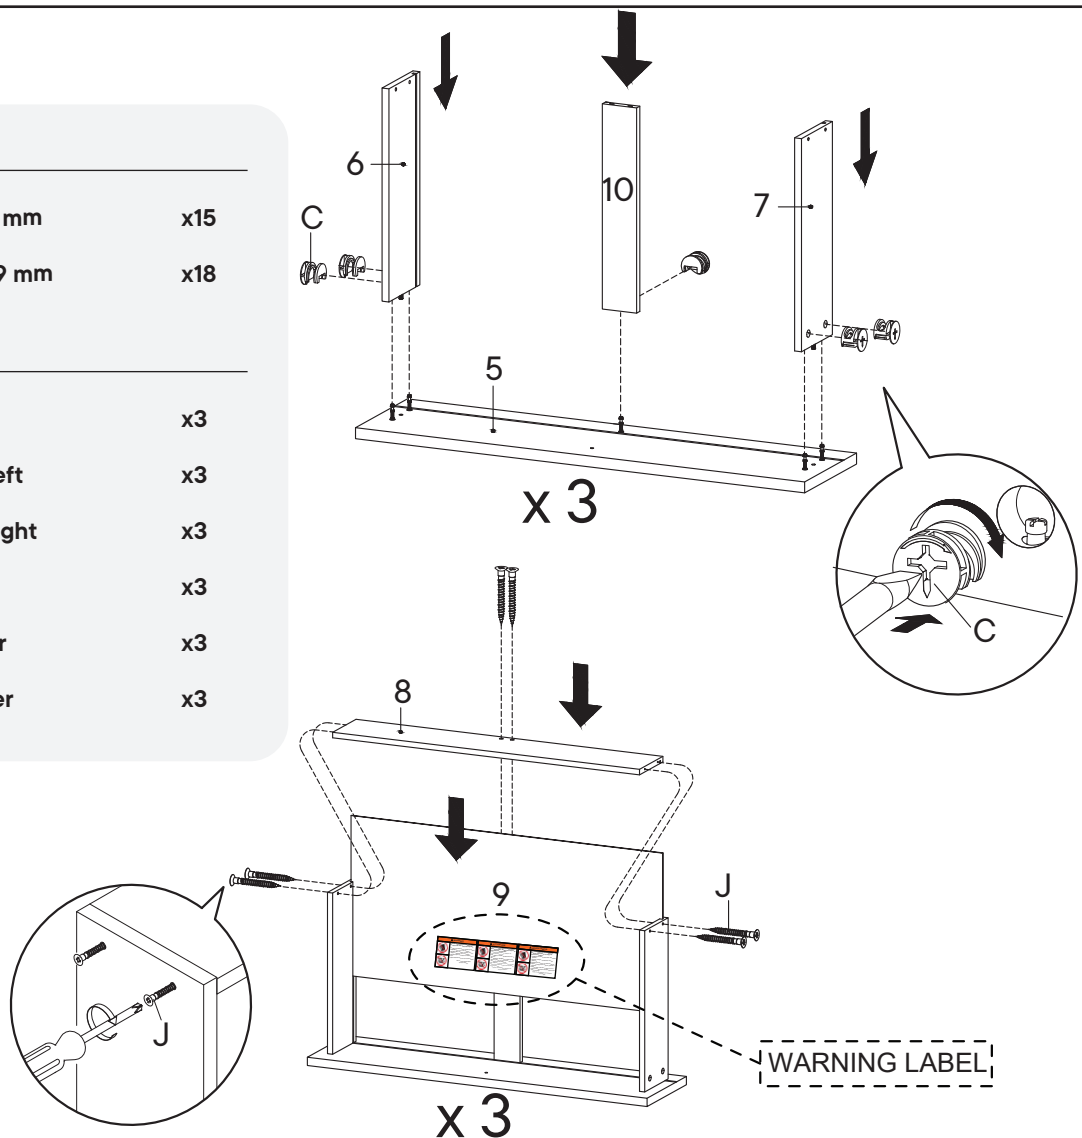

Step 3

HARDWARE


G	Handle	x3
H	Screw M 3.5 x 13 mm	x18
M	Screw M 4 x 22 mm	x3
RM35A	Drawer Runner	x3

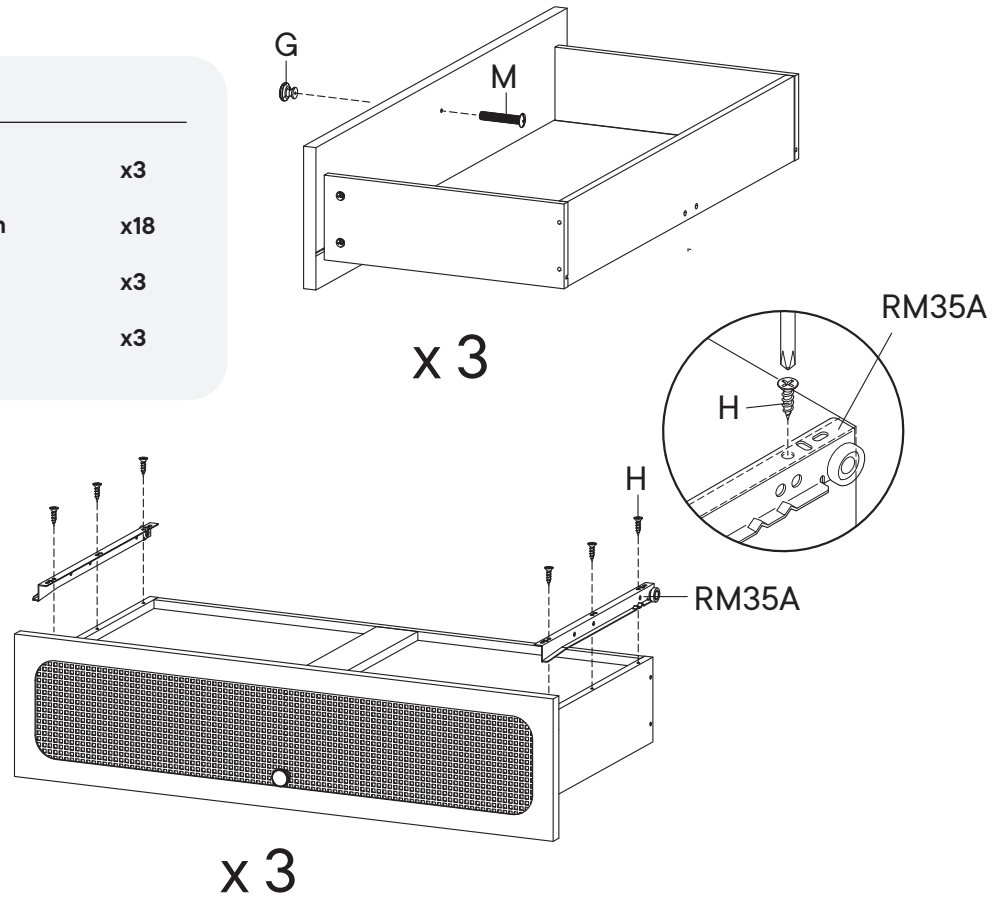

Step 4

HARDWARE

N	Wedge	x12
O	Screw M 3.5 x 15.5 mm	x12

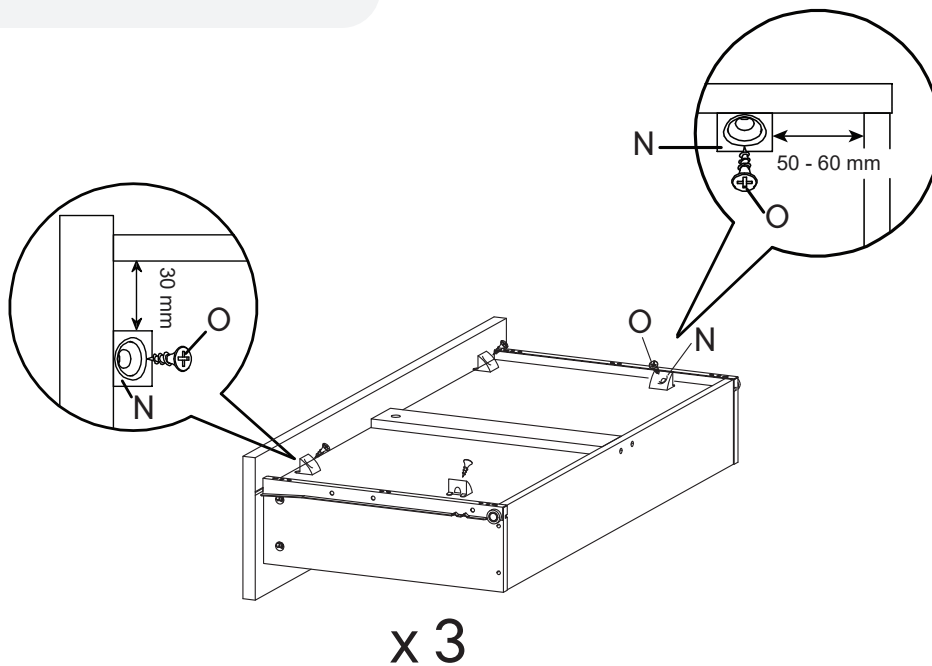



Step 5

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x8
- D** Wood Dowel Ø8 x 30 mm x14

COMPONENTS

- 1** Top Board x1
- 11** Support Board 1 x1
- 12** Support Board 2 x1
- 13** Back Board x2

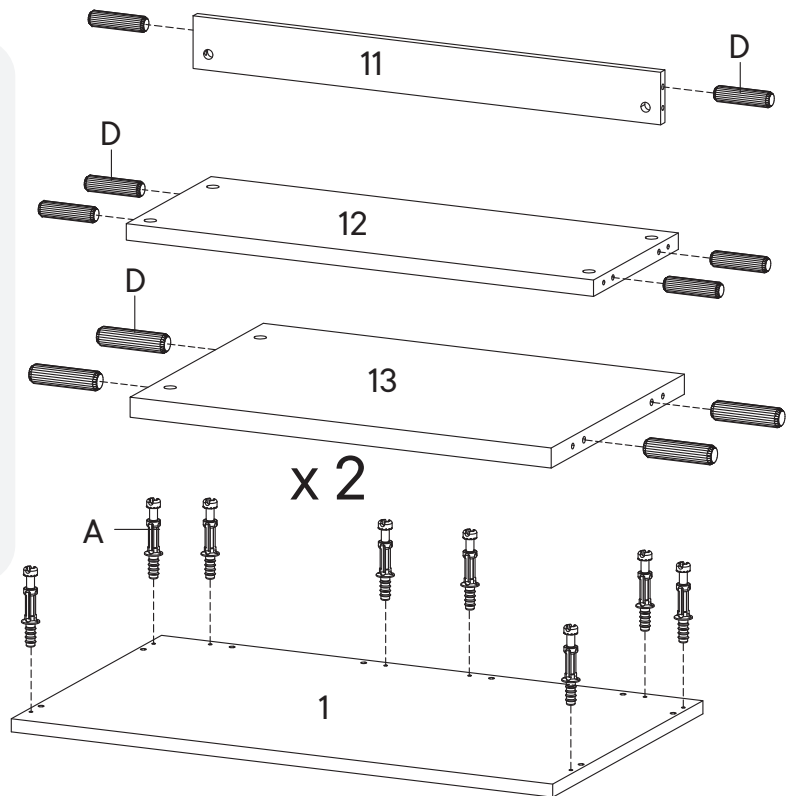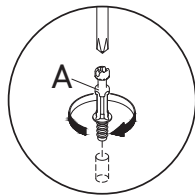





Step 6

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x6
- D** Wood Dowel Ø8 x 30 mm x8
- L** Screw M 6 x 10.5 mm x18
- RM35A** Drawer Runner x3

COMPONENTS

- 3** Side Board Left x1
- 4** Side Board Right x1

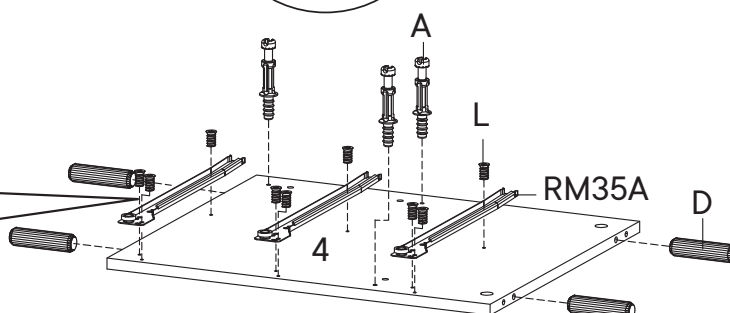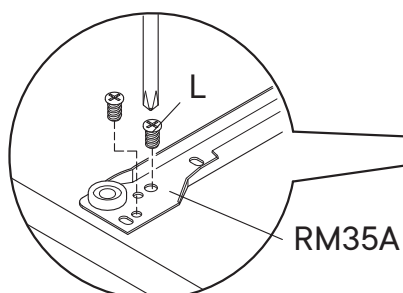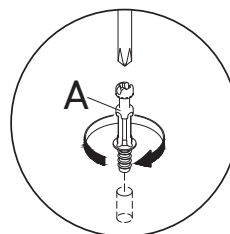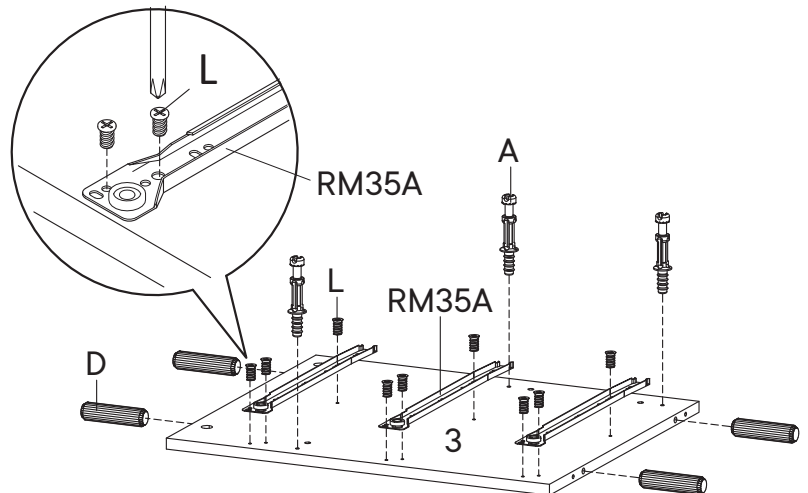

Step 7

HARDWARE


B Cam Lock Ø15 mm x3

COMPONENTS

4 Side Board Right x1

11 Support Board 1 x1

12 Support Board 2 x1

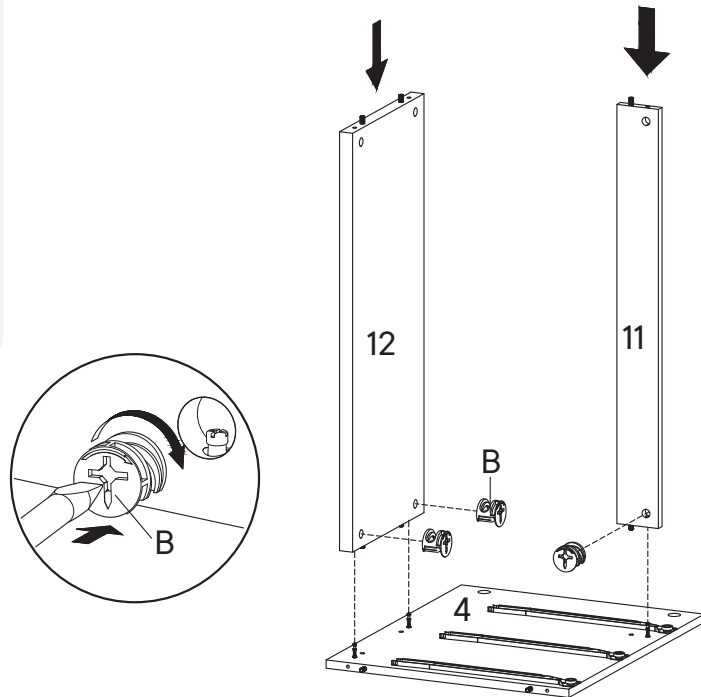


Step 8

HARDWARE

B Cam Lock Ø15 mm x3

COMPONENTS

3 Side Board Left x1

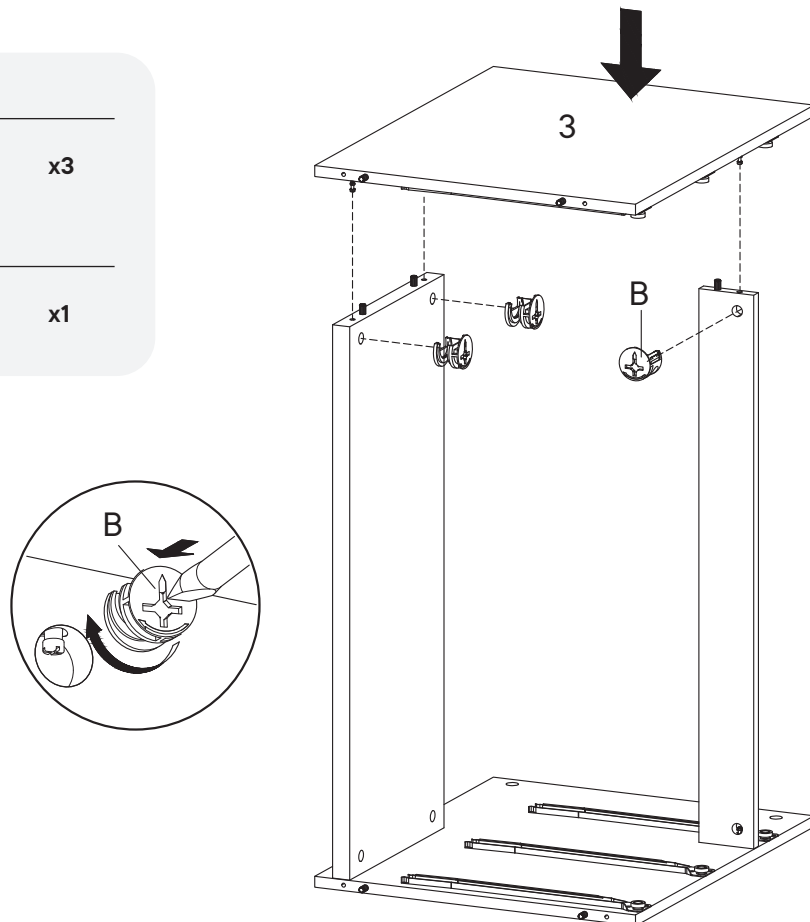



Step 9

HARDWARE

B Cam Lock Ø15 mm x4

COMPONENTS

1 Top Board x1

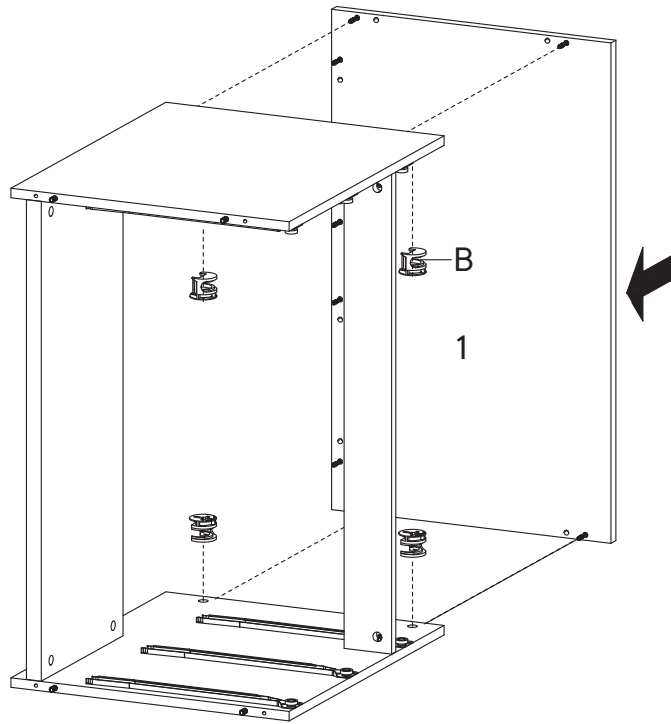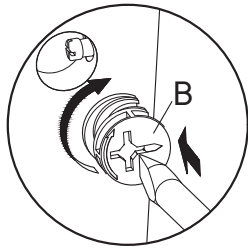



Step 10

HARDWARE

B Cam Lock Ø15 mm x4

COMPONENTS

13 Back Board x2

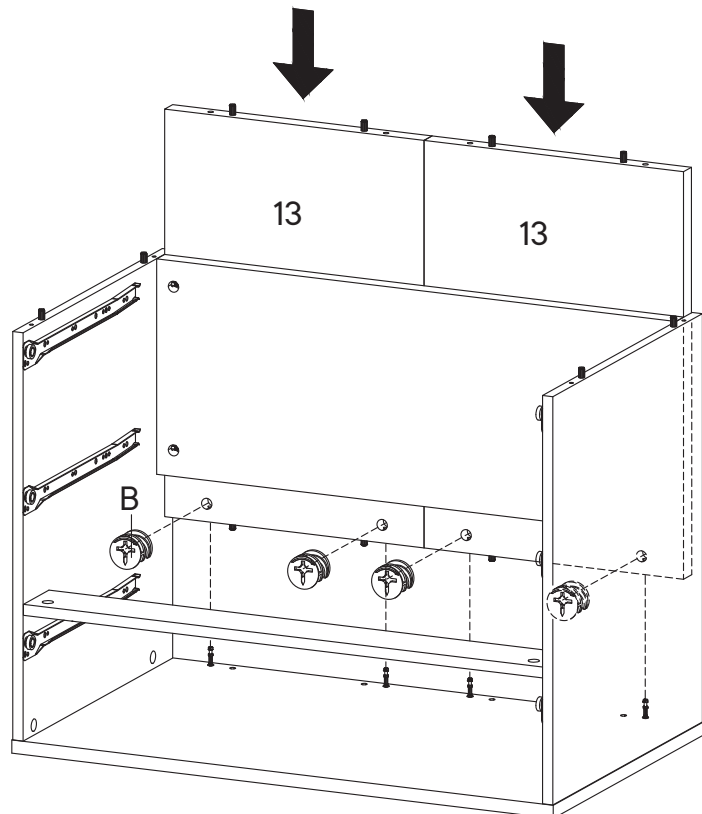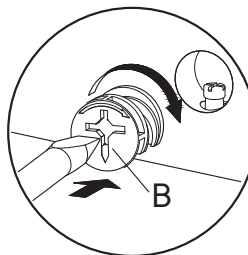

Step 11


HARDWARE

F Screw M 7 x 50 mm x8

I Allen Key x1

COMPONENTS

2 Bottom Board x1

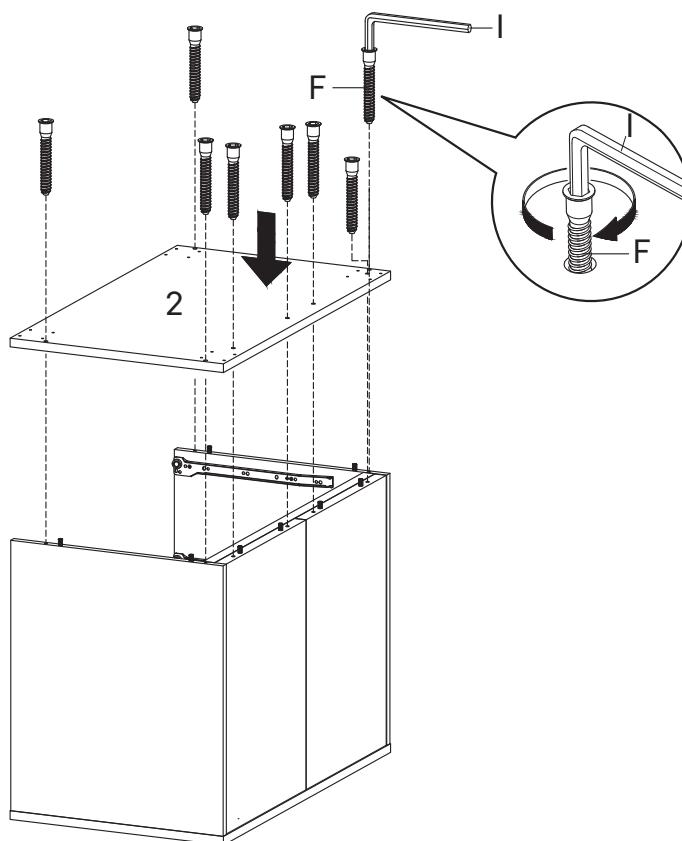


Step 12

HARDWARE

K Screw M 4 x 20 mm x16



LM20A1 Leg Metal x4

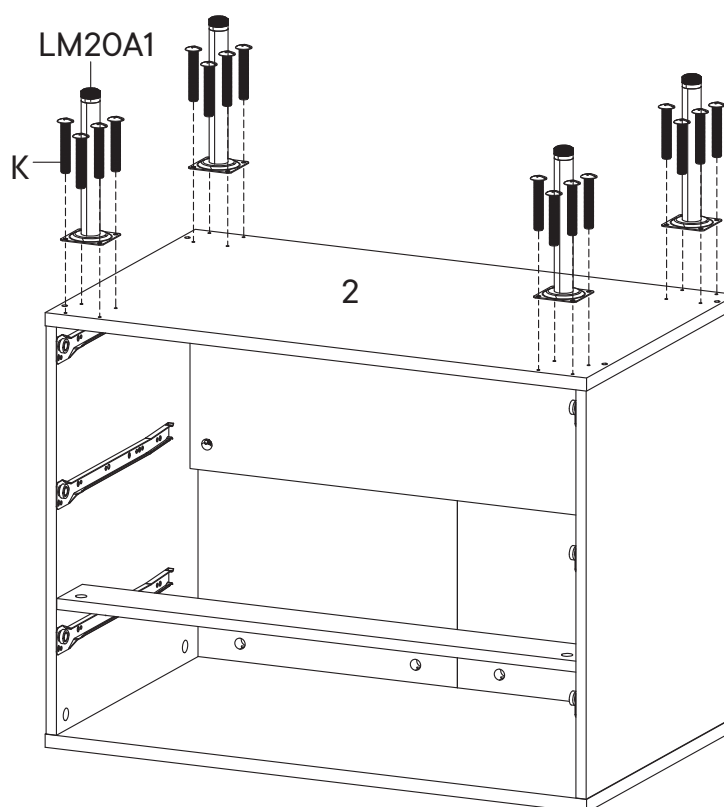

Step 13

HARDWARE

P Silicon Bumper x6

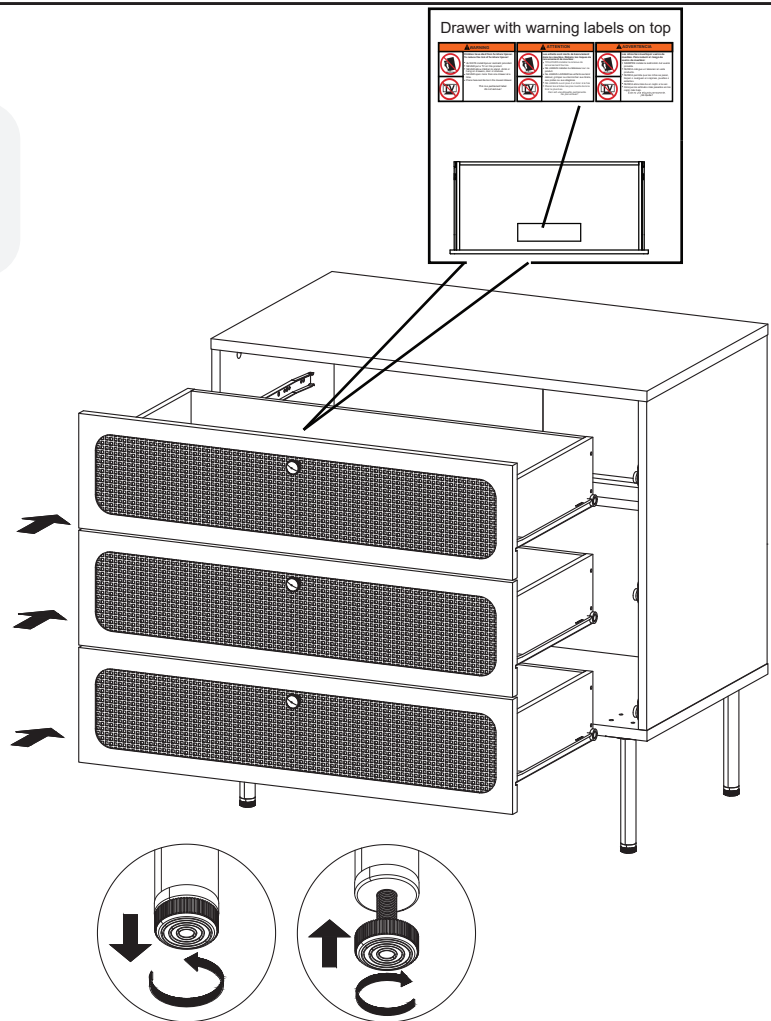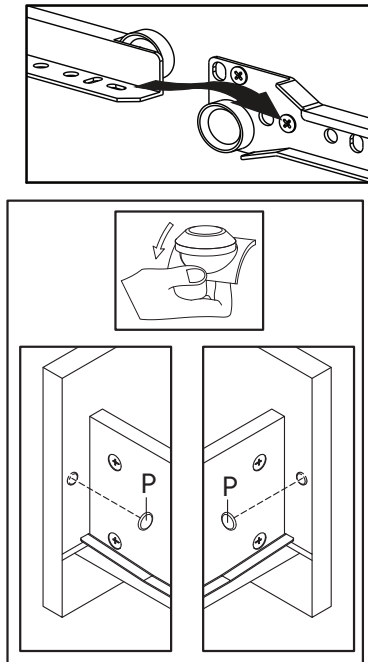

Great job!

Chest drawer assembly is complete.


♥ CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

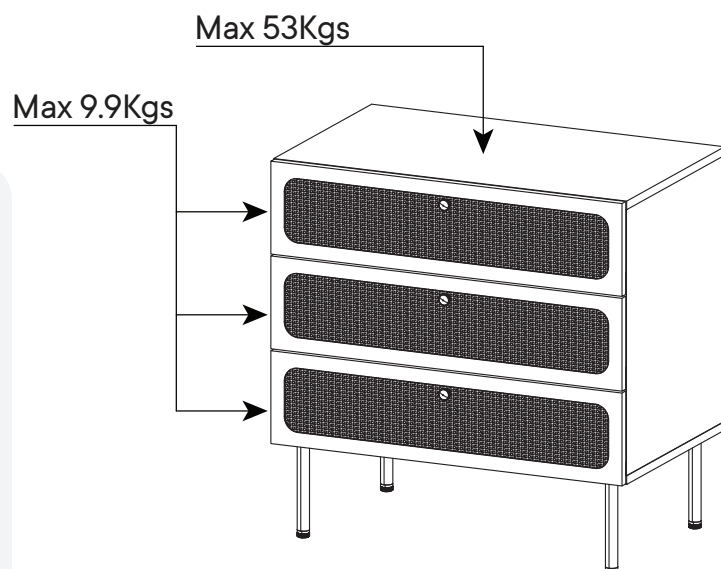

CONNECT WITH US!   








Tag us @modway_furniture and #modway for a chance to be featured.

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for you wall type.

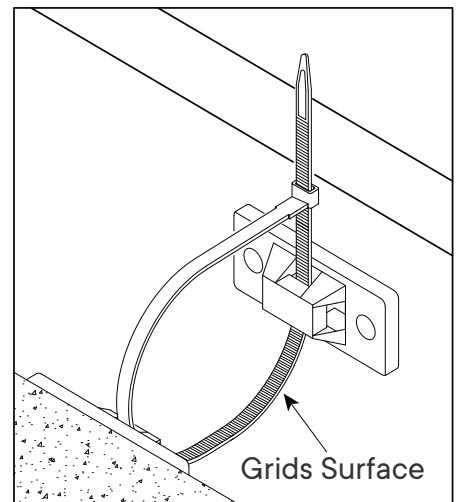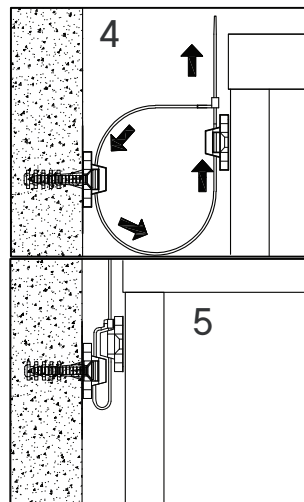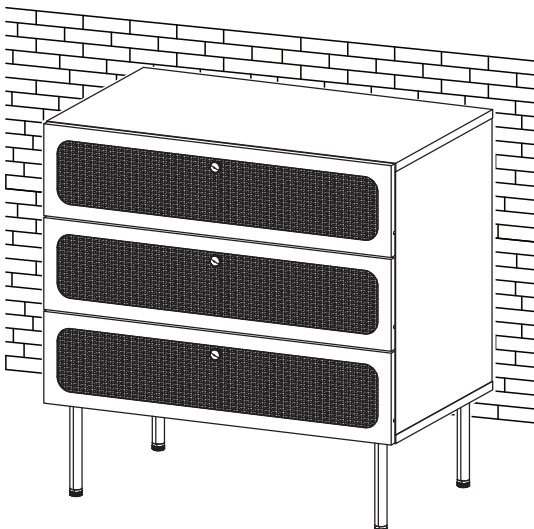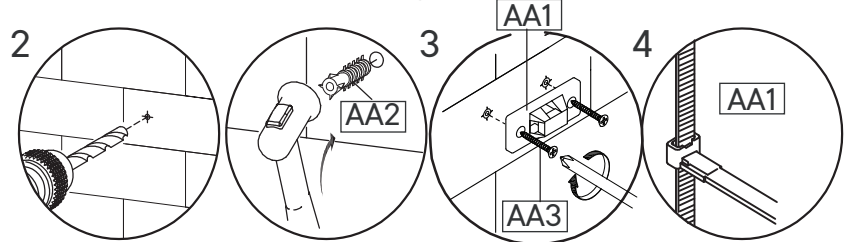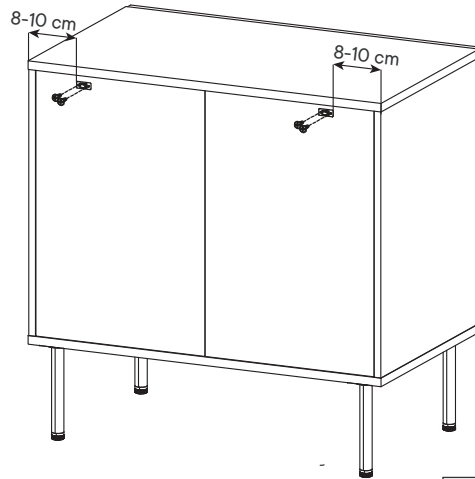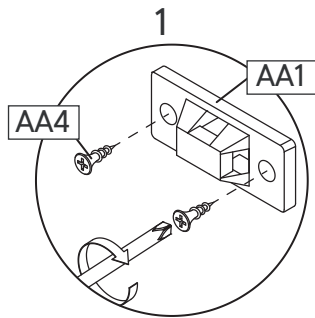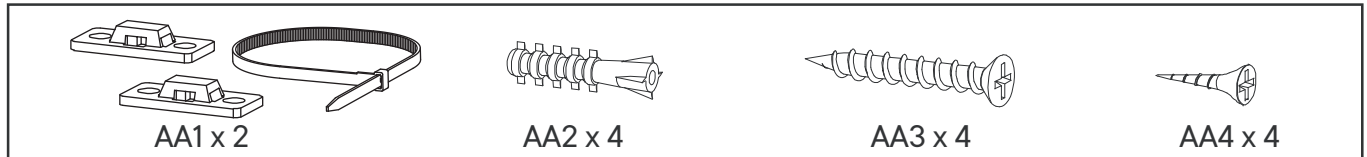

Installation Instructions :

1. Attach bracket (AA1) securely to the back top of the furniture using screw (AA4) provided. Allow 8 - 10 cm from each side.
2. Please make a hole for wall plugs position on the wall and minimum 15 mm below bracket secured to the back of unit attach the wall plugs (AA2).
3. Locate the other bracket (AA1) on the wall over wall plugs (AA2). Place furniture into position so both brackets (AA1) are vertically in the line.
4. Lace the end of the restraints strap through the larger hole in each bracket. Ensure the restraints strap with grids surface facing the inner loops. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Make sure that the strap is securely laced & locked.