ASSEMBLY INSTRUCTIONS

EEI-6228

V1. 12.29.22
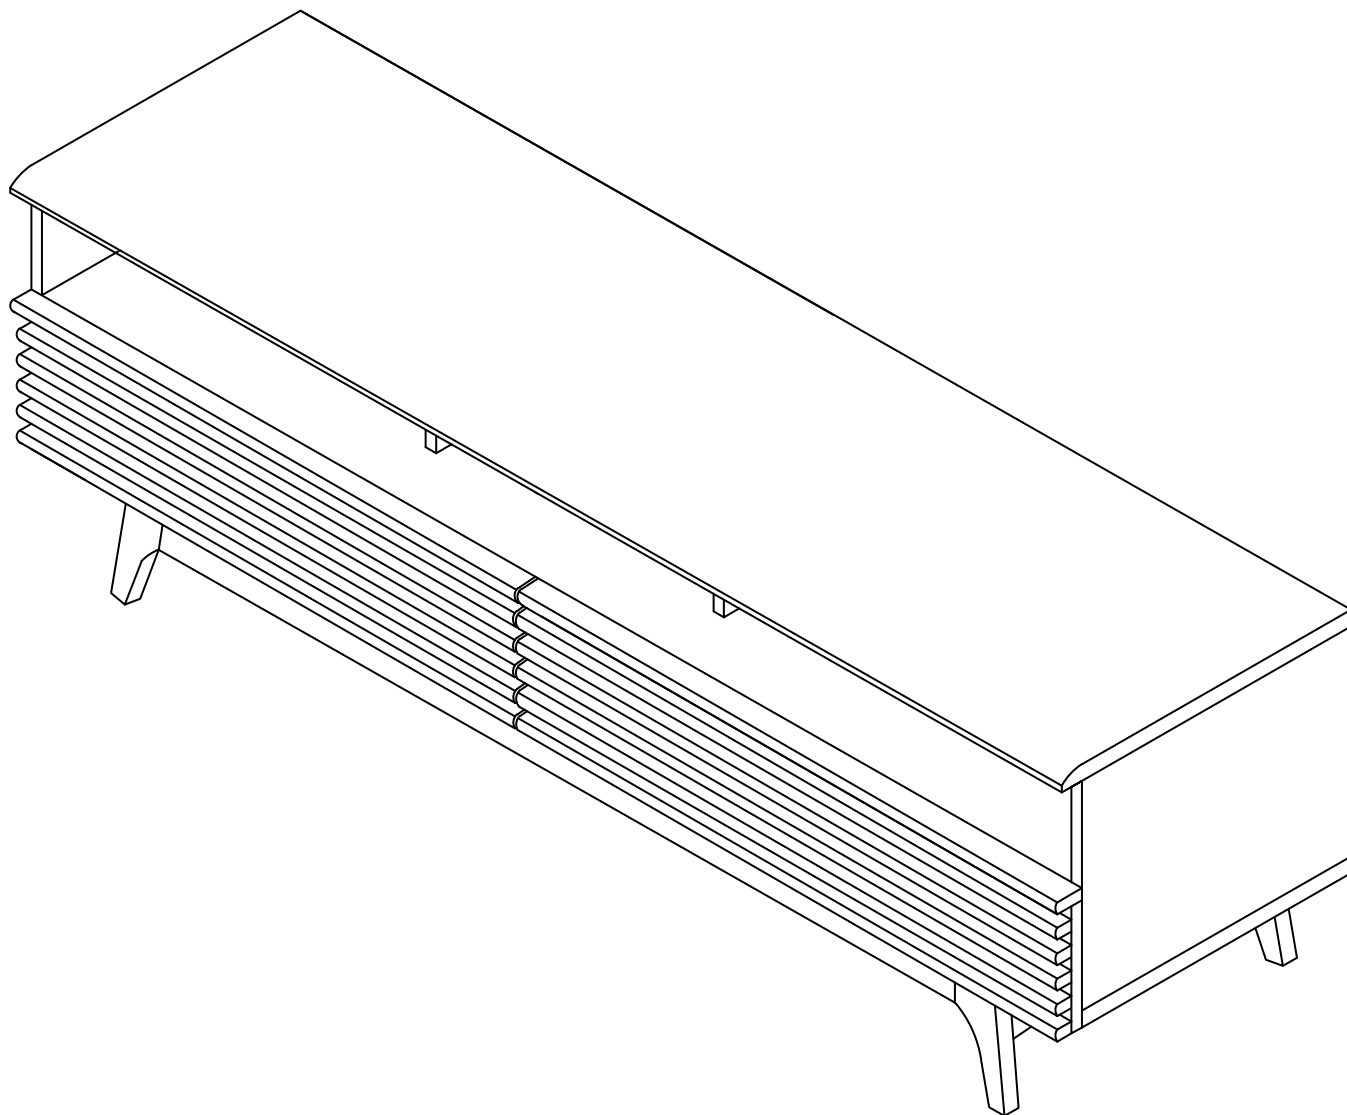
*modway

Let's get started!

✱modway

📄 **Read through all of the instructions before starting**

♥ **Care instructions are listed in the last step of this manual**

⏱ **Approx. 60 minutes assembly time**

☑ **Make sure you have all parts and components before discarding any packing materials**

👤 **2 people recommended for assembly**

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

1	Top Panel	x1	11	Body Support Top	x2
2	Right Side Panel	x1	12	Fixed Shelf	x1
3	Left Side Panel	x1	13	Body Support Bottom	x1
4	Bottom Panel	x1	14	Drawer Base	x2
5	Back Panel	x1	15	Drawer Head	x2
6	Front Leg Panel	x1	16	Drawer Right	x2
7	Back Leg Panel	x1	17	Drawer Left	x2
8	Right Leg Panel	x1	18	Drawer Back	x2
9	Left Leg Panel	x1	19	Center Leg	x1
10	Drawer Support	x2	20	Support Leg	x2
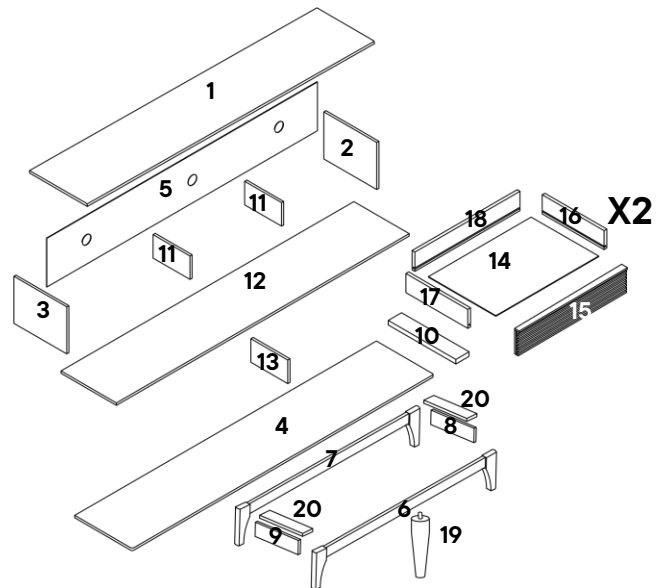
Provided hardware:

A	JCBC M6 x 80mm	x2	K	C/board Screw Ø4 x 38mm	x6
B	Wooden Dowel Ø6 x 30mm	x68	L	Hole Plug 15mm	x8
C	Cam Lock Ø15 x 12mm	x18	M	Allen Key	x1
D	Cam Bolt Ø6 x 32mm	x24	N	Drawer Runner Right	x2
E	Floor Glide B321	x4	O	C/board Runner Left	x2
F	C/board Screw Ø3.5 x 16mm	x28	P	C/board Runner Right	x2
G	JCBCW M6 x 50mm	x6	Q	Drawer Runner Left	x2
H	JCBC M6 x 60mm	x6	R	C/board Screw Ø3.5 x 20mm	x4
I	Cam Lock Ø12 x 9.9mm	x6
J	Metal Plate	x1

What you need:

⊕ **Phillip**

🪛 **Phillips Head Screwdriver**

Wait! **Missing parts or hardware? Need assistance?**
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com

Step 1

HARDWARE

B	Wooden Dowel Ø6 x 30mm	x44
E	Floor Glide B321	x4
F	C/board Screw Ø3.5 x 16mm	x4

COMPONENTS

2	Right Side Panel	x1
3	Left Side Panel	x1
6	Front Leg Panel	x1
7	Back Leg Panel	x1
8	Right Leg Panel	x1
9	Left Leg Panel	x1
11	Body Support Top	x2
12	Fixed Shelf	x1
13	Body Support Bottom	x1
20	Leg Support	x2
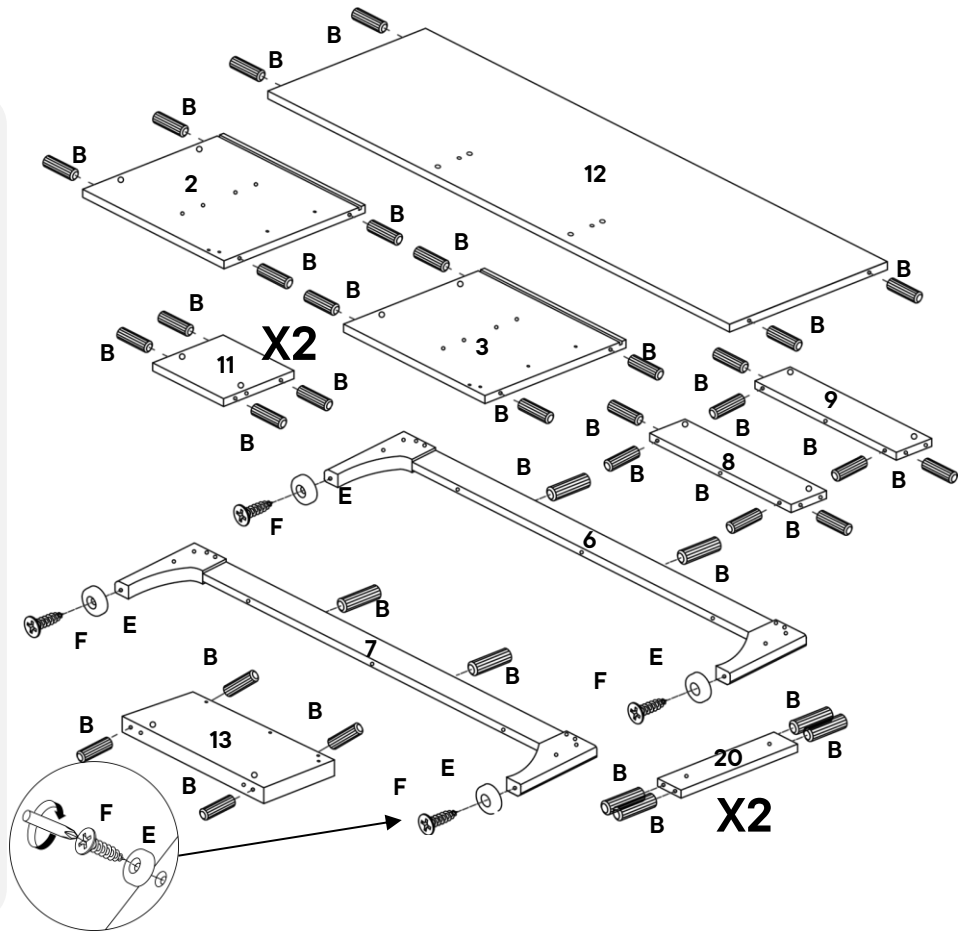
Step 2

HARDWARE

D	Cam Bolt Ø6 x 32mm	x18

COMPONENTS

1	Top Panel	x1
2	Right Side Panel	x1
3	Left Side Panel	x1
6	Front Leg Panel	x1
7	Back Leg Panel	x1
12	Fixed Shelf	x1
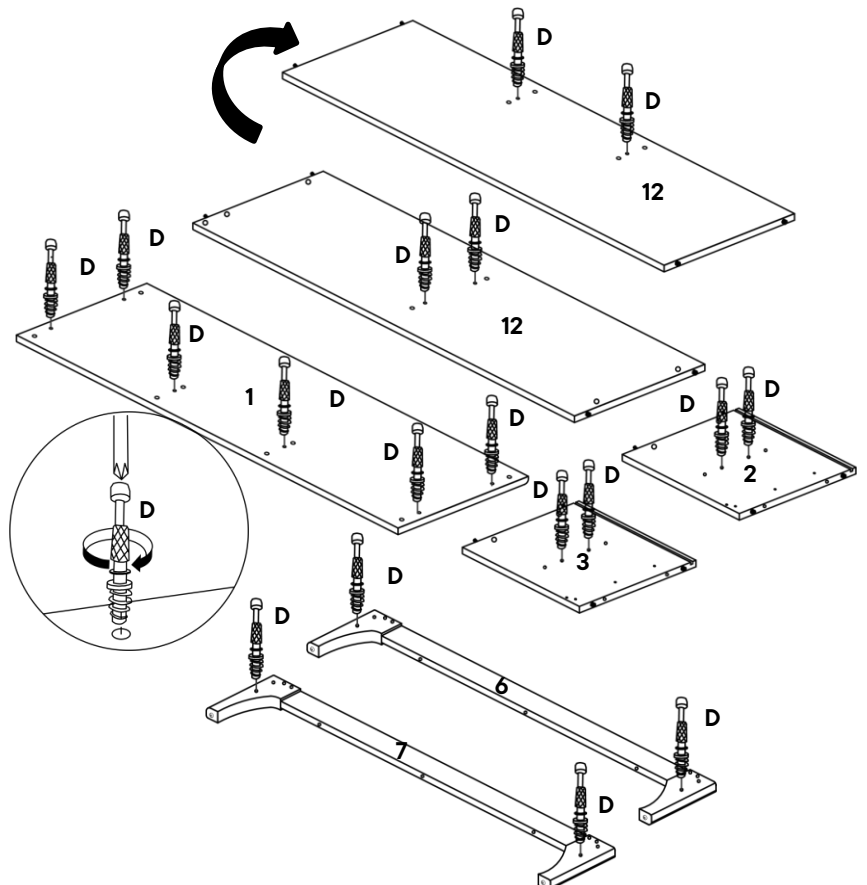
Step 3

HARDWARE

F	C/board Screw Ø3.5 x 16mm	x12
O	C/board Runner Left	x2
P	C/board Runner Right	x2

COMPONENTS

2	Right Side Panel	x1
3	Left Side Panel	x1
13	Body Support Bottom	x1
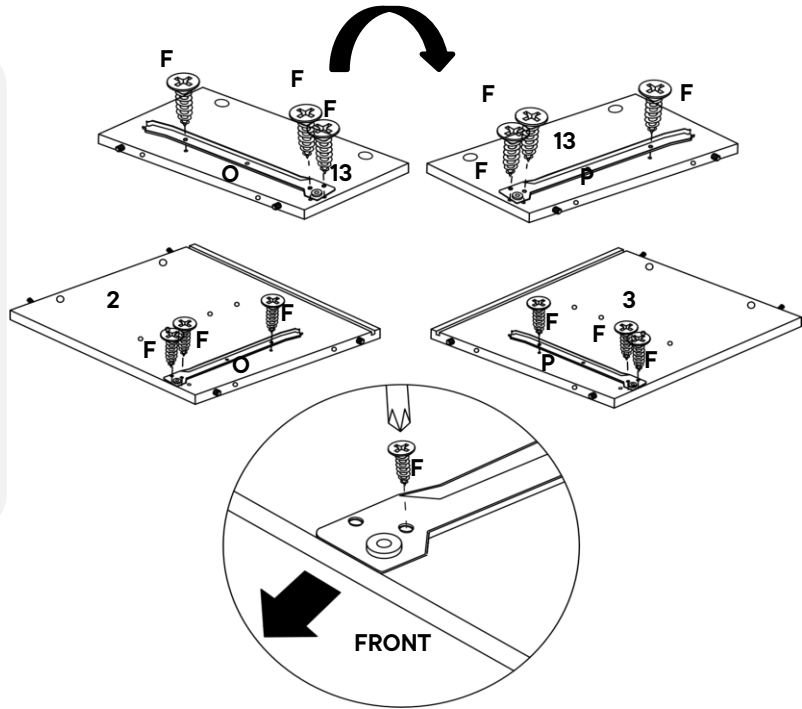
FRONT

Step 4

HARDWARE

C	Cam Lock Ø15 x 12mm	x2

COMPONENTS

6	Front Leg Panel	x1
8	Right Leg Panel	x1
9	Left Leg Panel	x1
20	Support Leg	x2

Step4.1

Step4.2

*modway
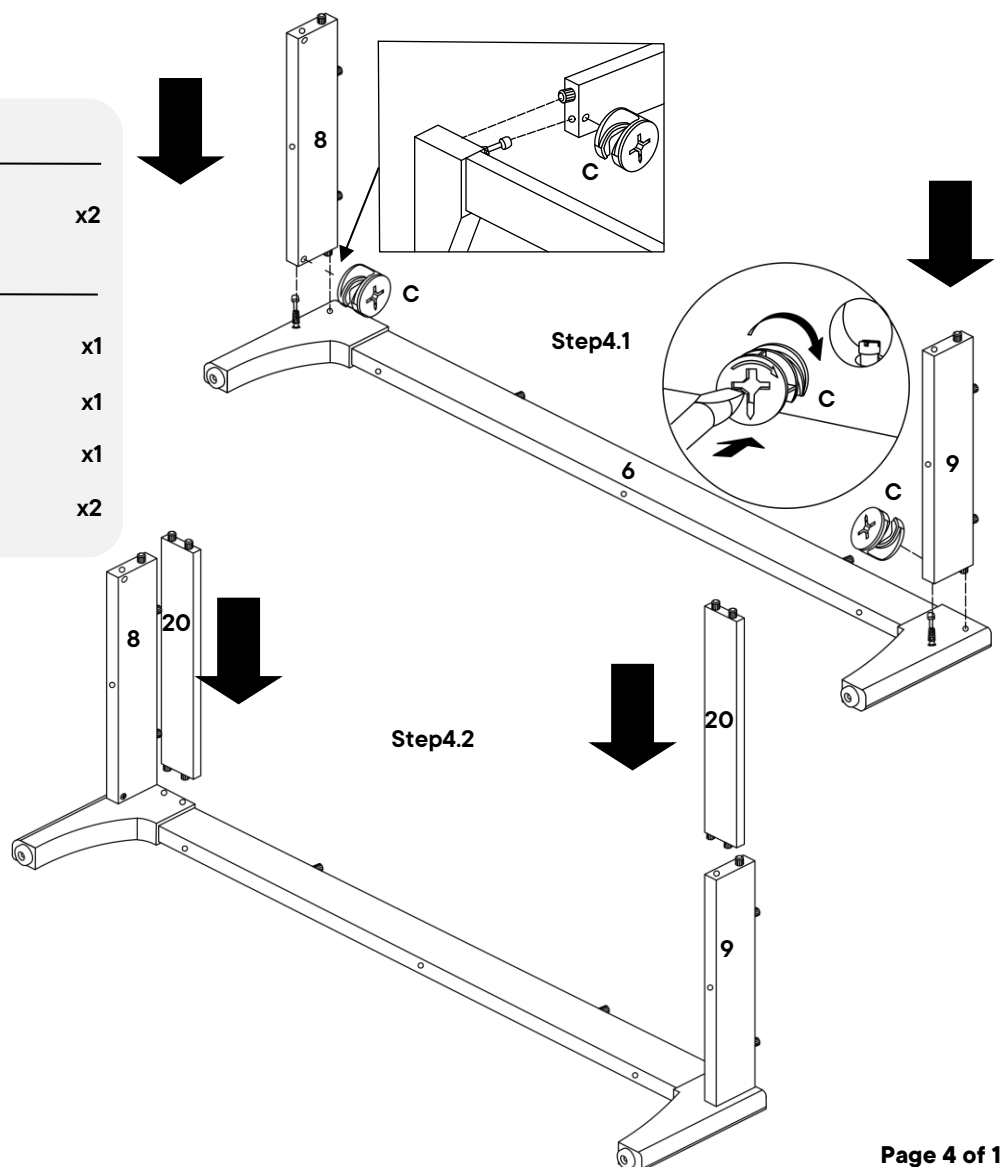
Step 5

HARDWARE

C Cam Lock Ø15 x 12mm   x2

COMPONENTS

6 Front Leg Panel   x1
7 Back Leg Panel   x1
8 Right Leg Panel   x1
9 Left Leg Panel   x1
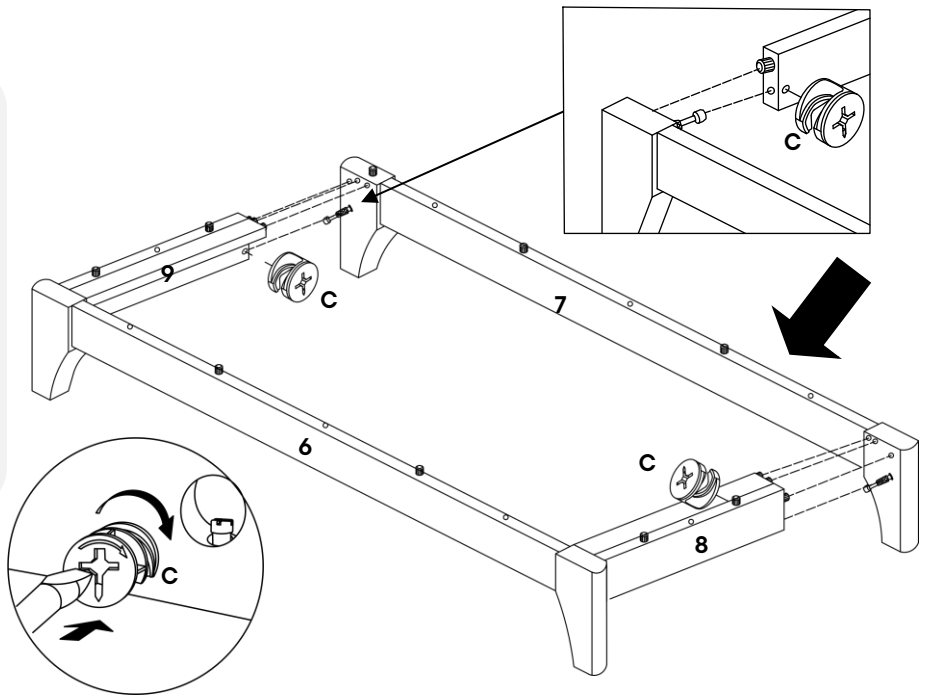
Step 6

HARDWARE

C Cam Lock Ø15 x 12mm   x2

COMPONENTS

12 Fixed Shelf   x1
13 Body Support Bottom   x1
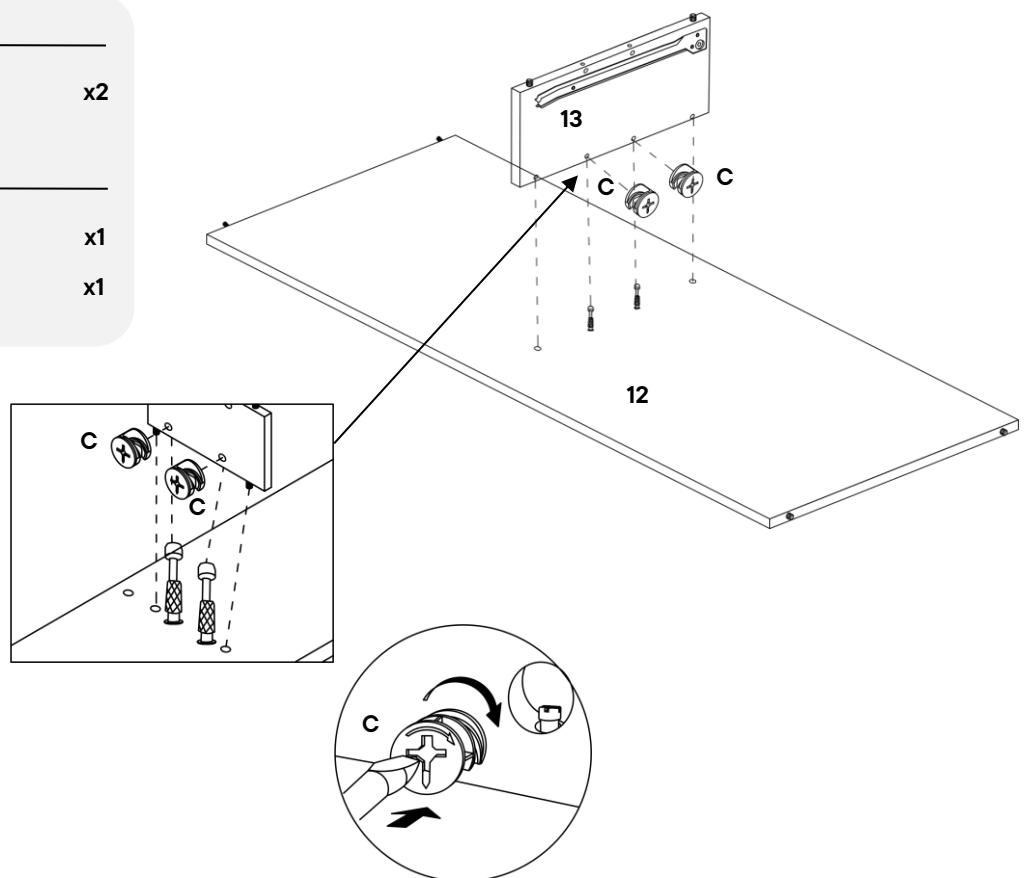
Step 7

HARDWARE

C Cam Lock Ø15 x 12mm   x4

COMPONENTS

2 Right Side Panel   x1
3 Left Side Panel   x1
12 Fixed Shelf   x1

Bottom View
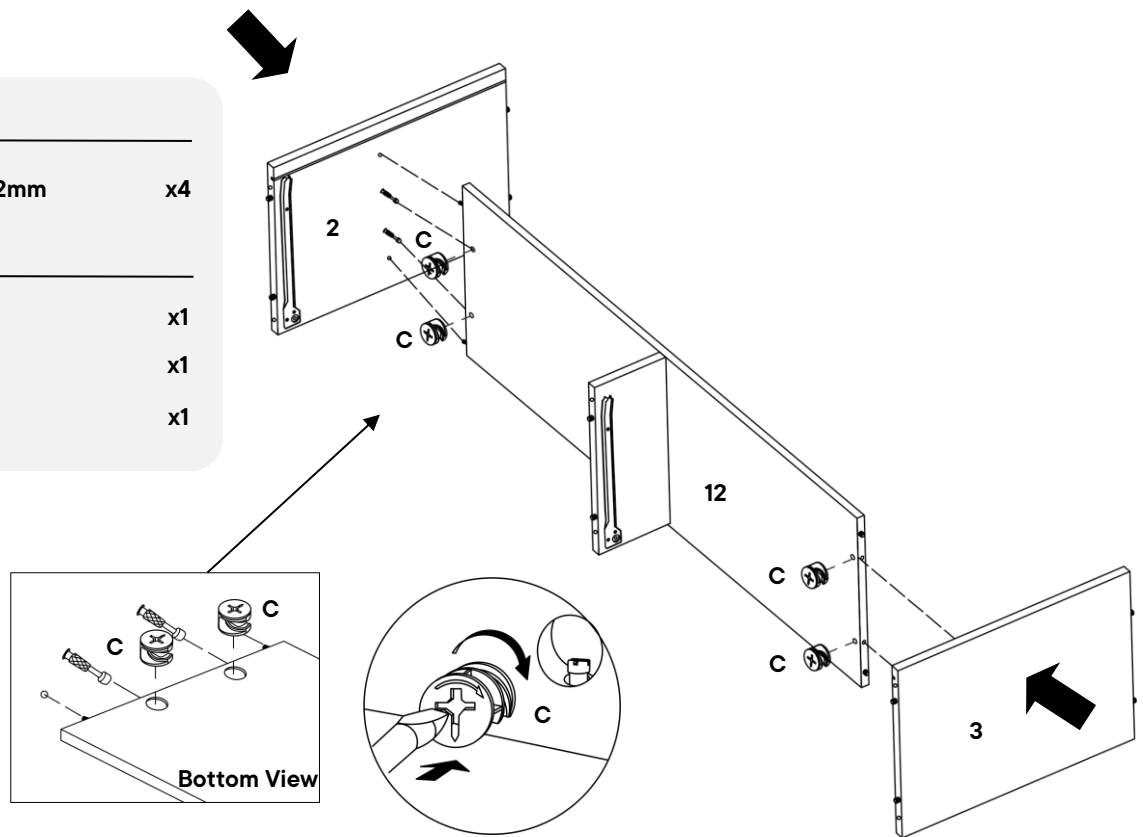
Step 8

HARDWARE

C Cam Lock Ø15 x 12mm   x2
L Hole Plug 15mm   x2

COMPONENTS

11 Body Support Top   x2
12 Fixed Shelf   x1
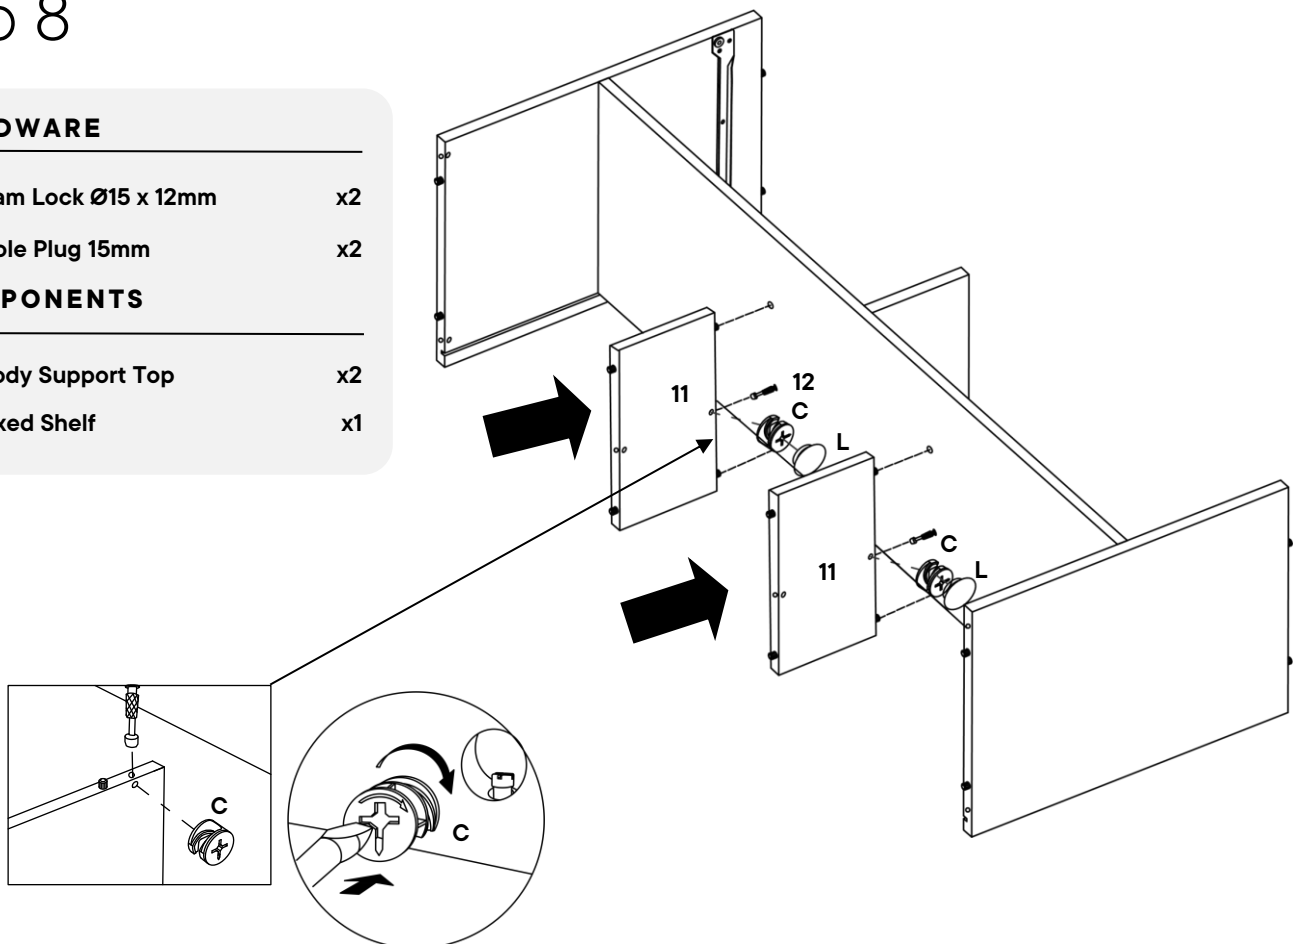
Step 9

HARDWARE

C Cam Lock Ø15 x 12mm — x6

L Hole Plug 15mm — x6

COMPONENTS

1 Top Panel — x1

2 Right Side Panel — x1

3 Left Side Panel — x1

11 Body Support Top — x2
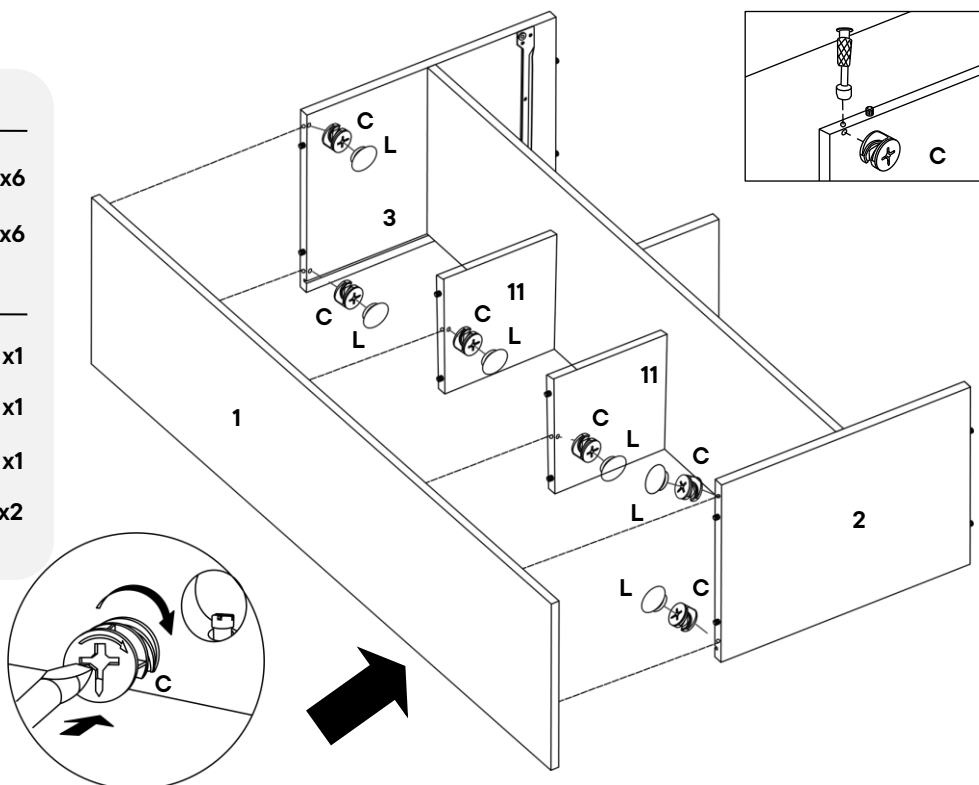
Step 10

COMPONENTS

5 Back Panel — x1
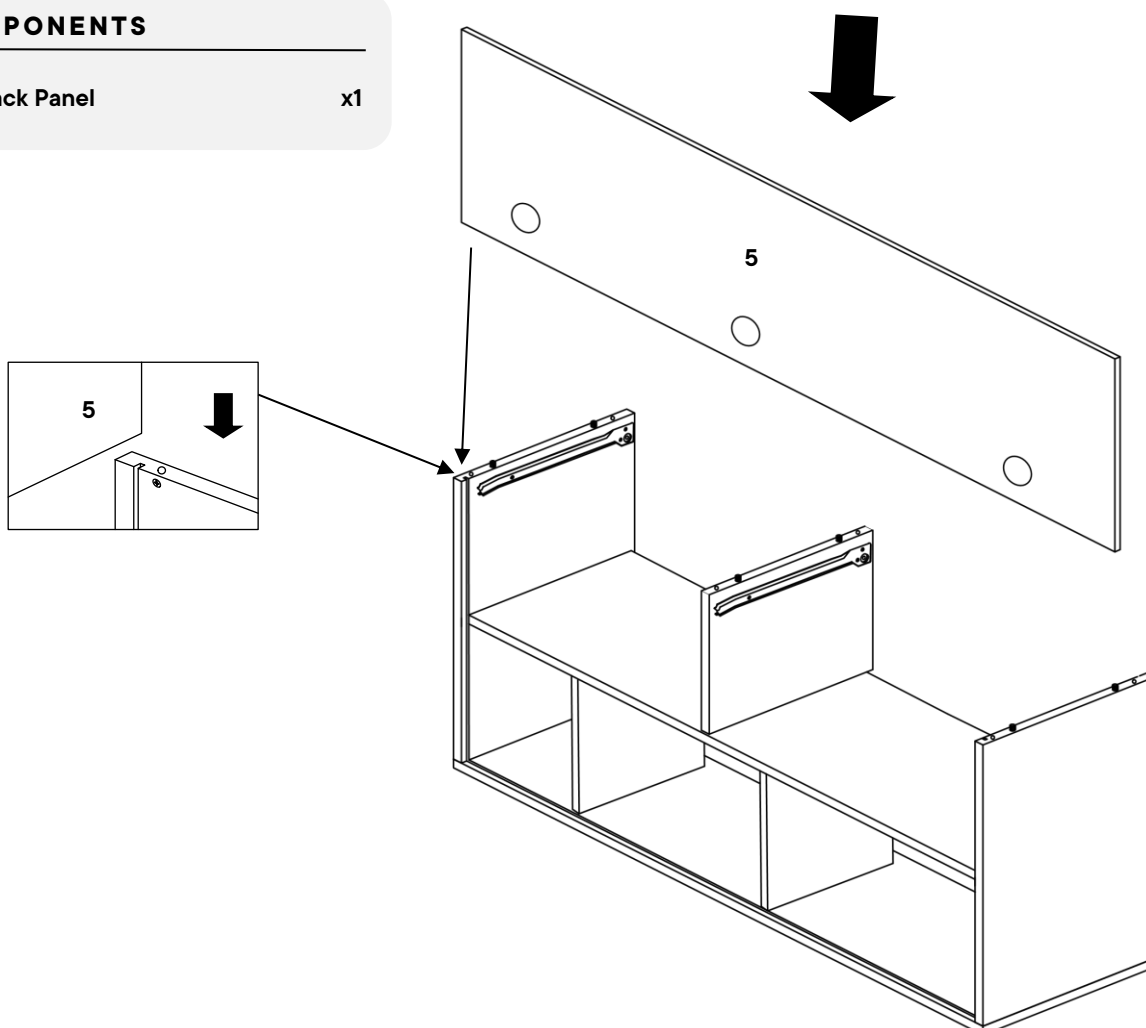
Step 11

HARDWARE

G	JCBCW M6 x 50mm	x6
M	Allen Key	x1

COMPONENTS

2	Right Side Panel	x1
3	Left Side Panel	x1
4	Bottom Panel	x1
13	Body Support Bottom	x1
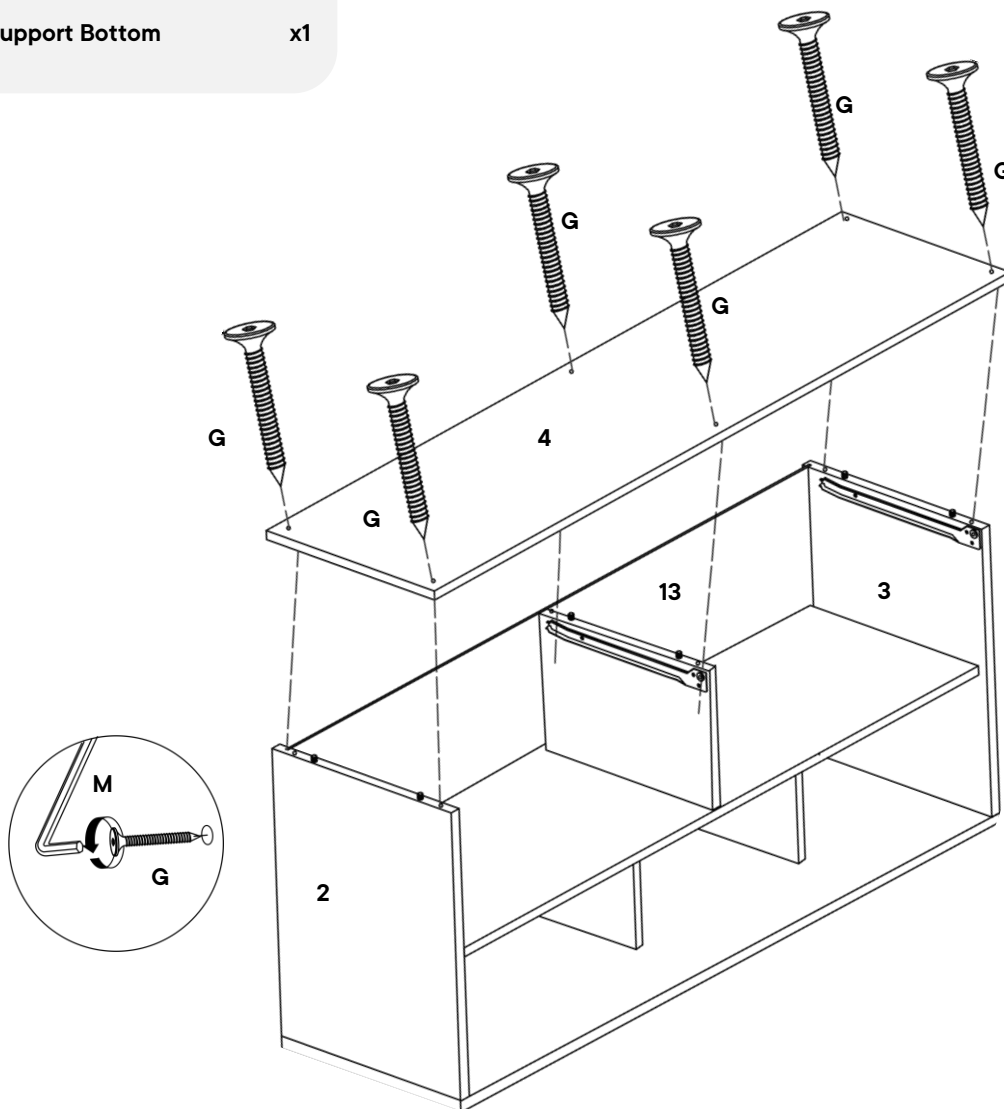
Step 12

HARDWARE

A	JCBC M6 x 80mm	x2
H	JCBC M6 x 60mm	x6
M	Allen Key	x1

COMPONENTS

4	Bottom Panel	x1
6	Front Leg Panel	x1
7	Back Leg Panel	x1
8	Right Leg Panel	x1
9	Left Leg Panel	x1
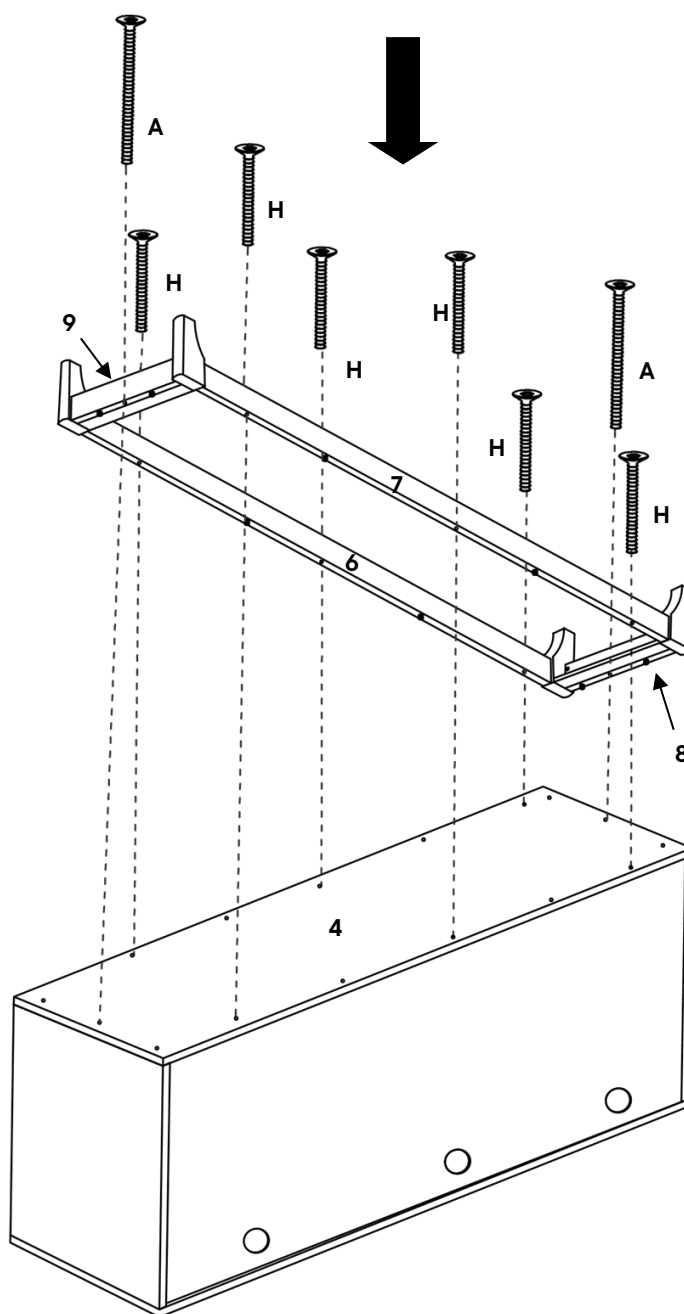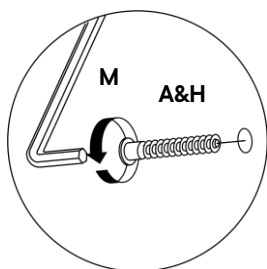
Step 13

HARDWARE

J	Metal Plate	x1
R	C/board Screw Ø3.5 x 20mm	x4

COMPONENTS

4	Bottom Panel	x1
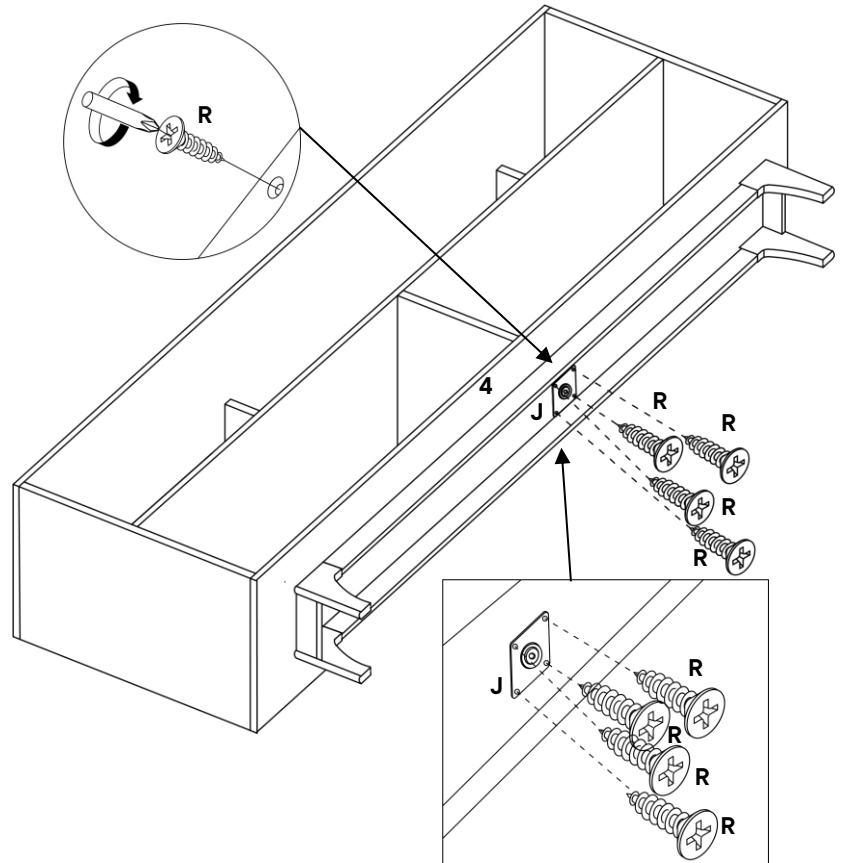
Step 14

HARDWARE

J	Metal Plate	x1

COMPONENTS

4	Bottom Panel	x1
19	Center Leg	x1

Remove the Protective Cap Before Installation
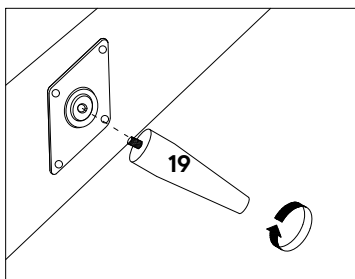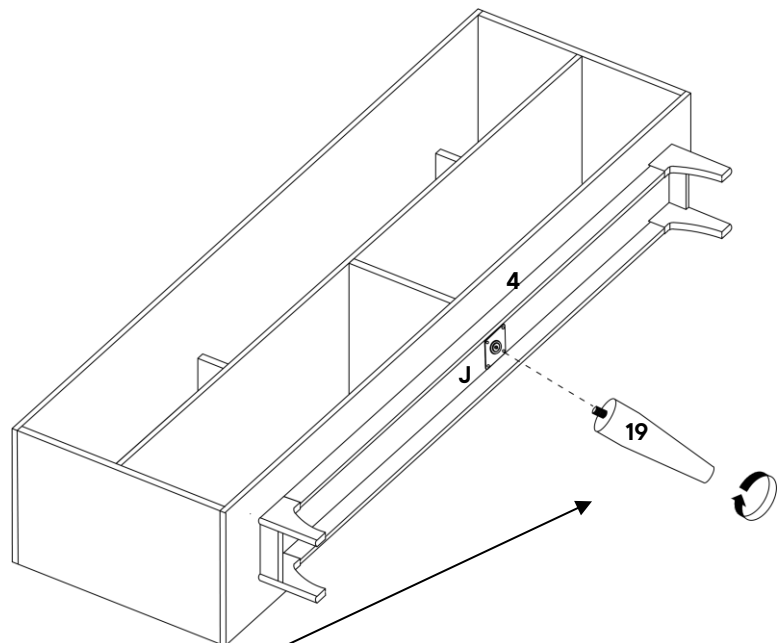
Step 15

HARDWARE

B	Wooden Dowel Ø6 x 30mm	x24
D	Cam Bolt Ø6 x 32mm	x6

COMPONENTS

10	Drawer Support	x2
15	Drawer Head	x2
16	Drawer Right	x2
17	Drawer Left	x2
18	Drawer Back	x2
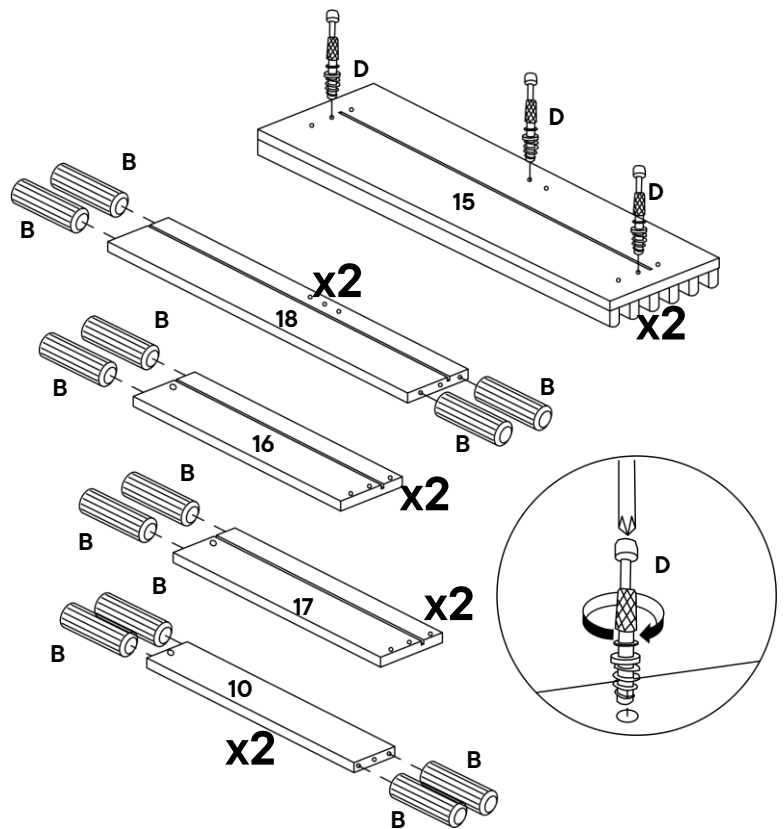
Step 16

HARDWARE

K	C/board Screw Ø4 x 38mm	x6

COMPONENTS

10	Drawer Support	x2
16	Drawer Right	x2
17	Drawer Left	x2
18	Drawer Back	x2

Front View

Unfinished Surface

Back View

Laminated Surface
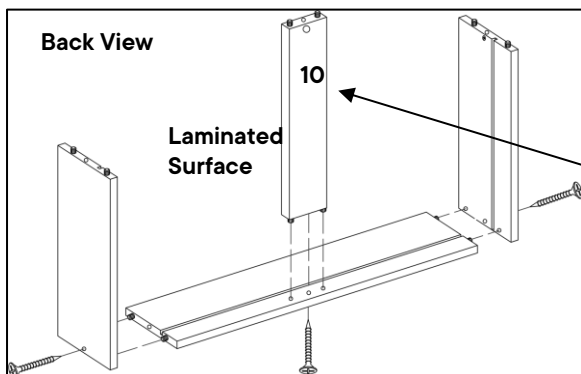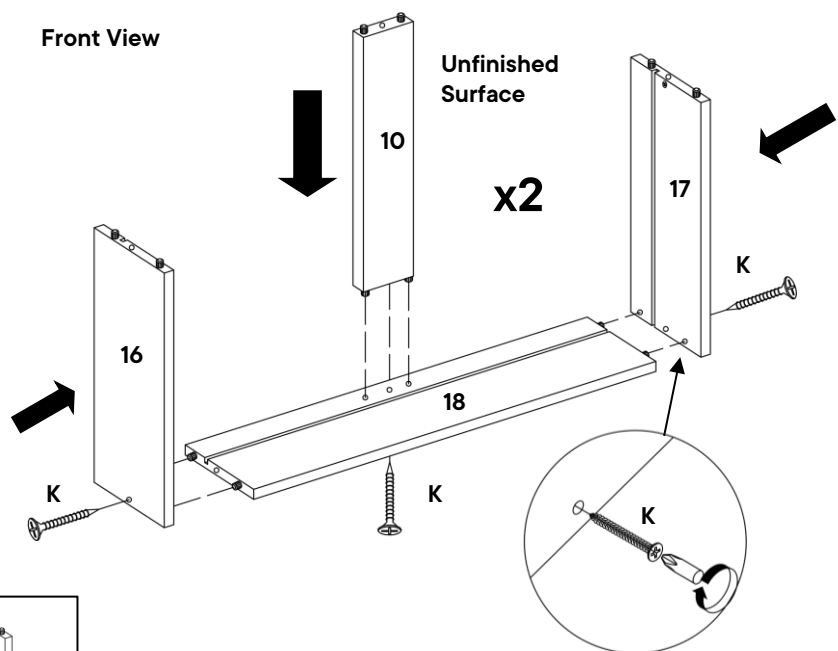
Step 17

HARDWARE

I	Cam Lock Ø12 x 9.9mm	x6

COMPONENTS

10	Drawer Support	x2
14	Drawer Base	x2
15	Drawer Head	x2
16	Drawer Right	x2
17	Drawer Left	x2
18	Drawer Back	x2

Step 17.1

Step 17.2
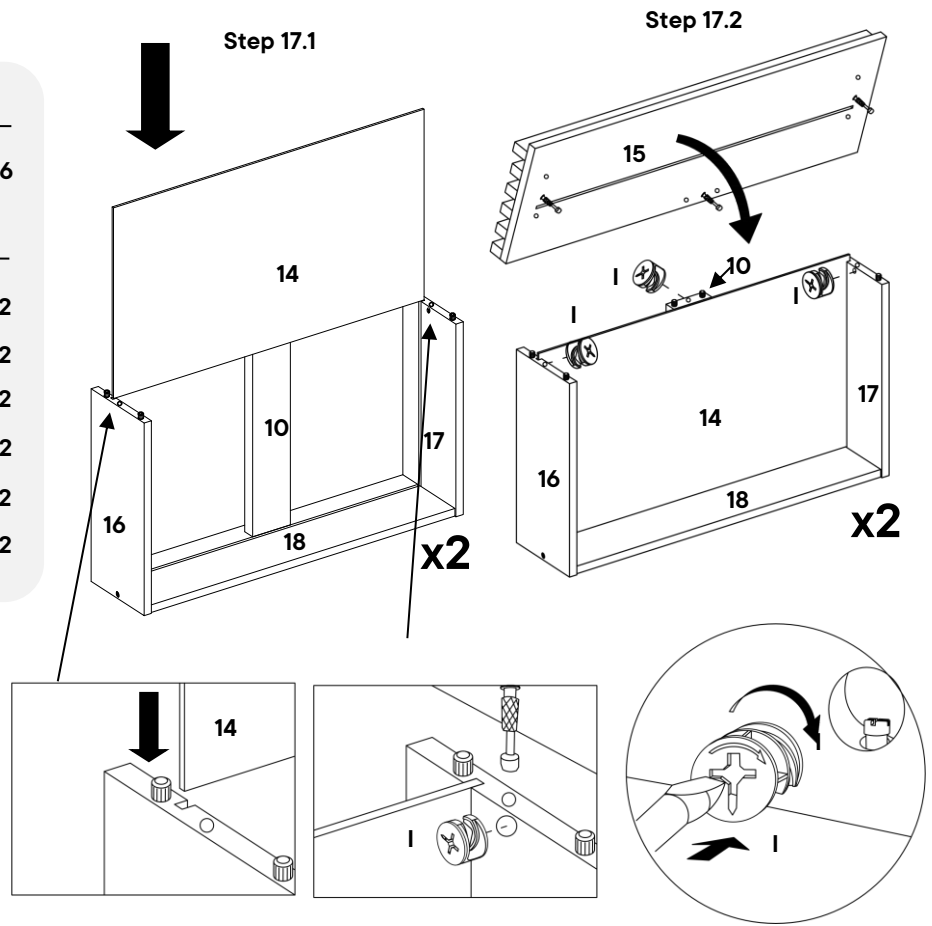
Step 18

HARDWARE

F	C/board Screw Ø3.5 x 16mm	x12
N	Drawer Runner Right	x2
Q	Drawer Runner Left	x2

COMPONENTS

16	Drawer Right	x2
17	Drawer Left	x2
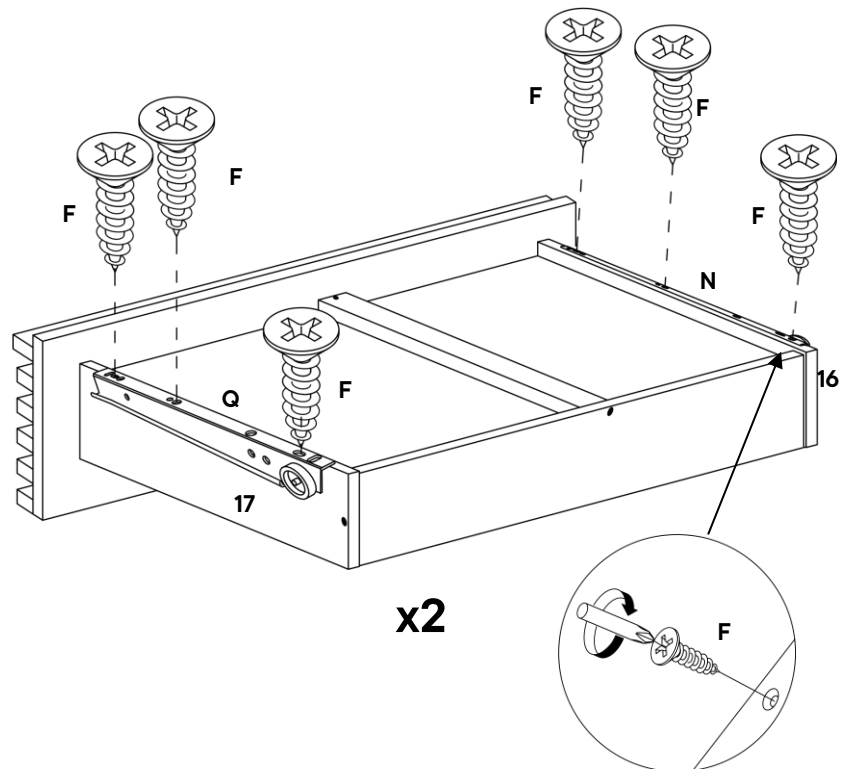
Step 19
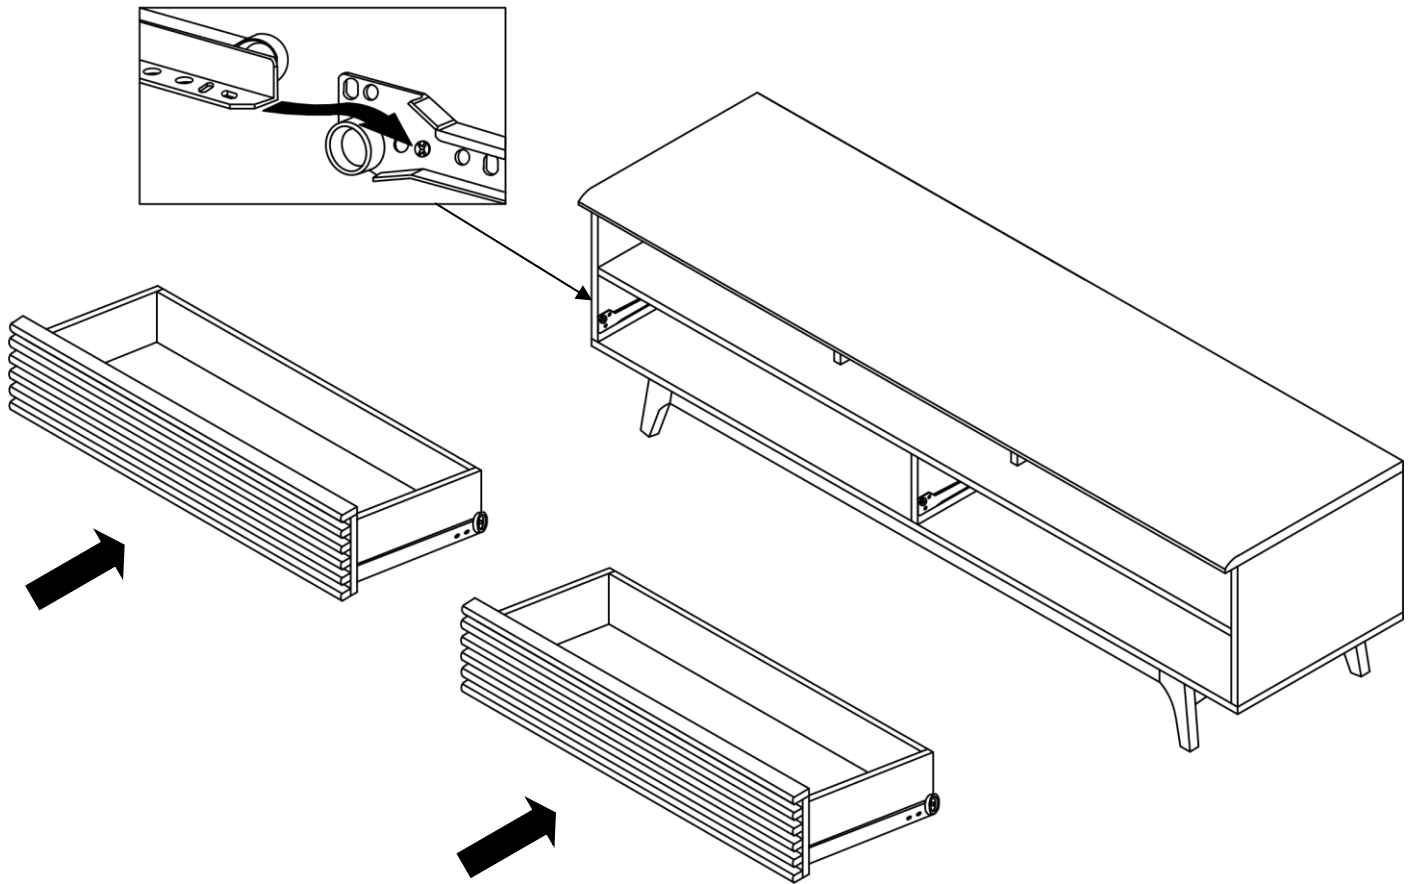
Great job

Tv Stand assembly is complete.

♡ CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth
and a mild cleaner

Never use harsh chemicals,
as they could damage the finish or
integrity of the item.

CONNECT WITH US! 📷 f 📌

Tag us **@modway_furniture** and
#modway for a chance to be featured.

Max 77 lb / 35 kgs

Max 22lb / 9.9kgs