ASSEMBLY INSTRUCTIONS

EEI-6230

V1. 12.30.22

*modway

Let's get started!

*modway

Read through all of the instructions before starting

Care instructions are listed in the last step of this manual

Approx. 60 minutes assembly time

Make sure you have all parts and components before discarding any packing materials

2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

1	Top Panel	x1
2	Right Side Panel	x1
3	Left Side Panel	x1
4	Bottom Panel	x1
5	Back Panel	x3
6	Cabinet Leg Dia180mm	x4
7	Fixed Shelf A	x1
8	Fixed Shelf B	x1
9	Doors	x2
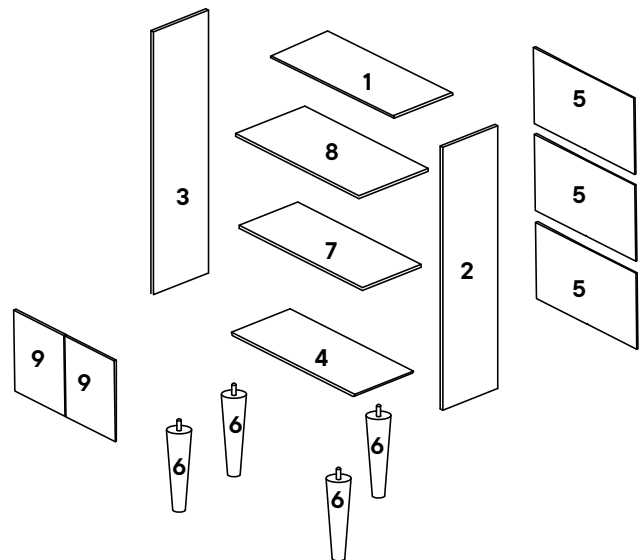
Provided hardware:

A	MS Screw Ø4 x 20mm	x2
B	Wooden Dowel Ø6 x 30mm	x16
C	Cam Lock Ø15 x 12mm	x16
D	Cam Bolt Ø6 x 32mm	x16
E	Handles Knobs	x2
F	C/board Screw Ø3.5 x 16mm	x26
G	Support Leg	x4
H	L Plate 2 Holes	x1
I	Plastic Corner Block	x12
J	C/board Screw Ø4 x 32mm	x16

K	C/board Screw Ø4 x 19mm	x12
L	Anti Tipping Kits	x1
M	Soft-Close Hinges 7/8	x4
N	Cam Lock Cap (1042)	x8

What you need:

Phillip — Phillips Head Screwdriver

Wait! **Missing parts or hardware? Need assistance?**
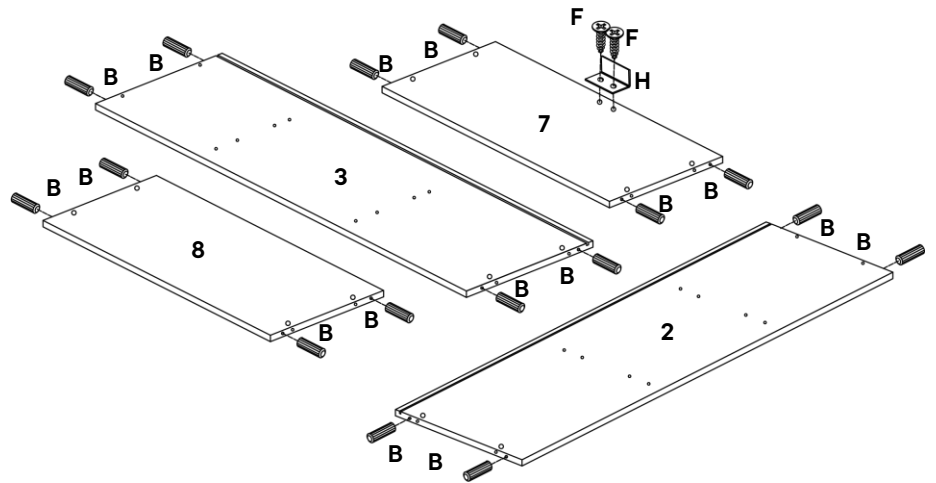Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com

Step 1

HARDWARE

B	Wooden Dowel Ø6 x 30mm	x16
F	C/board Screw Ø3.5 x 16mm	x2
H	L Plate 2 Holes	x1

COMPONENTS

2	Right Side Panel	x1
3	Left Side Panel	x1
7	Fixed Shelf A	x1
8	Fixed Shelf B	x1

Step 2

HARDWARE

D	Cam Bolt Ø6 x 32mm	x16

COMPONENTS

1	Top Panel	x1
2	Right Side Panel	x1
3	Left Side Panel	x1
4	Bottom Panel	x1
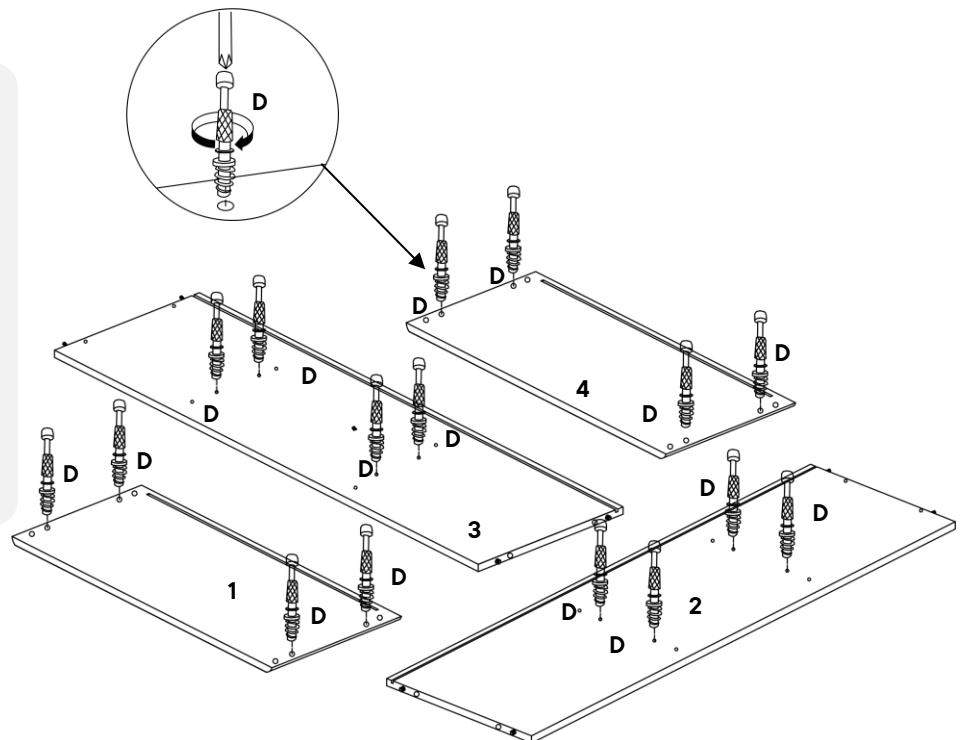
Step 3

HARDWARE

C	Cam Lock Ø15 x 12mm	x4
N	Cam Lock Cap (1042)	x2

COMPONENTS

3	Left Side Panel	x1
7	Fixed Shelf A	x1
8	Fixed Shelf B	x1

Bottom View
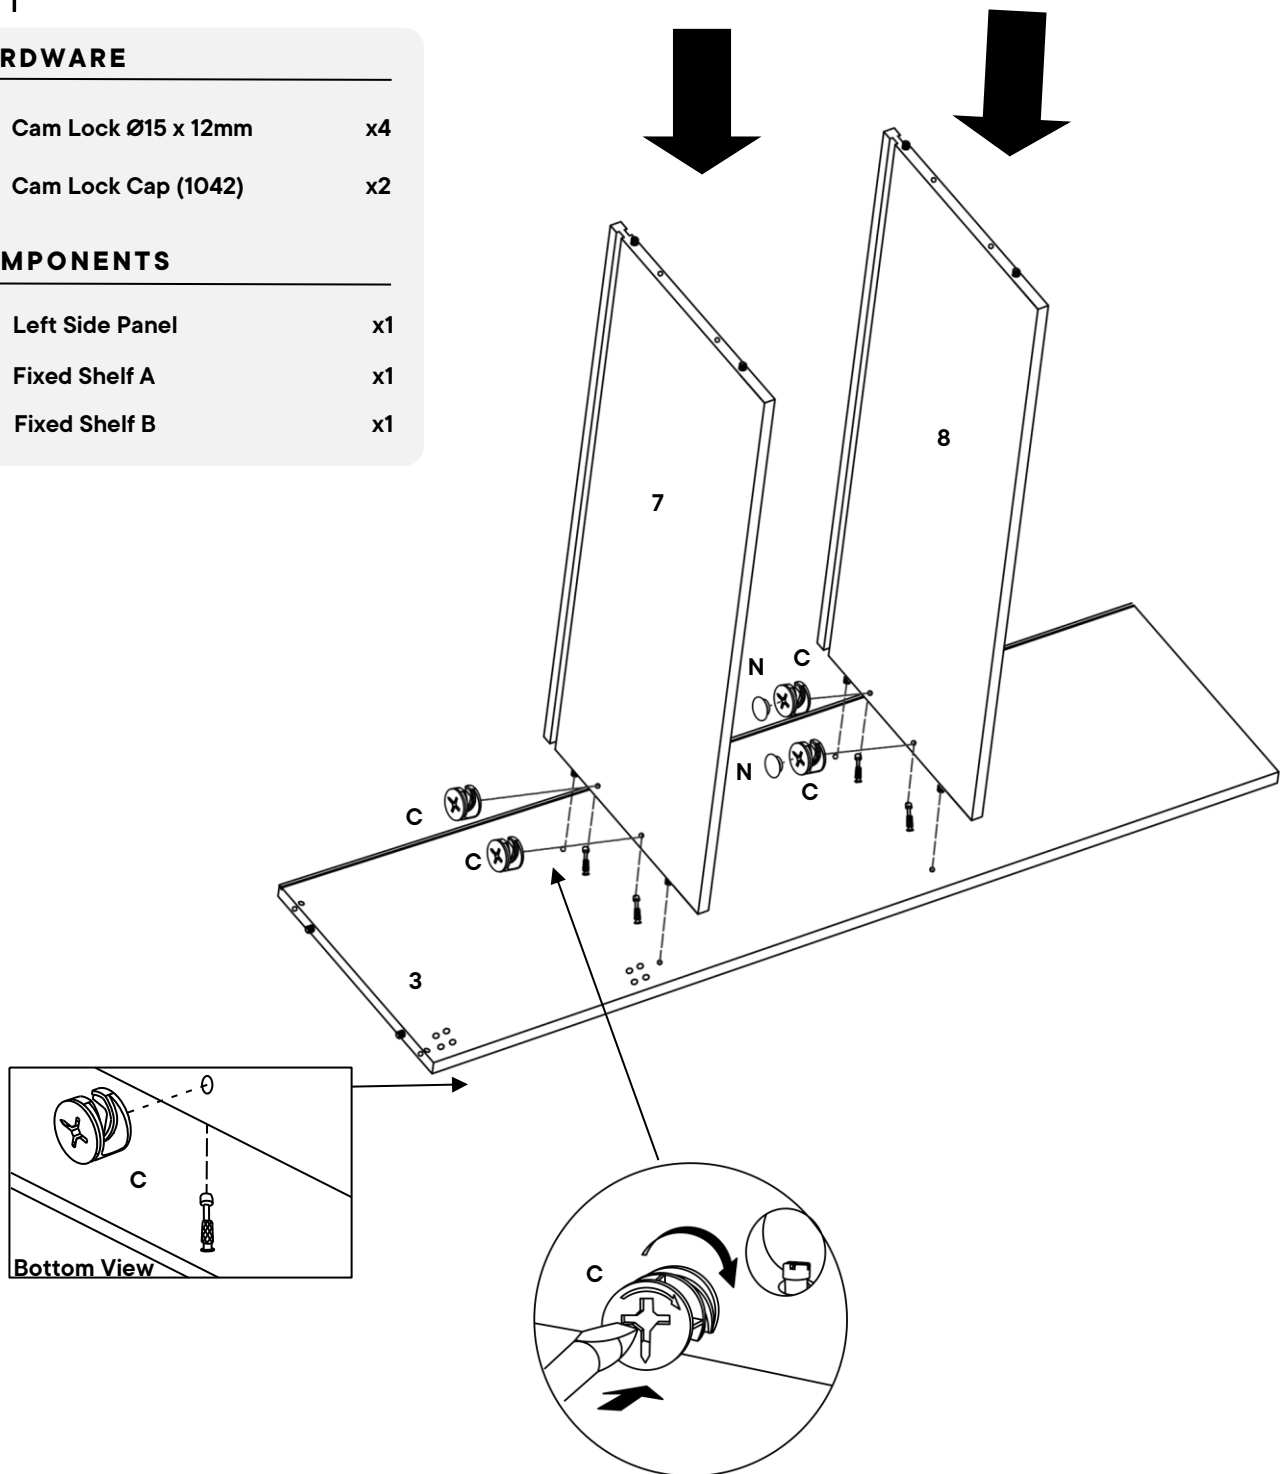
Step 4

HARDWARE

C	Cam Lock Ø15 x 12mm	x4
N	Cam Lock Cap (1042)	x2

COMPONENTS

2	Right Side Panel	x1
3	Left Side Panel	x1
5	Back Panel	x3
7	Fixed Shelf A	x1
8	Fixed Shelf B	x1

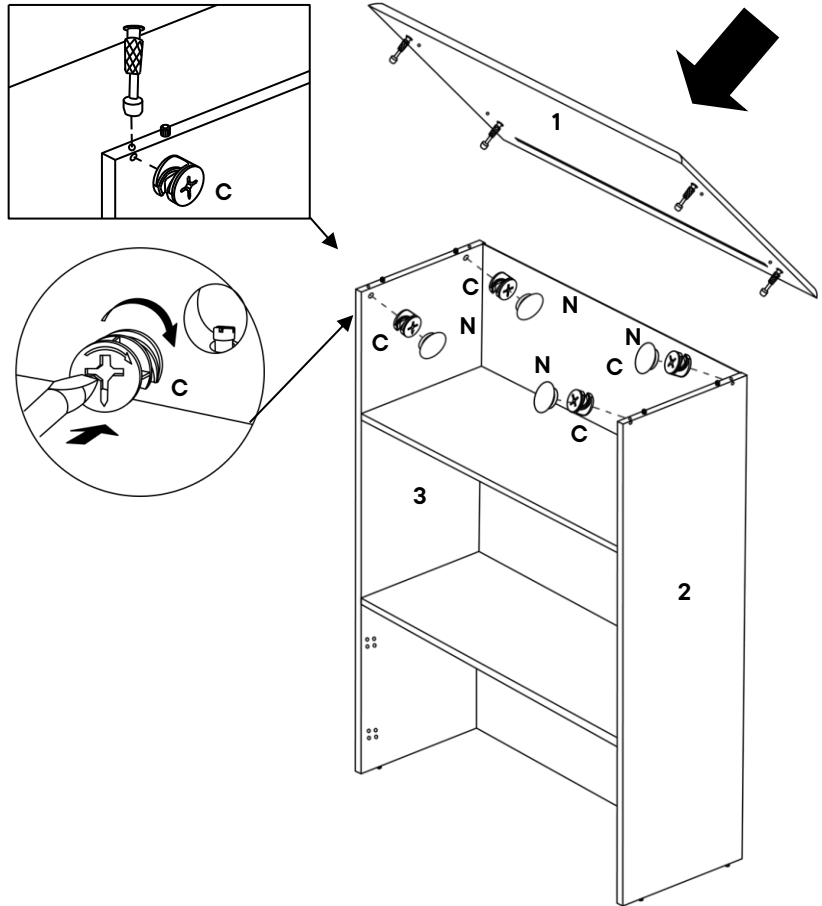**Step 4.2**

Bottom View
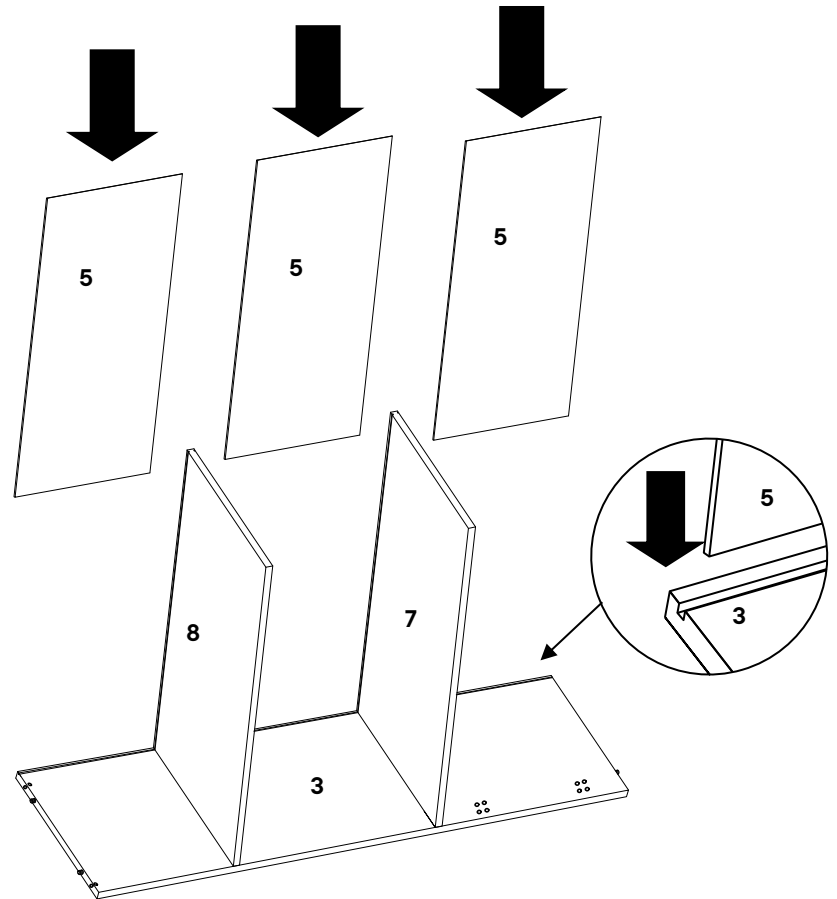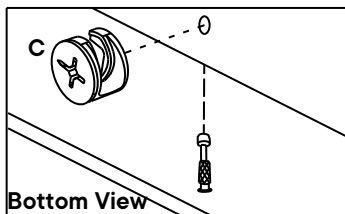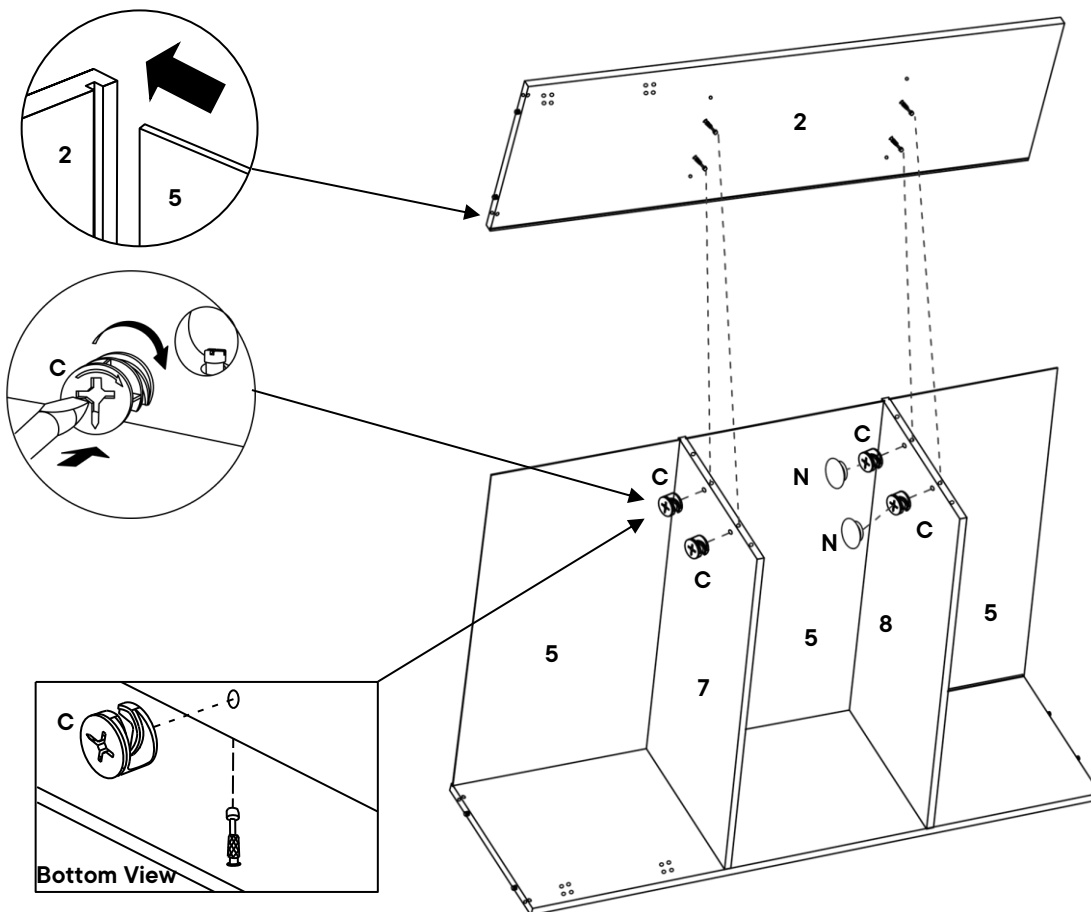
Step 5

HARDWARE

C Cam Lock Ø15 x 12mm   x4

N Cam Lock Cap (1042)   x4

COMPONENTS

1 Top Panel   x1

2 Right Side Panel   x1
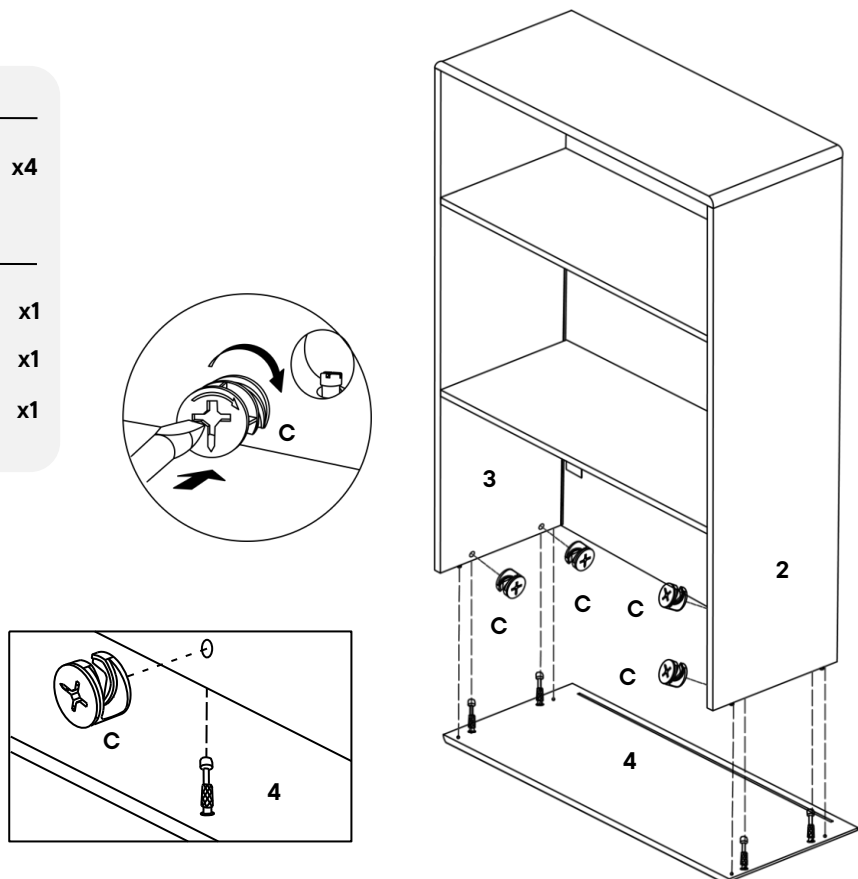
3 Left Side Panel   x1

Step 6

HARDWARE

C Cam Lock Ø15 x 12mm   x4

COMPONENTS

2 Right Side Panel   x1

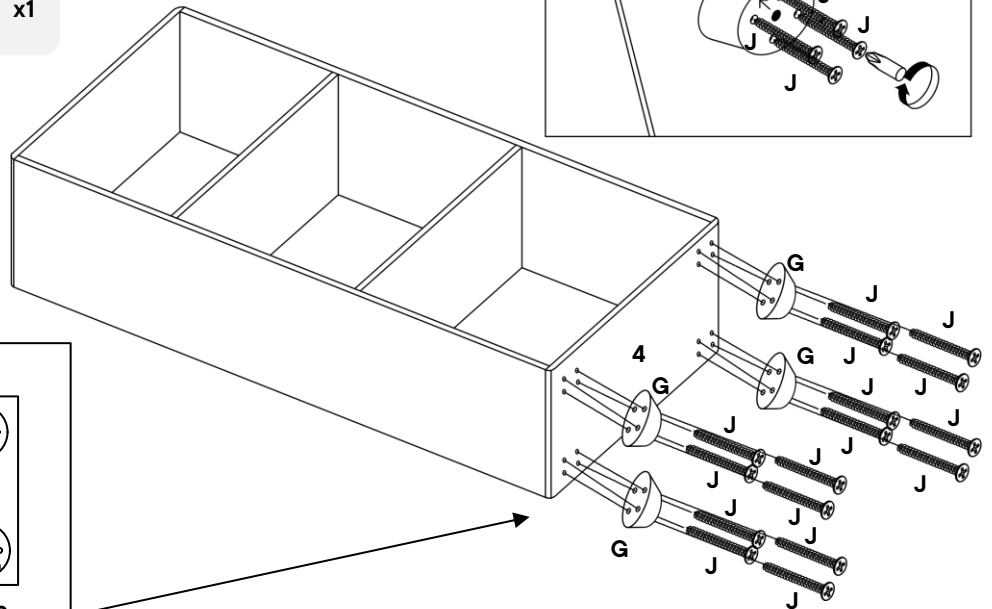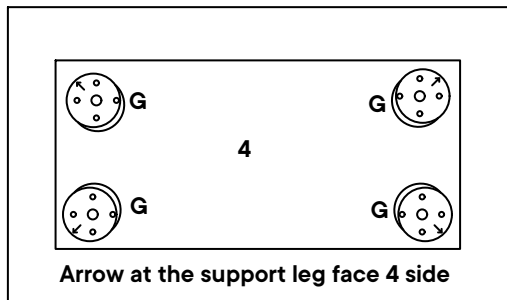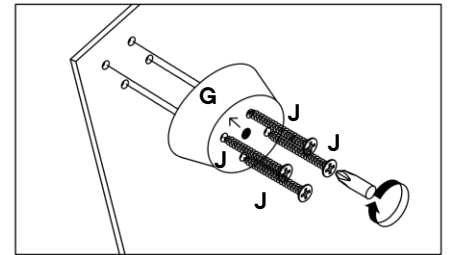**3** Left Side Panel   x1

4 Bottom Panel   x1

Step 7

HARDWARE

G Support Leg x4
J C/board Screw Ø4 x 32mm x16

COMPONENTS

4 Bottom Panel x1

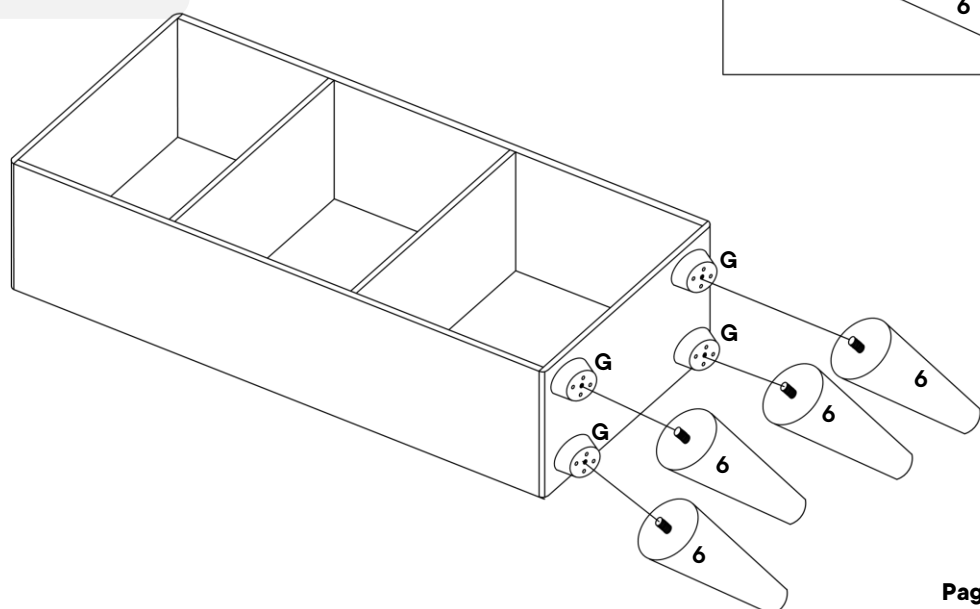**Arrow at the support leg face 4 side**

Step 8

HARDWARE

G Support Leg x4

COMPONENTS

6 Cabinet Leg Dia180mm x4

Remove the plastic cover before installation
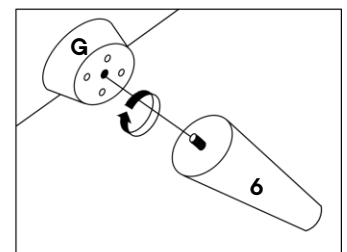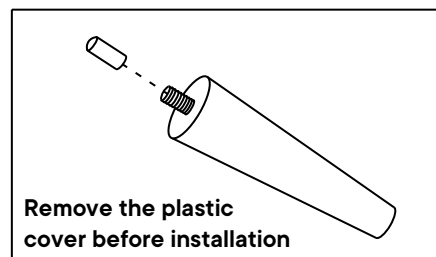
Step 9

HARDWARE

A	MS Screw Ø4 x 20mm	x2
E	Handles Knobs	x2
F	C/board Screw Ø3.5 x 16mm	x8
M	Soft Closing Hinges 7/8	x4

COMPONENTS

9	Doors	x2
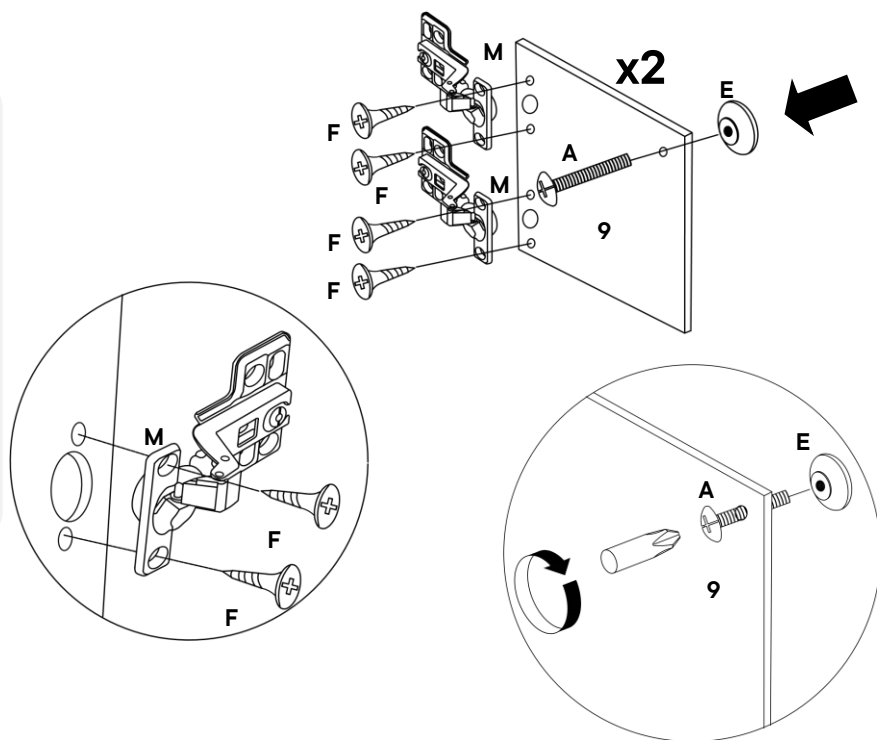
Step 10

HARDWARE

F	C/board Screw Ø3.5 x 16mm	x16
M	Soft-Close Hinges 7/8	x4

COMPONENTS

2	Right Side Panel	x1
3	Left Side Panel	x1
9	Doors	x2

Step 10.1

Step 10.2
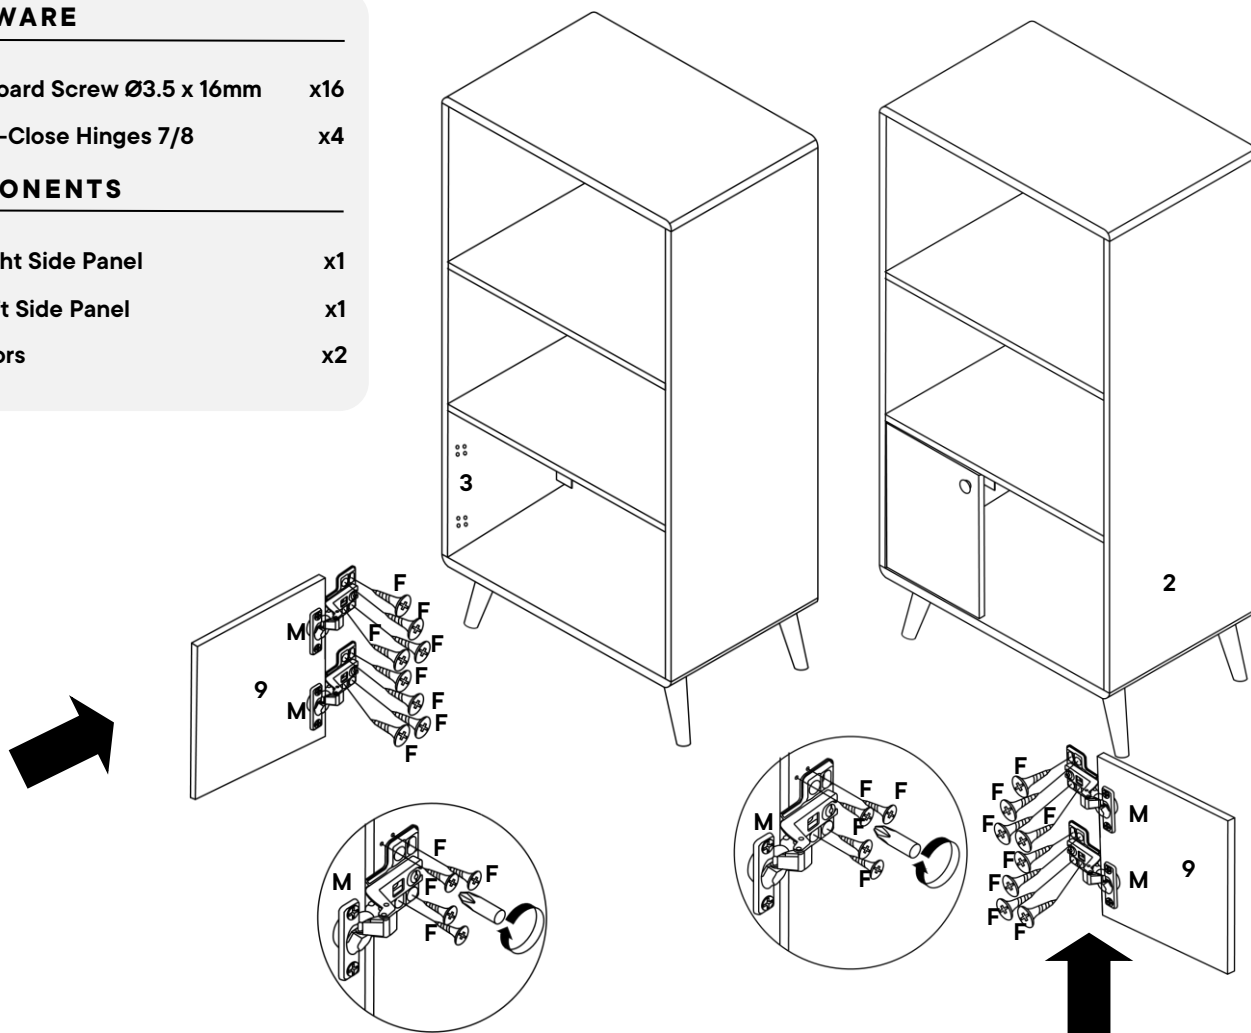
Step 11

HARDWARE

I	Plastic Corner Block	x12
K	C/board Screw Ø4 x 19mm	x12

COMPONENTS

5	Back Panel	x3
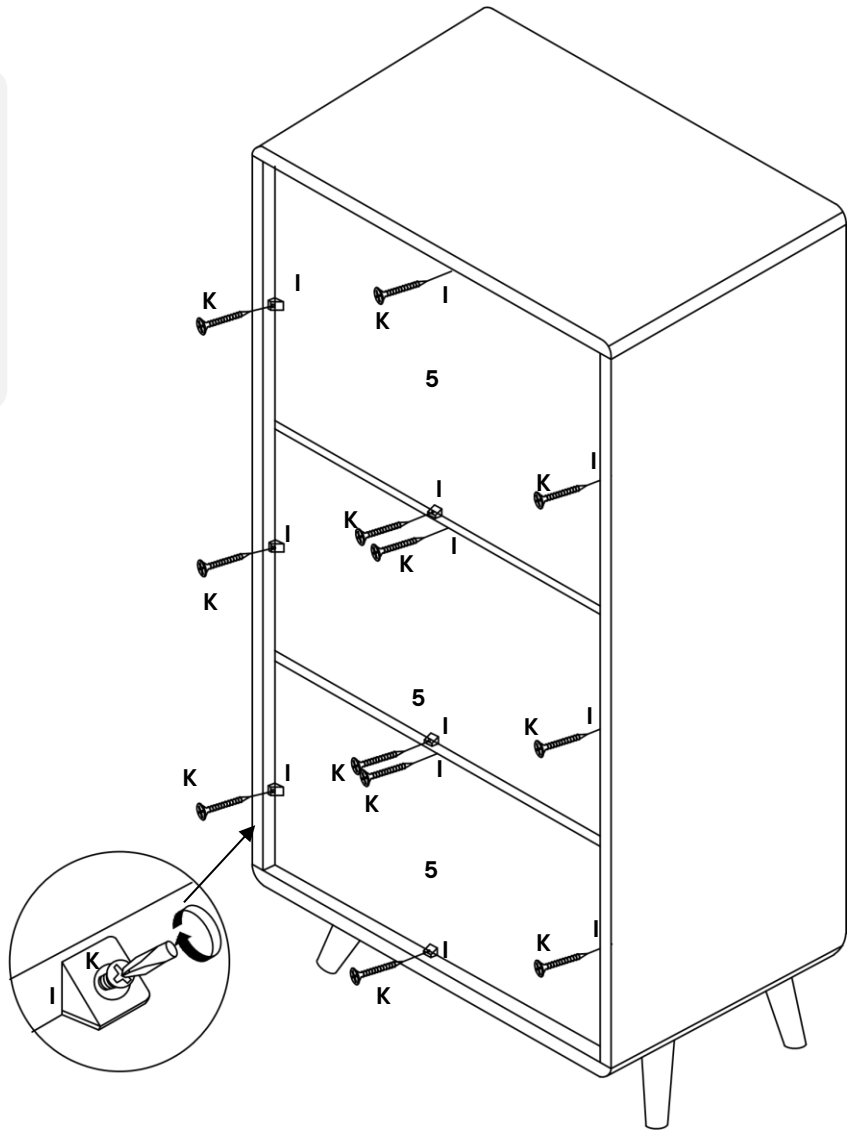
Great job

Bookshelf assembly is complete.

♡ **CARING FOR YOUR ITEM**

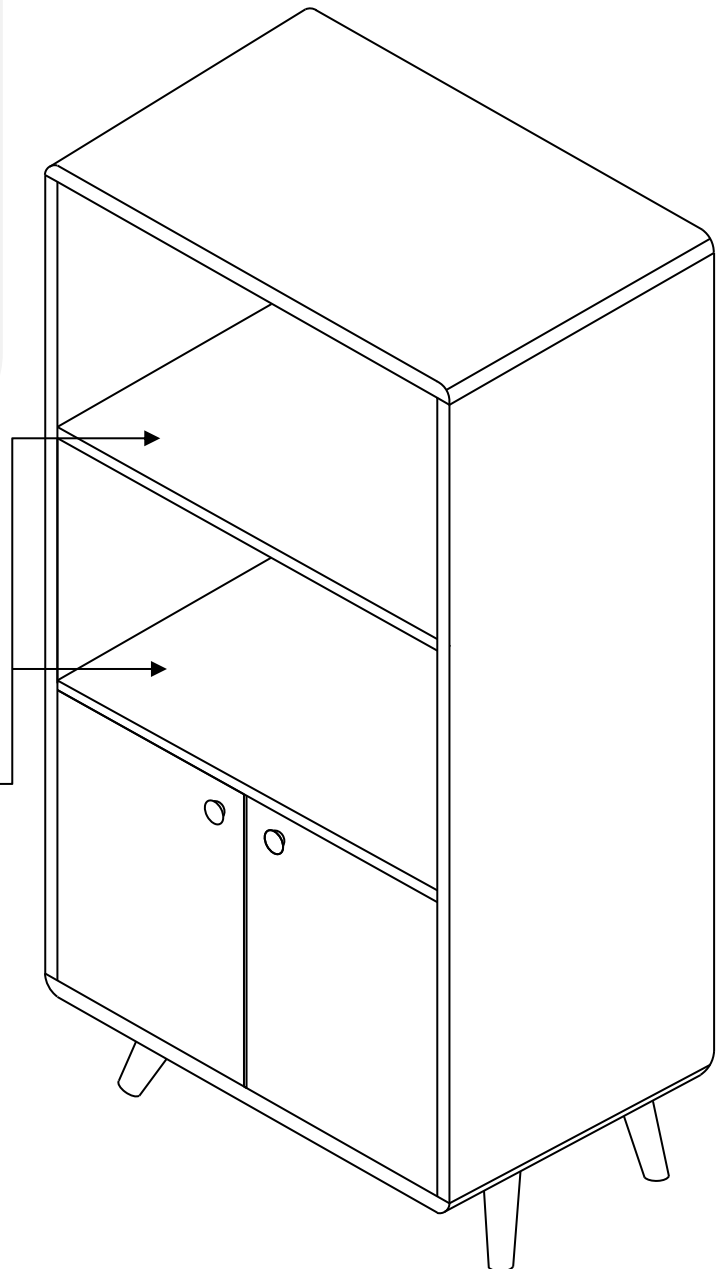Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth
and a mild cleaner

Never use harsh chemicals,
as they could damage the finish or
integrity of the item.

CONNECT WITH US! 📷 f 📌

Tag us **@modway_furniture** and
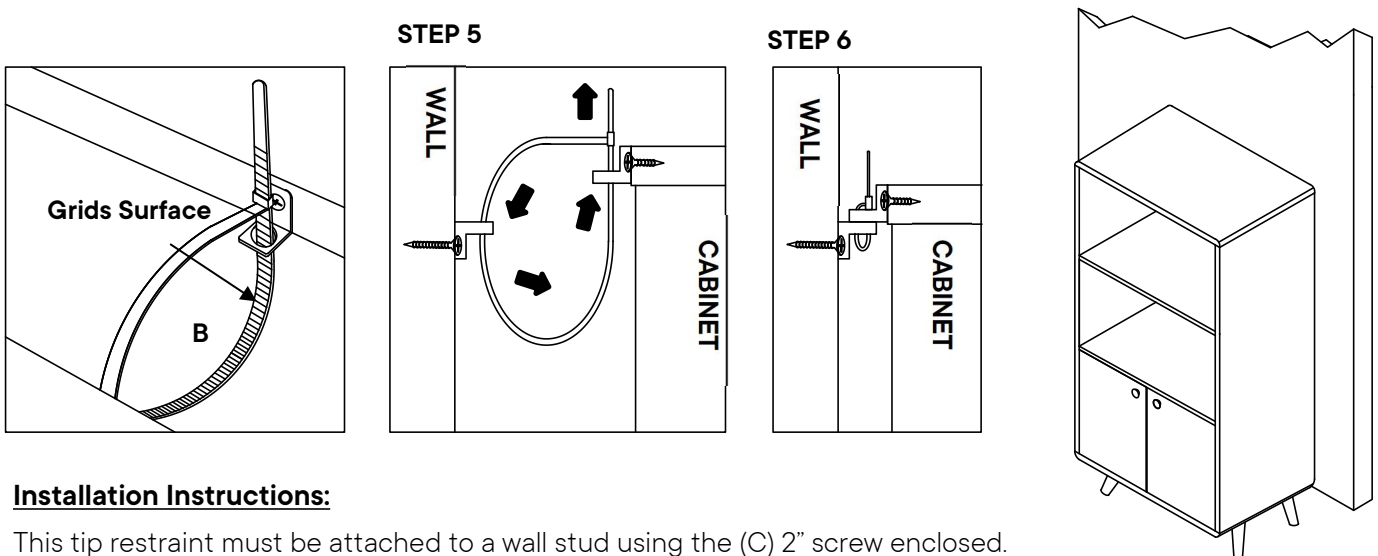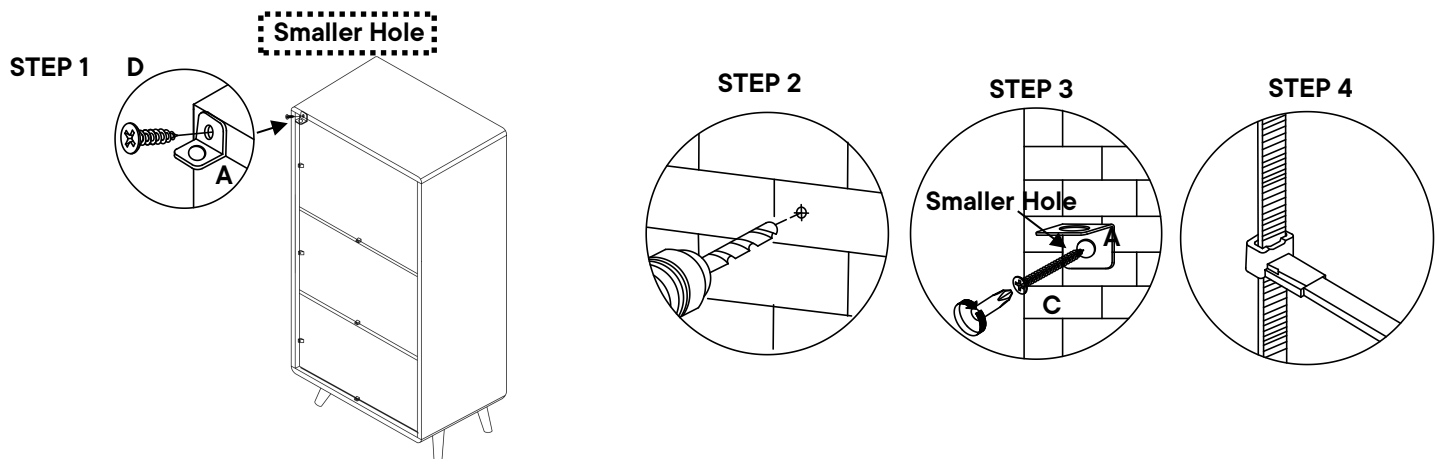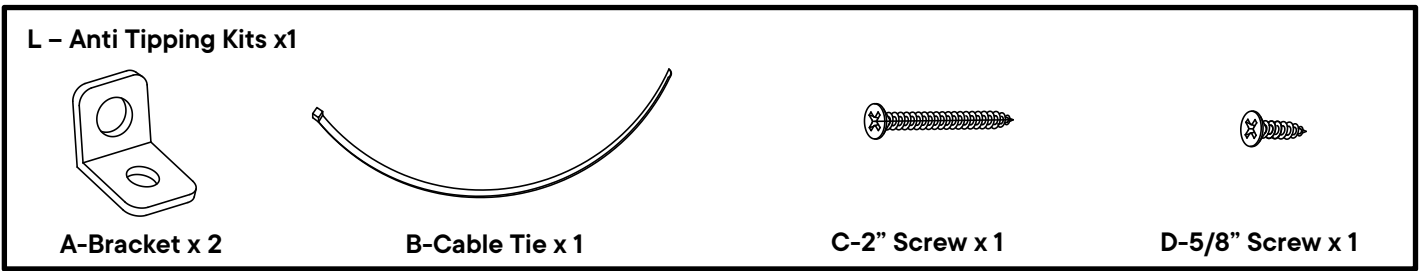
#modway for a chance to be featured.

Max : 66lbs /30kg

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

Please consult your local hardware store to ensure you are using the correct hardware for your wall type

---

L – Anti Tipping Kits x1

| A-Bracket x 2 | B-Cable Tie x 1 | C-2" Screw x 1 | D-5/8" Screw x 1 |

Smaller Hole

STEP 1 D   A

STEP 2

STEP 3 Smaller Hole C

STEP 4

STEP 5 WALL CABINET

STEP 6 WALL CABINET

Grids Surface B

Installation Instructions:

This tip restraint must be attached to a wall stud using the (C) 2" screw enclosed.

1. Attach a bracket (A) securely to the back top rail of the furniture using the 5/8" screw (D) provided, through the smaller hole.
2. Locate the other bracket (A) on the wall over a wall stud and 2 inches below the mounting bracket secured to the back of your unit. Attach to the wall stud using the (C) 2" screw provided, through the smaller hole.
3. Place the furniture into position so both mounting brackets are vertically in line.
4. Lace the end of the restraint strap (B) through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Confirm that the strap (B) is securely laced and locked.