ASSEMBLY INSTRUCTIONS
EEI-6604

V0.02.08.23
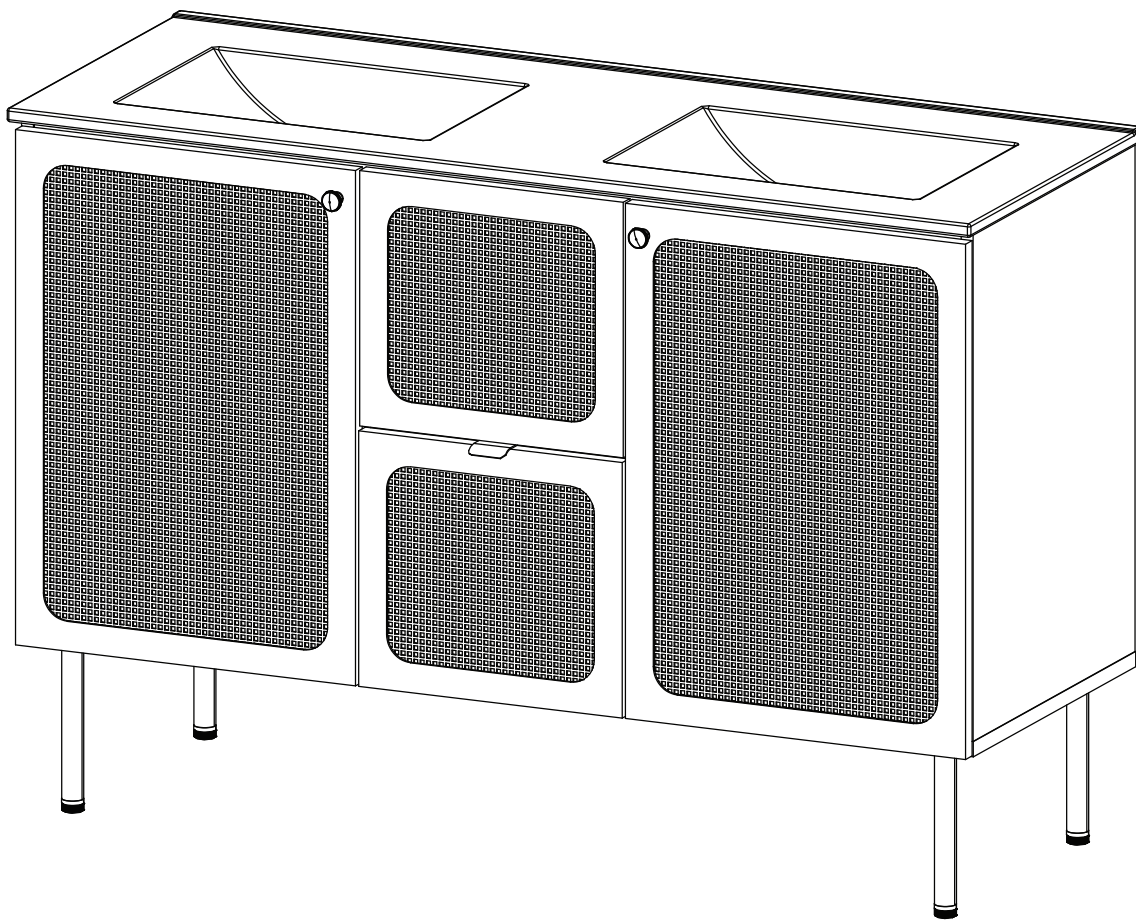
Read through all of the instructions before starting

Care instructions are listed in the last step of this manual

Approx. 120 minutes assembly time

Make sure you have all parts and components before discarding any packing materials

2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

For vanity and plumbing installation, we suggest hiring a professional contractor and plumber.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

#	Component	Qty	#	Component	Qty	#	Component	Qty
1	Bottom Board	x1	10	Side Drawer Left	x1	19	Door Right	x1
2	Side Board Left	x1	11	Side Drawer Right	x1			
3	Side Board Right	x1	12	Back Drawer	x1			
4	Center Board Left	x1	13	Bottom Drawer	x1			
5	Center Board Right	x1	14	Fake Front Drawer	x1			
6	Support Board 1	x1	15	Support Board 3	x1			
7	Adjustable Shelf	x2	16	Back Board 1	x1			
8	Support Board 2	x2	17	Back Board 2	x1			
9	Front Drawer	x1	18	Door Left	x1			

Provided hardware:
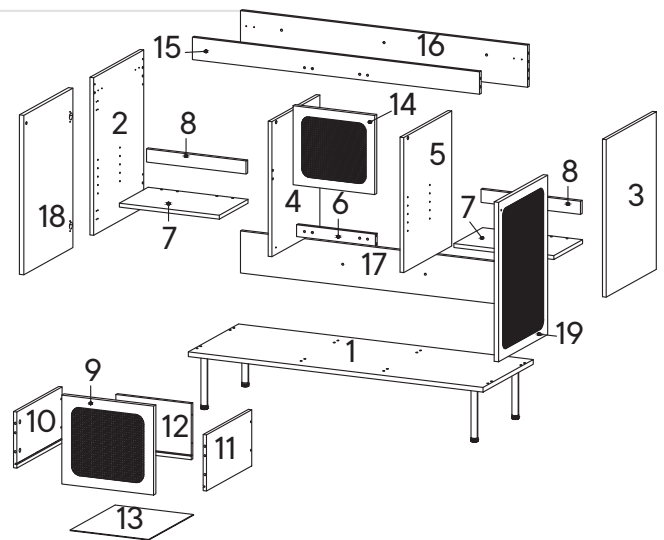
ID	Name	Qty	ID	Name	Qty	ID	Name	Qty
A	Cam Bolt Ø6 x 35 mm	x14	L	Screw M 8 x 39 mm	x4	W	Screw M 4 x 13 mm	x2
B	Cam Lock Ø15 mm	x10	M	Screw M 4.5 x 12.5 mm	x60	X	Silicon Bumper	x4
C	Cam Lock Ø12 mm	x4	N	JCN Nut	x2	RM35A	Drawer Runner	x1
D	Wood Dowel Ø8 x 30 mm	x28	O	Screw M 6 x 15 mm	x2	BO45	Bracket	x2
E	Wood Dowel Ø6 x 30 mm	x2	P	Screw M 3.5 x 13 mm	x6	BC67	Bracket	x4
F	Wood Dowel Ø8 x 20 mm	x4	Q	Screw M 6.4 x 25 mm	x4	HS26A	Hinge	x4
G	Screw M 7 x 50 mm	x19	R	Screw M 6 x 10.5 mm	x18	US11	Anti Deflection Bar	x1
H	Allen Key	x2	S	Wedge	x4	LM20A1	Leg	x4
I	Door Knob	x2	T	Screw M 3.5 x 15.5 mm	x4			
J	Screw M 4 x 22 mm	x2	U	Drawer Pull	x1			
K	Shelf Support	x8	V	Foam/Rubber Pad	x10			

What you need:

Phillips

Phillips Head Screwdriver

You may also need:

+ Power Drill
+ Level
+ Silicone Adhesive or Caulk
+ Drywall Anchors and Screws
+ Other Wall-Mounting Hardware

Wait! **Missing parts or hardware? Need assistance?** Contact us before returning your item. We're here to help! 609.256.9000 • cs@modway.com
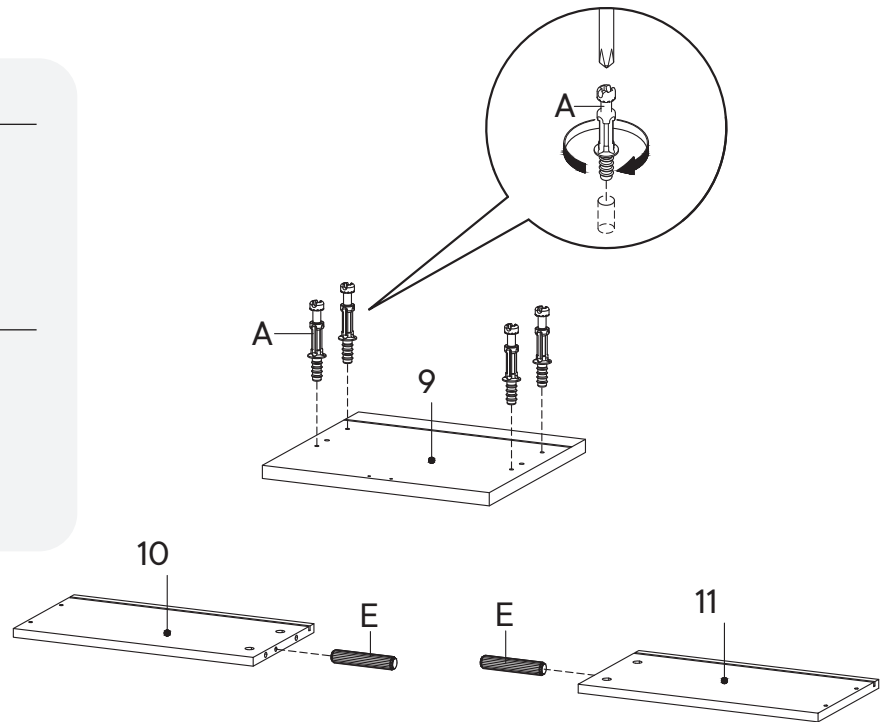
Step 1

HARDWARE

A	Cam Bolt Ø6 x 35 mm	x4
E	Wood Dowel Ø6 x 30 mm	x2

COMPONENTS

9	Front Drawer	x1
10	Side Drawer Left	x1
11	Side Drawer Right	x1

Step 2

HARDWARE

C	Cam Lock Ø12 mm	x4

COMPONENTS

9	Front Drawer	x1
10	Side Drawer Left	x1
11	Side Drawer Right	x1
13	Bottom Drawer	x1
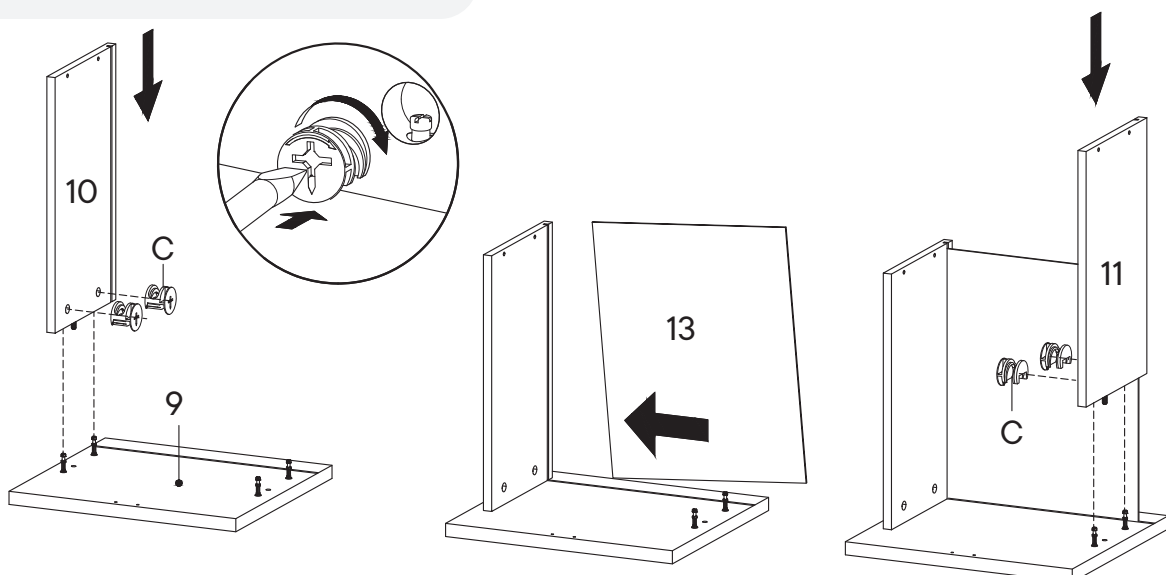
Step 3

HARDWARE

L	Screw M 8 x 39 mm	x4
U	Drawer Pull	x1
W	Screw M 4 x 13 mm	x2
X	Silicon Bumper	x2

COMPONENTS

12	Back Drawer	x1

12

L

U X

W

W

X
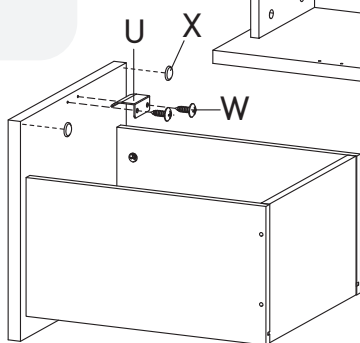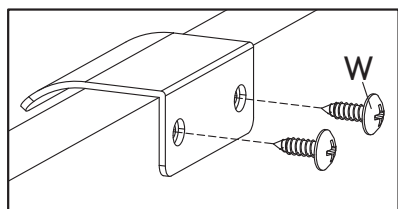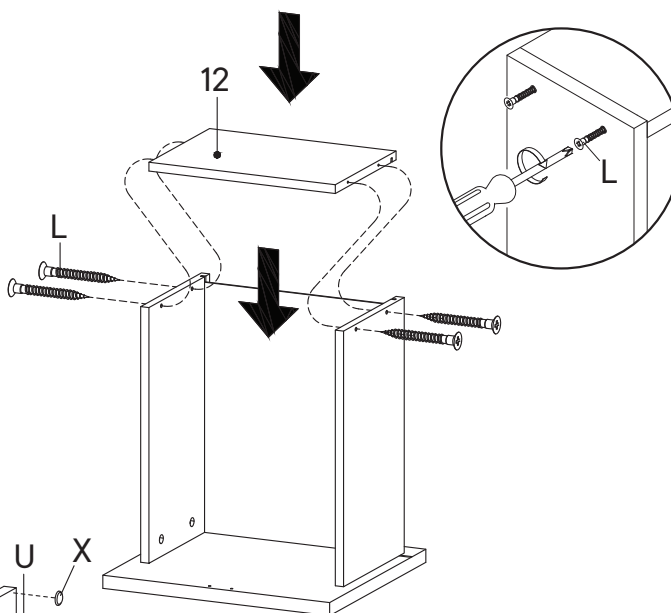
Step 4

HARDWARE

P	Screw M 3.5 x 13 mm	x6
S	Wedge	x4
T	Screw M 3.5 x 15.5 mm	x4
RM35A	Drawer Runner	x1

P

P

RM35A

30 mm

T

S

T

S

S

T

50 - 60 mm
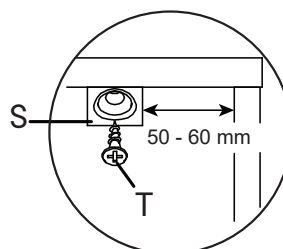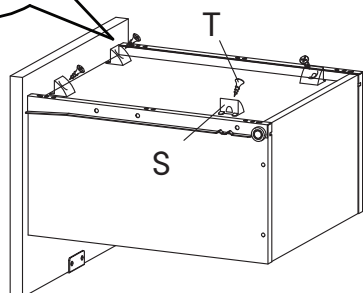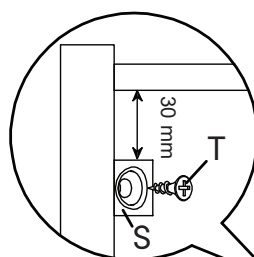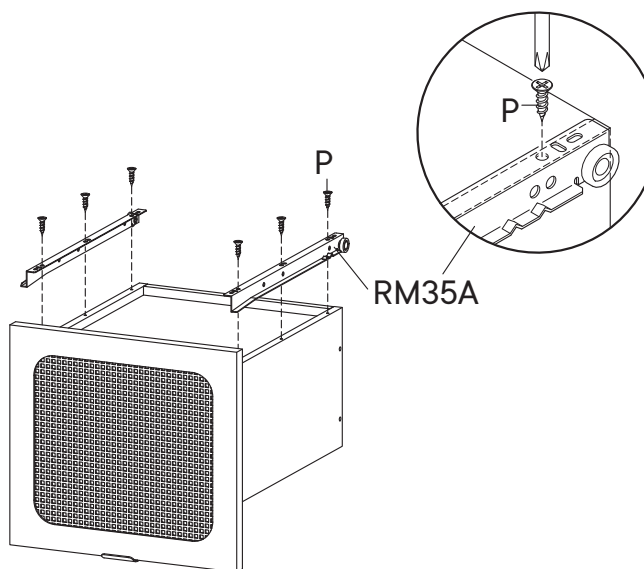
Step 5

HARDWARE

D	Wood Dowel Ø8 x 30 mm	x16
M	Screw M 4.5 x 12.5 mm	x8

COMPONENTS

6	Support Board 1	x1
15	Support Board 3	x1
16	Back Board 1	x1
17	Back Board 2	x1

D M 15 Don't over tighten ± 2 - 3 mm M

D M 16

D 17

6 D
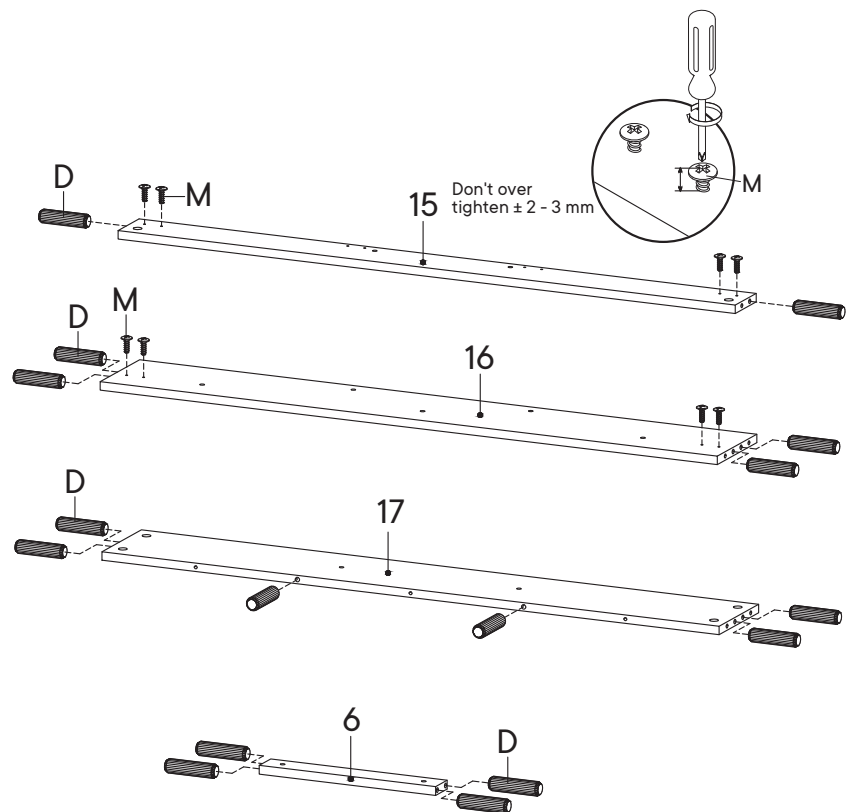
Step 6

HARDWARE

A	Cam Bolt Ø6 x 35 mm	x10
D	Wood Dowel Ø8 x 30 mm	x4
M	Screw M 4.5 x 12.5 mm	x8

COMPONENTS

2	Side Board Left	x1
3	Side Board Right	x1

A M 2 D

A A

Don't over tighten ± 2 - 3 mm M

D 3 M
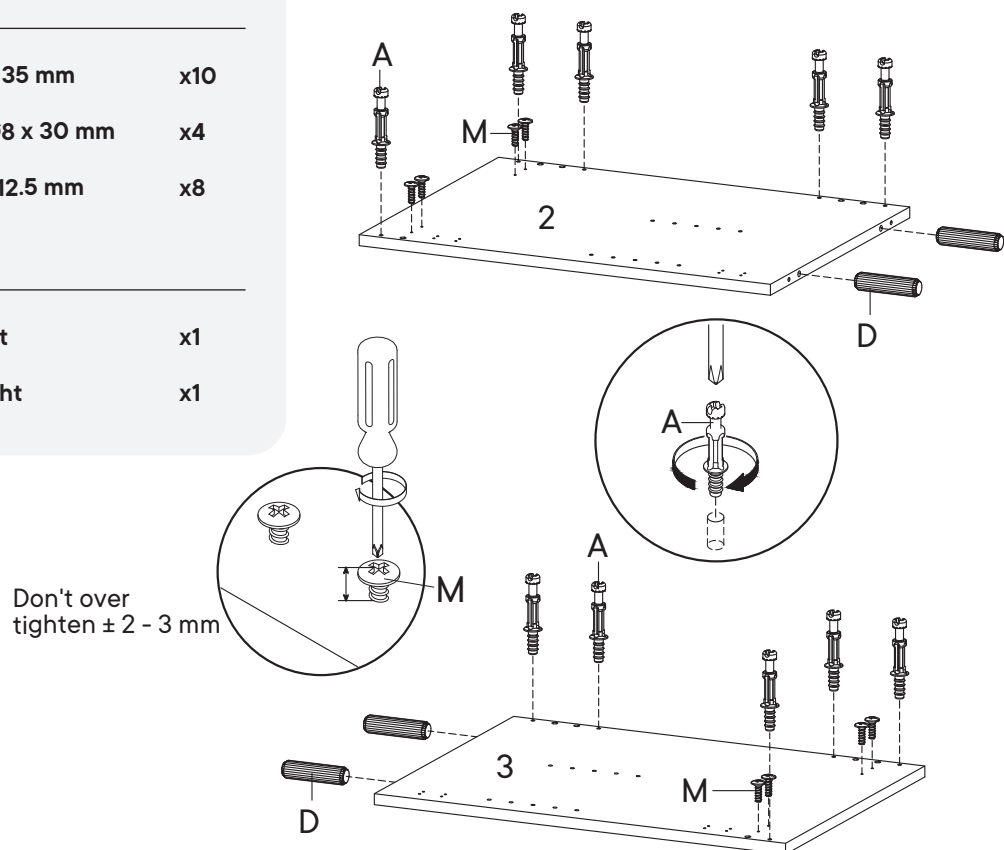
Step 7

HARDWARE

D	Wood Dowel Ø8 x 30 mm	x4
R	Screw M 6 x 10.5 mm	x4
RM35A	Drawer Runner	x1

COMPONENTS

4	Center Board Left	x1
5	Center Board Right	x1
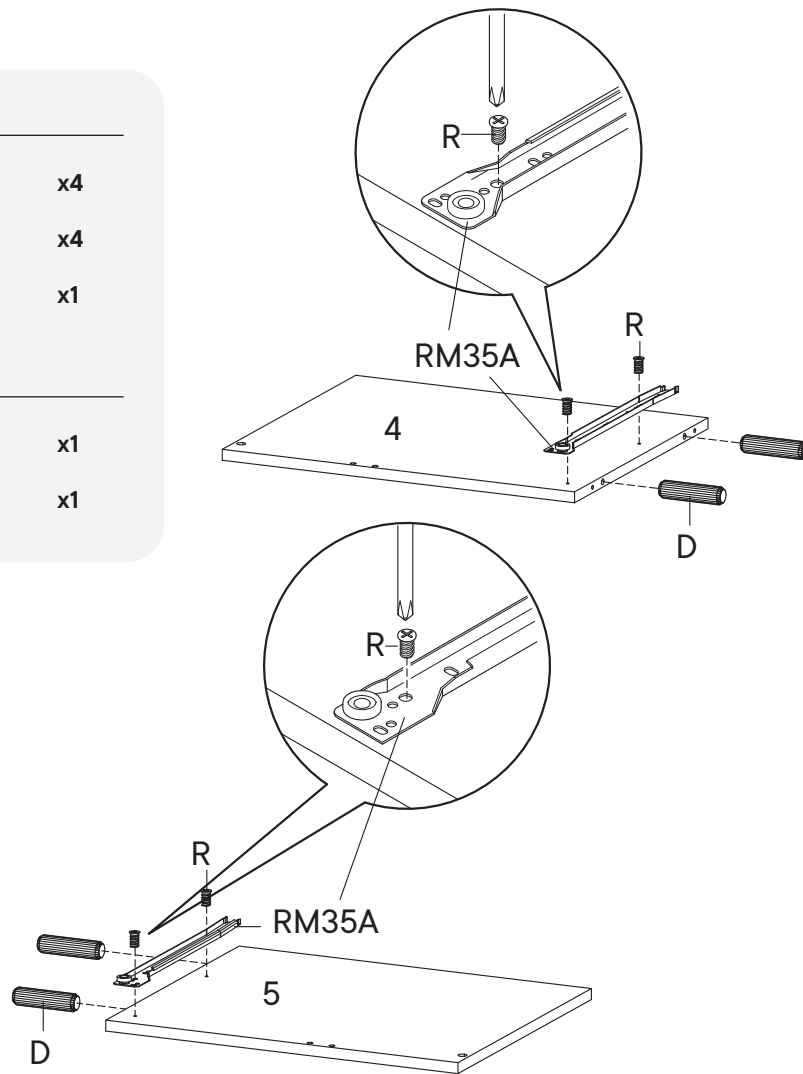
Step 8

COMPONENTS

4	Center Board Left	x1
5	Center Board Right	x1
6	Support Board 1	x1

*modway
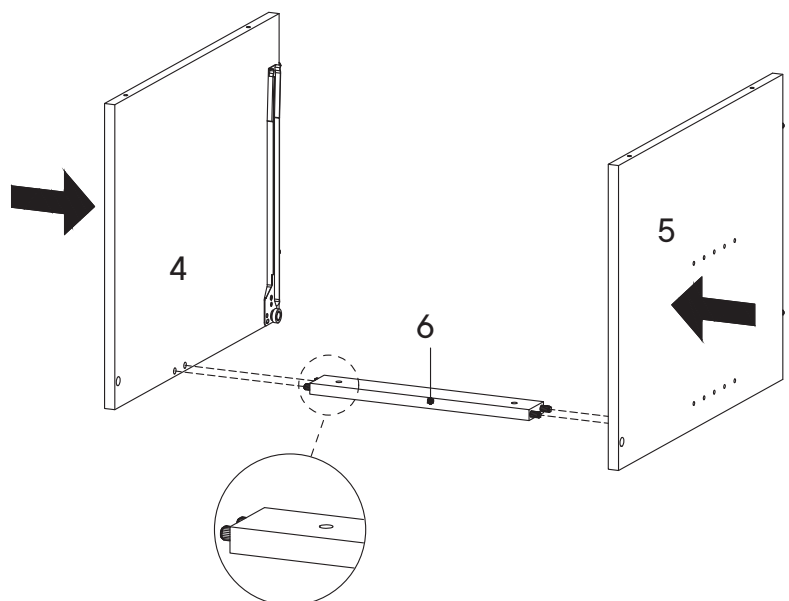
Step 9

HARDWARE

G	Screw M 7 x 50 mm	x2
H	Allen Key	x1

COMPONENTS

17	Back Board 2	x1
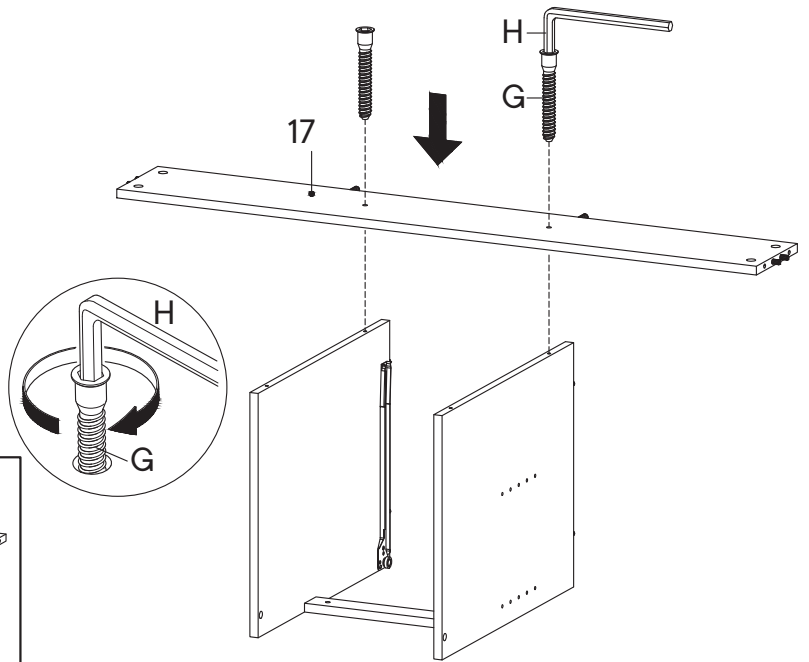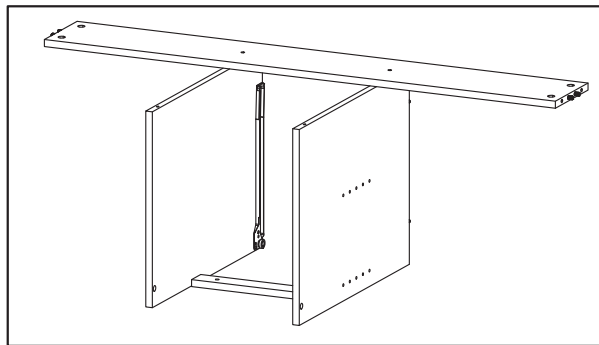
Step 10

HARDWARE

G	Screw M 7 x 50 mm	x2
H	Allen Key	x1

COMPONENTS

16	Back Board 1	x1
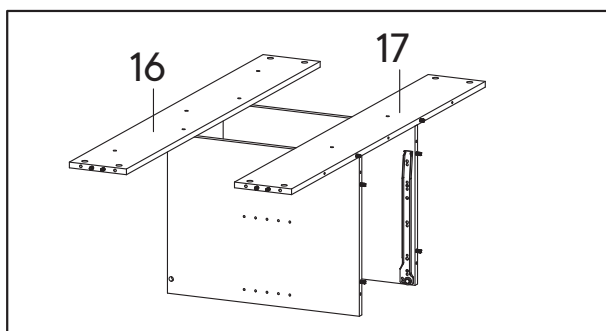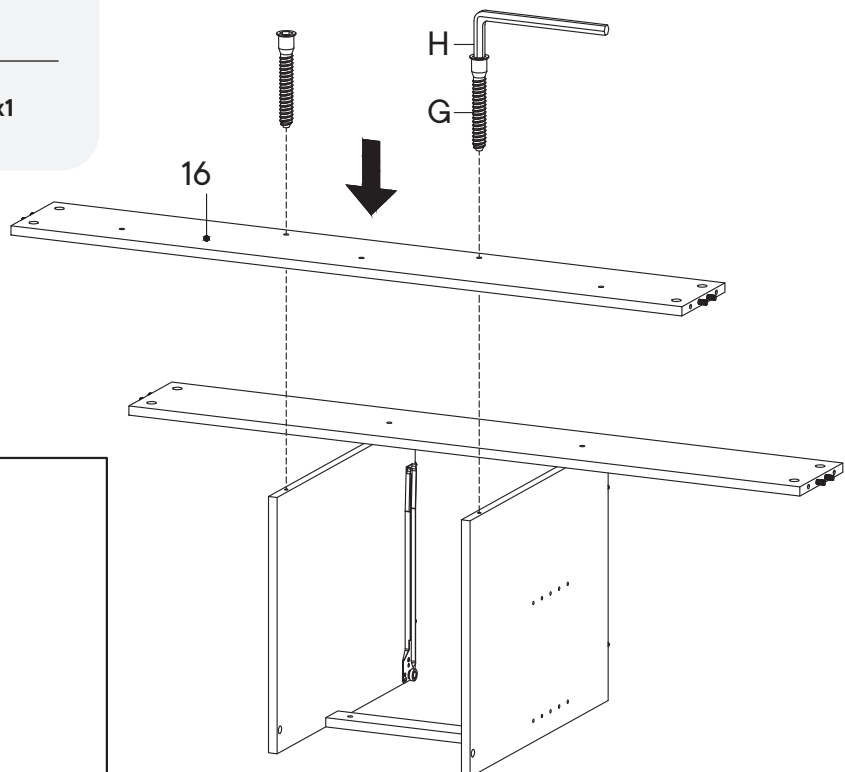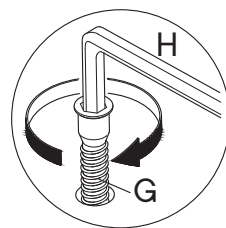
Step 11

HARDWARE

B Cam Lock Ø15 mm x4

COMPONENTS

3 Side Board Right x1
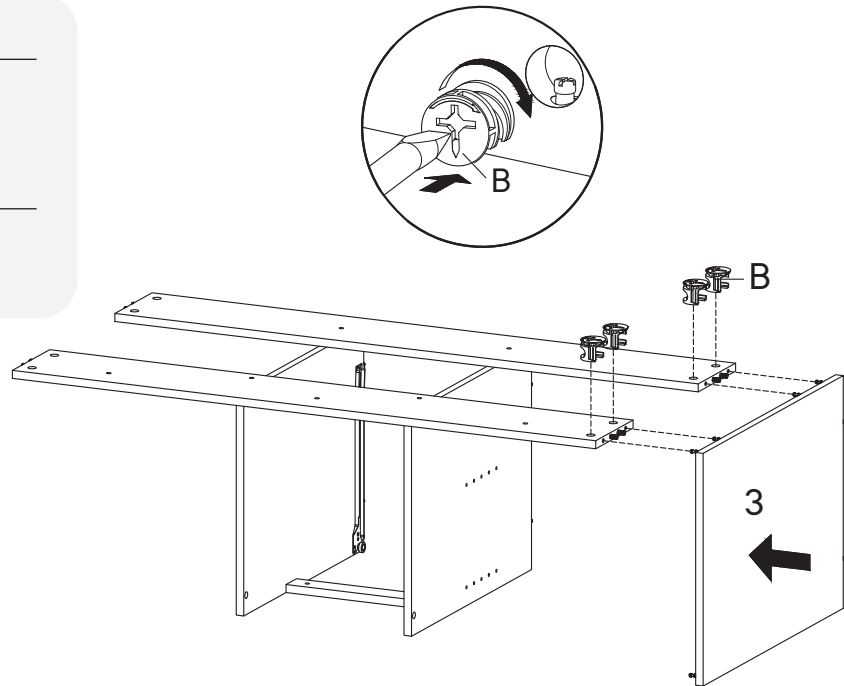
Step 12

HARDWARE

B Cam Lock Ø15 mm x1

COMPONENTS

15 Support Board 3 x1
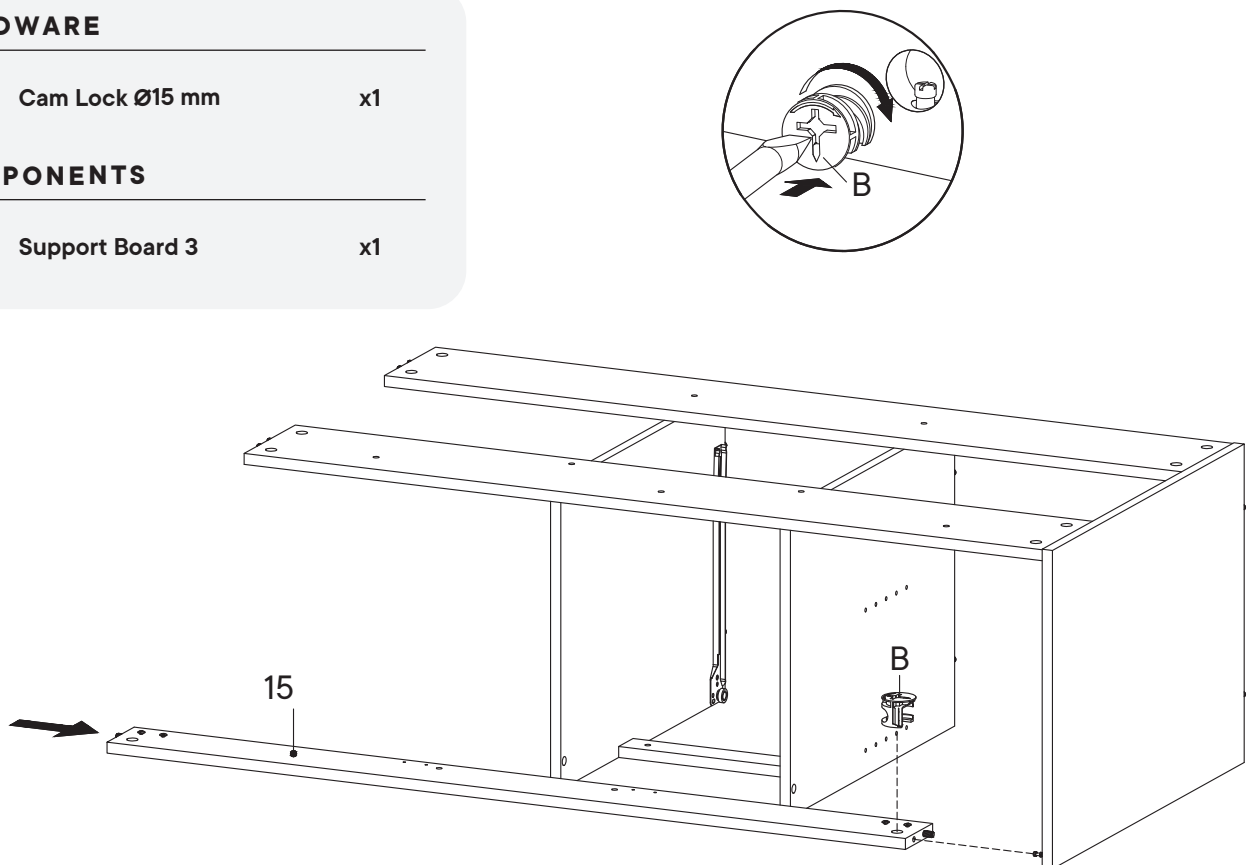
Step 13

HARDWARE

B	Cam Lock Ø15 mm	x5

COMPONENTS

2	Side Board Left	x1
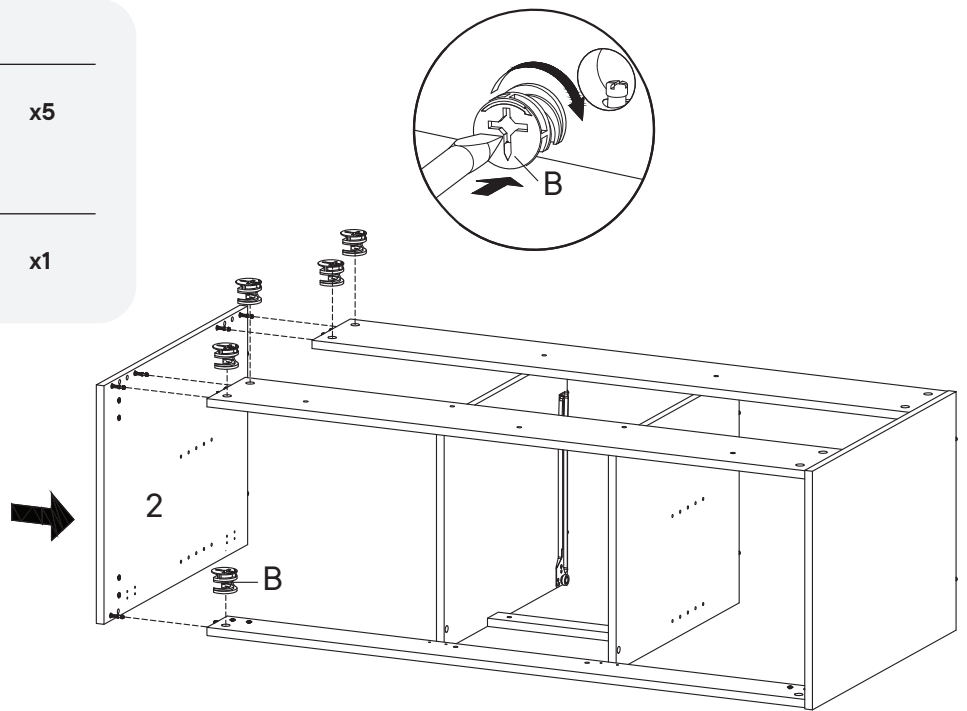
Step 14

HARDWARE

G	Screw M 7 x 50 mm	x11
H	Allen Key	x1

COMPONENTS

1	Bottom Board	x1
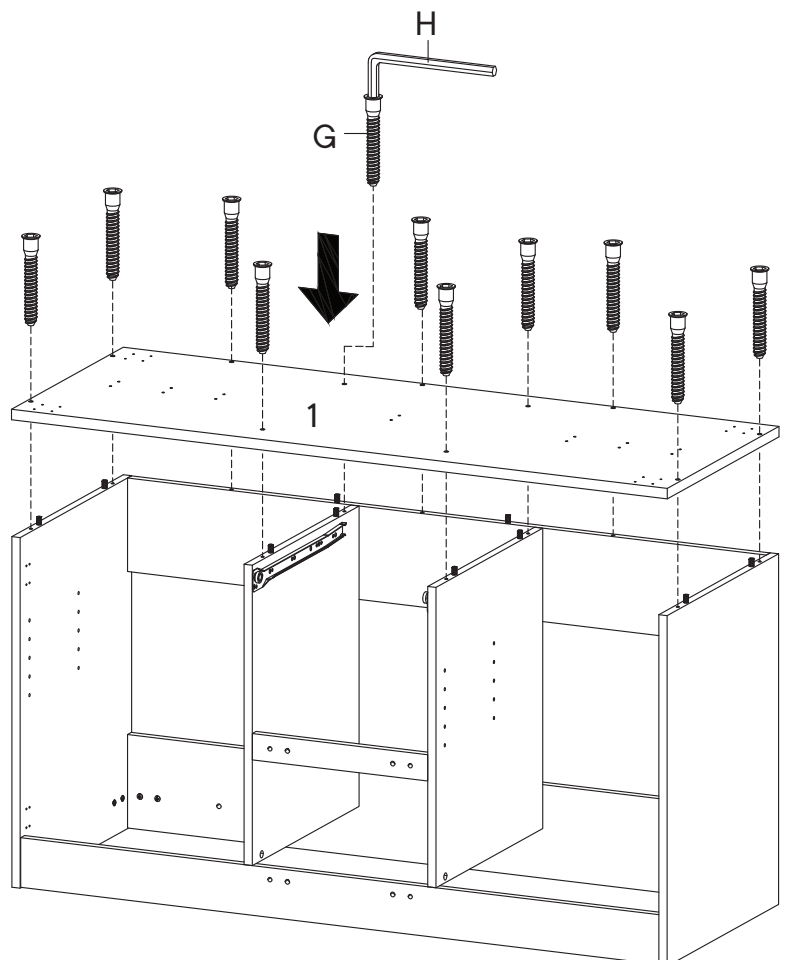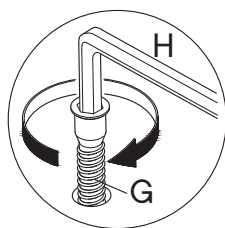
Step 15

HARDWARE

R	Screw M 6 x 10.5 mm	x14
US11	Anti Deflection Bar	x1

US11 R US11

1
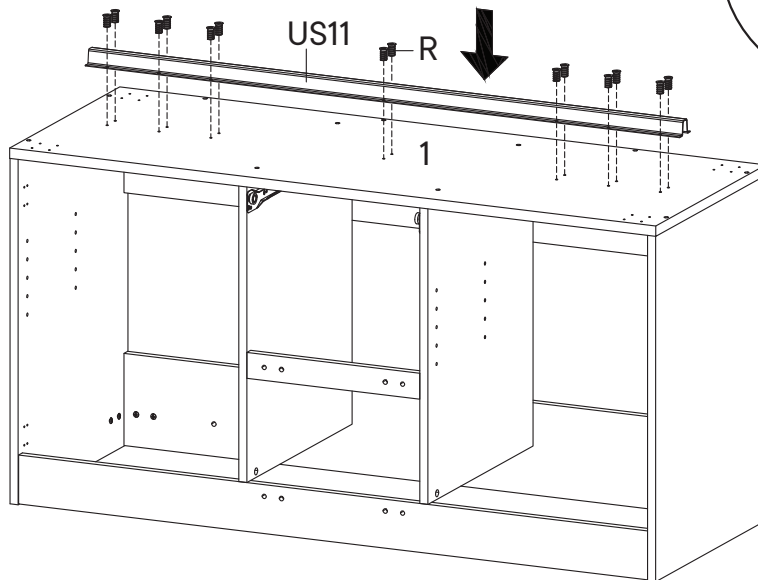
Step 16

HARDWARE

M	Screw M 4.5 x 12.5 mm	x16
LM20A1	Leg	x4

LM20A1

M
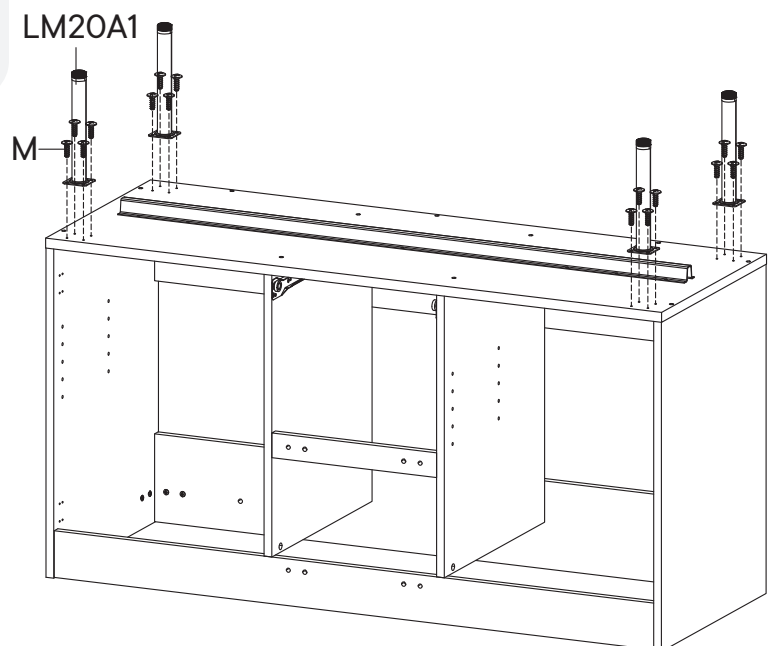
Step 17

HARDWARE

H	Allen Key	x2
N	JCN Nut	x2
O	Screw M 6 x 15 mm	x2
M	Screw M 4.5 x 12.5 mm	x4
BC45	Bracket	x2

BC45

H — N

BC45

Step 2

M

O

Step 1

H
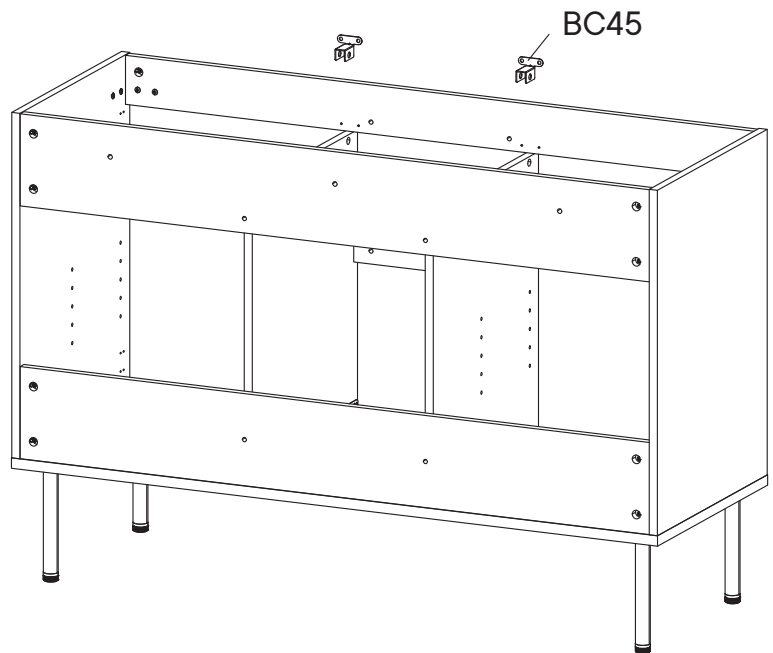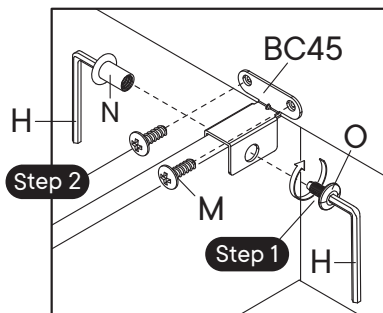
Step 18

HARDWARE

BC67	Bracket	x4

BC67

BC67
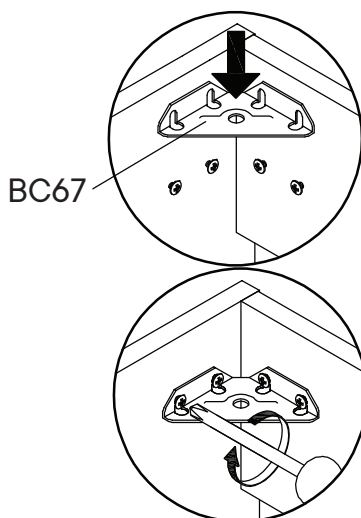
NOTE:
Tighten all the screw
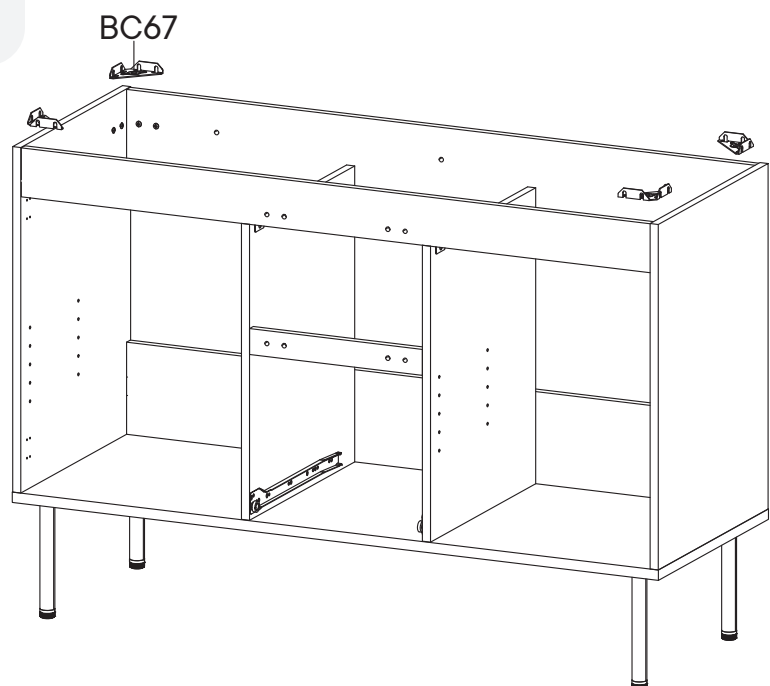
Step 19

HARDWARE

F	Wood Dowel Ø8 x 20 mmm	**x4**
H	Allen Key	**x1**
Q	Screw M 6.4 x 25 mm	**x4**

COMPONENTS

14	Fake Front Drawer	**x1**
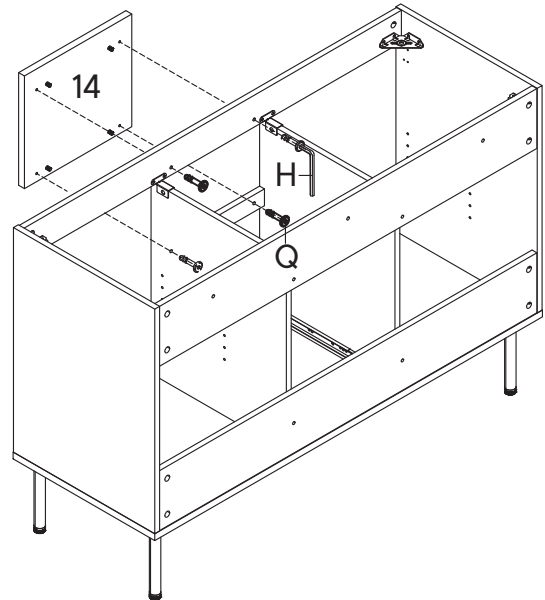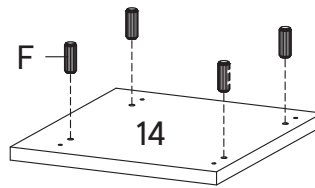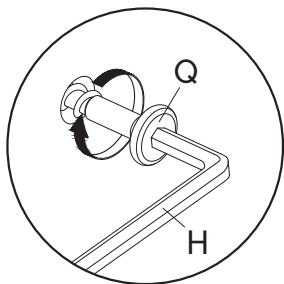
Step 20

HARDWARE

D	Wood Dowel Ø8 x 30 mm	**x4**
G	Screw M 7 x 50 mm	**x4**
H	Allen Key	**x1**

COMPONENTS

7	Adjustable Shelf	**x2**
8	Support Board 2	**x2**
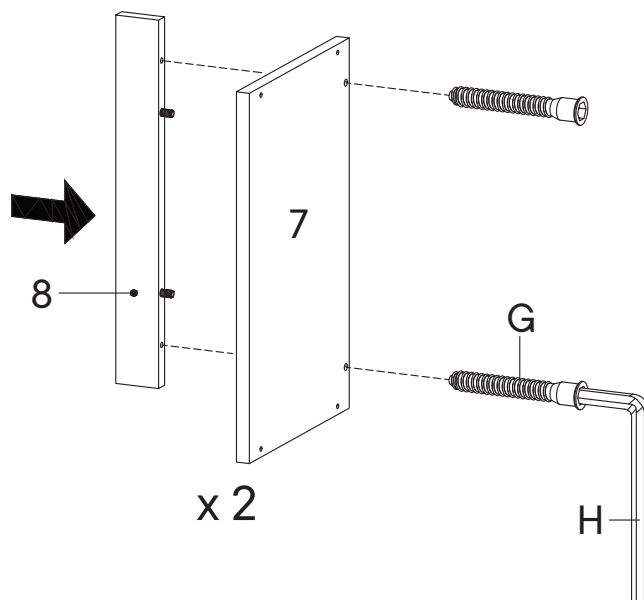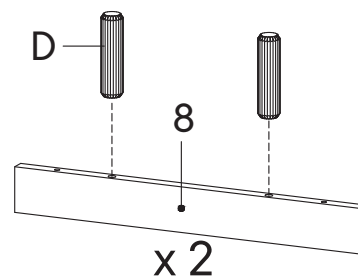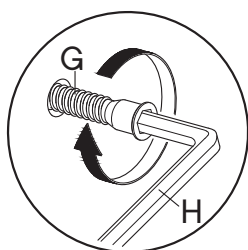
Step 21

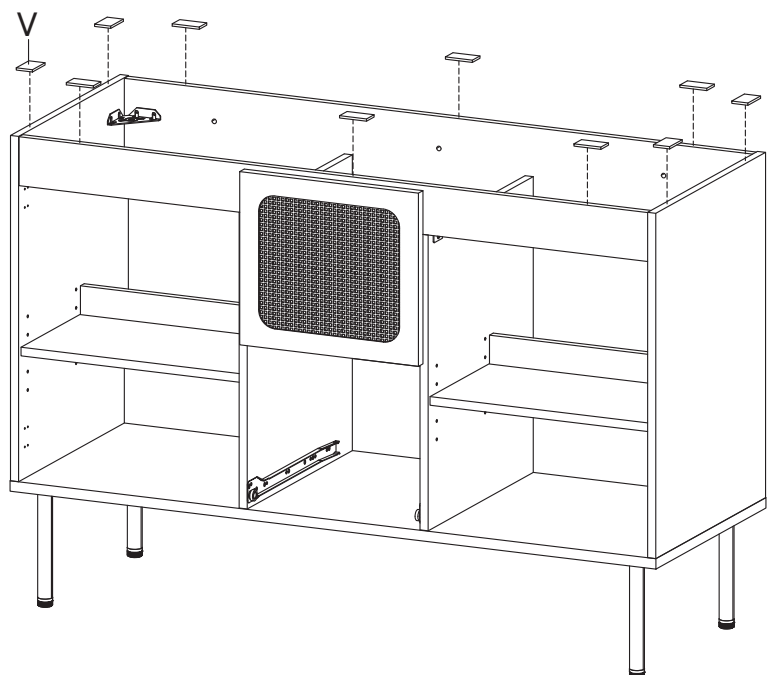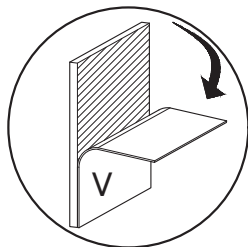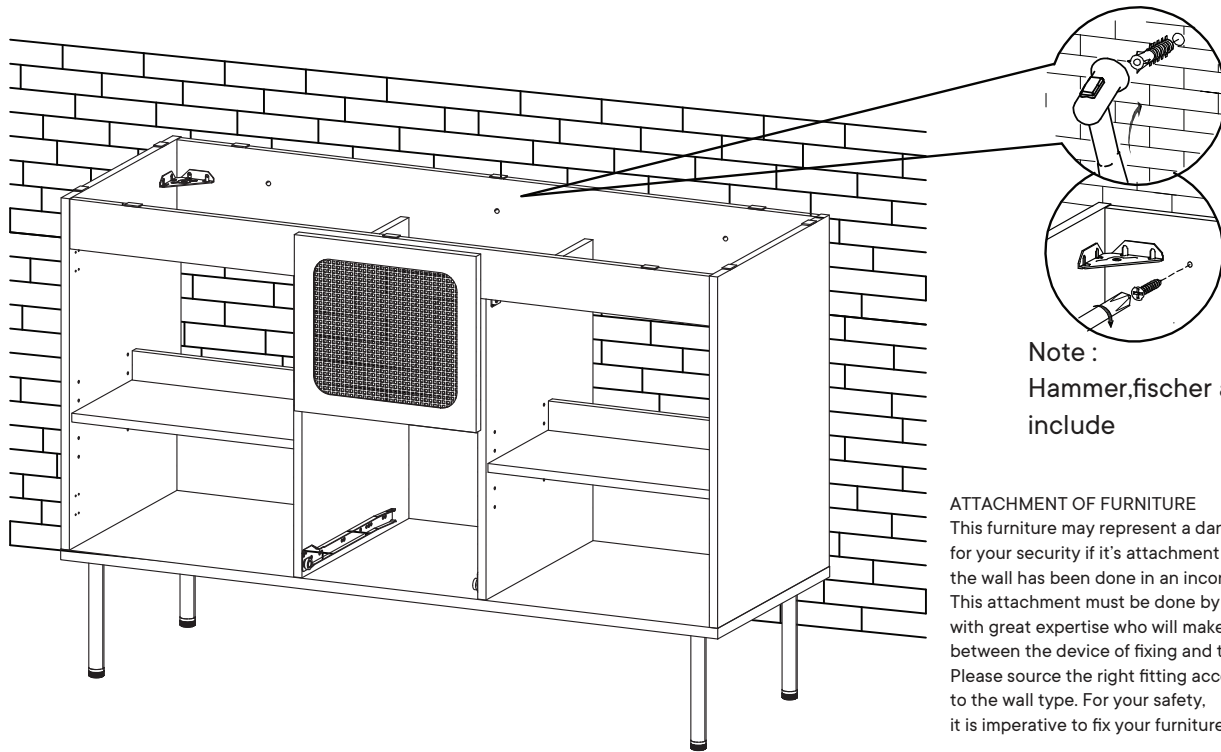### HARDWARE

K Shelf Support   x8
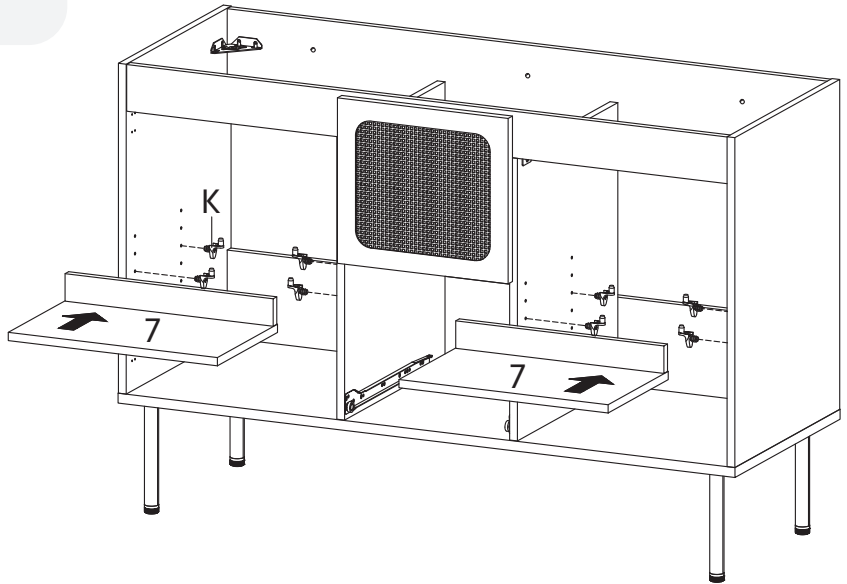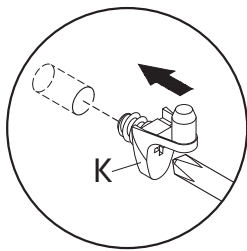
Step 22
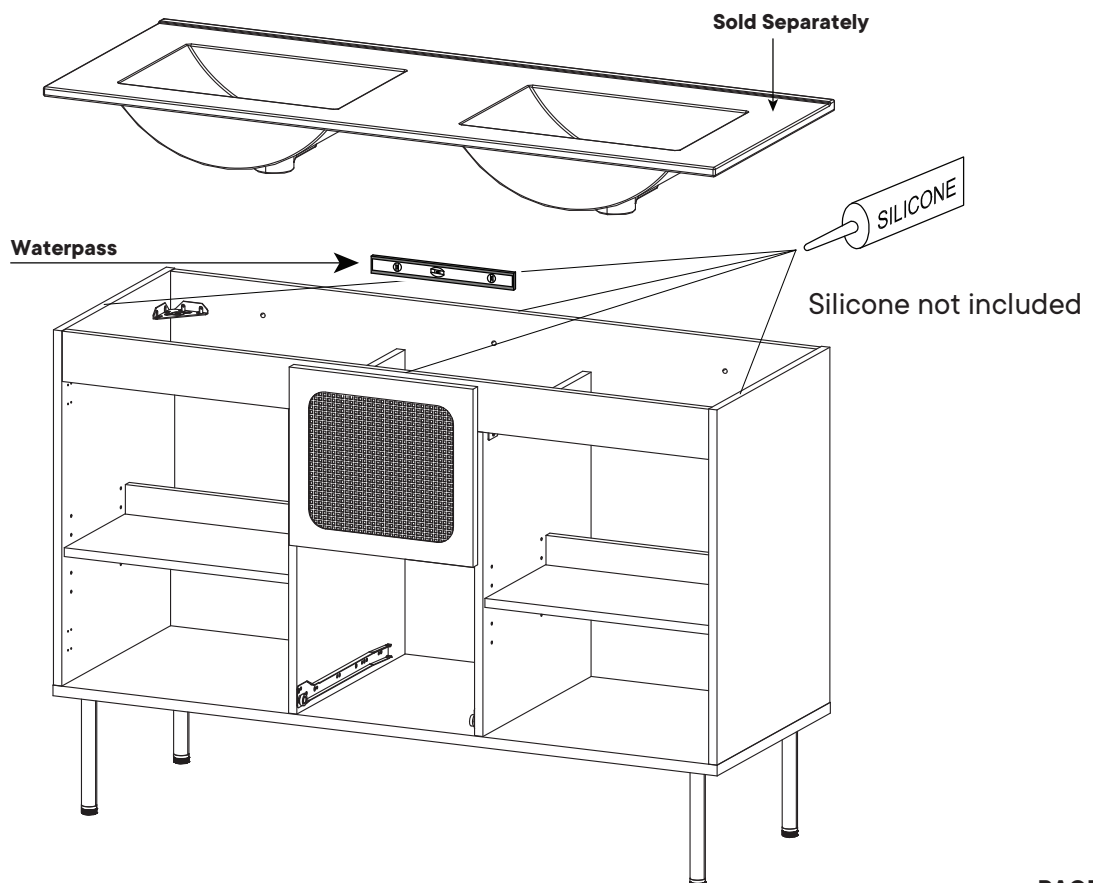
HARDWARE

V Foam/Rubber Pad   x10

Step 23

Note :
Hammer,fischer and screw not
include

ATTACHMENT OF FURNITURE
This furniture may represent a danger
for your security if it's attachment on
the wall has been done in an incorrect way.
This attachment must be done by a person
with great expertise who will make sure adequacy
between the device of fixing and the wall.
Please source the right fitting according
to the wall type. For your safety,
it is imperative to fix your furniture to the wall

Step 24

Apply a thin bead of silicone compound around the vanity base and set the vanity
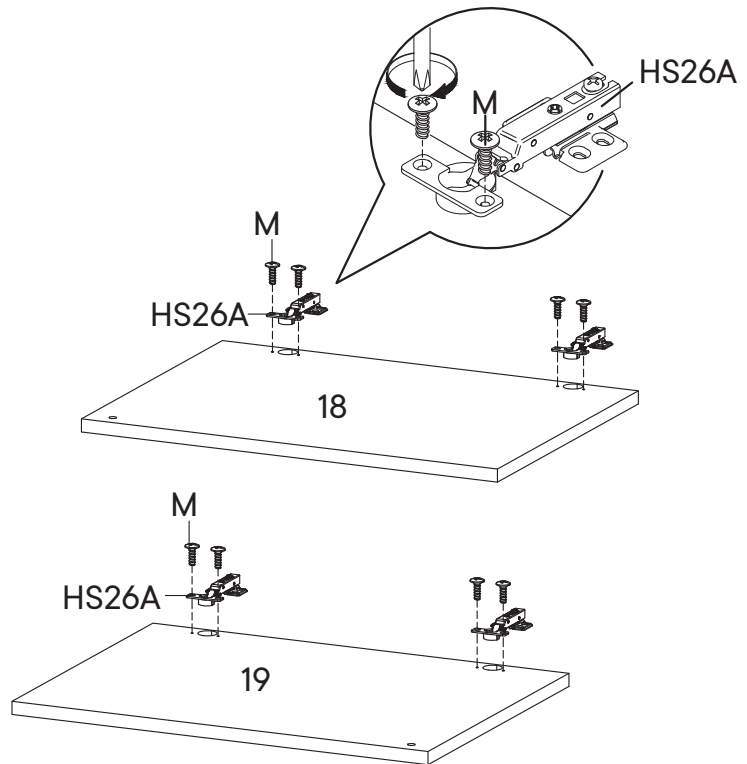top carefully in place. Remove any excess silicone compound with a wet rag

Sold Separately

Waterpass

SILICONE

Silicone not included

Step 25

HARDWARE

M	Screw M 4.5 x 12.5 mm	x8
HS26A	Hinge	x4

COMPONENTS

18	Door Left	x1
19	Door Right	x1

Step 26

HARDWARE

I	Door Knob	x2
J	Screw M 4 x 22 mm	x2
M	Screw M 4.5 x 12.5 mm	x16
X	Silicon Bumper	x2

COMPONENTS

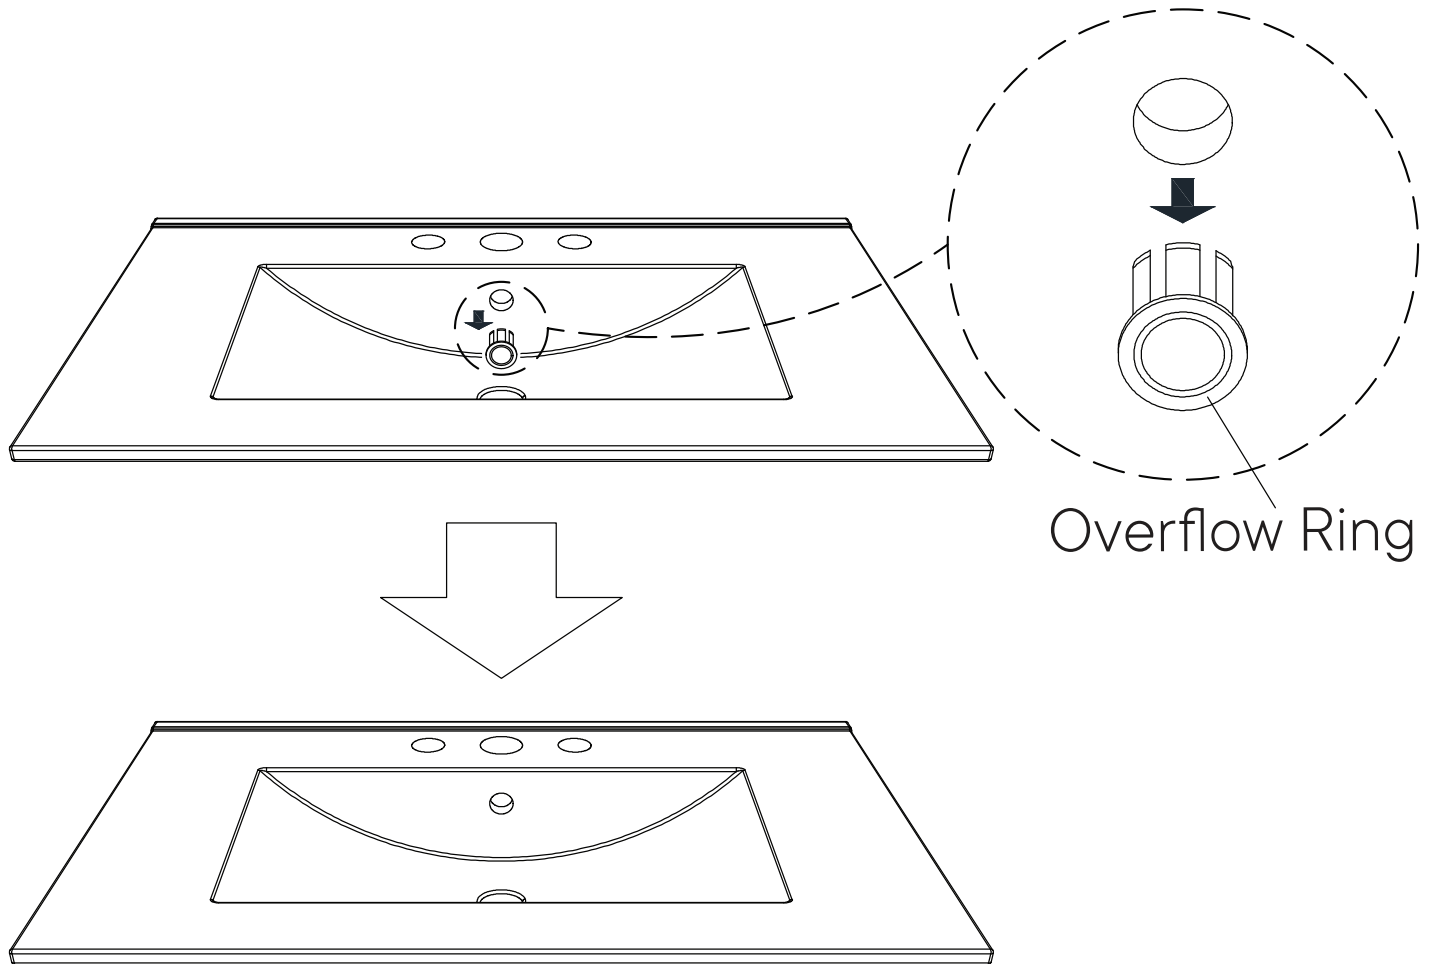| 18	Door Left	x1
19	Door Right	x1
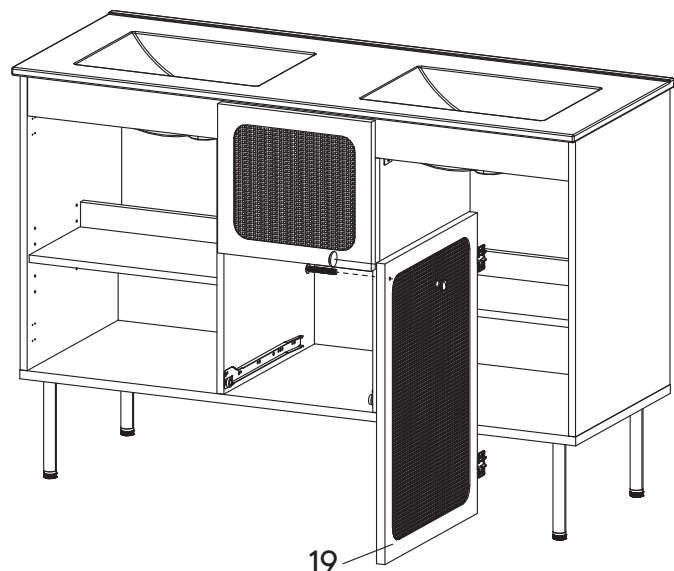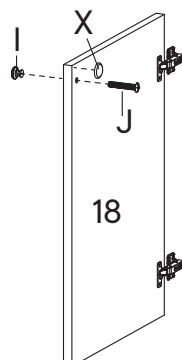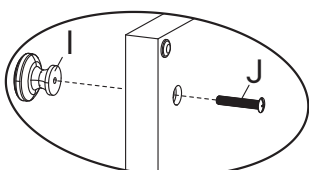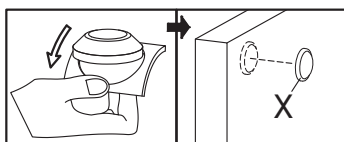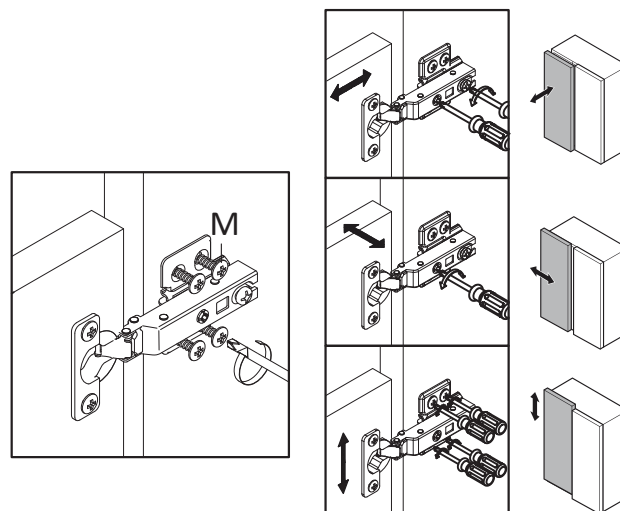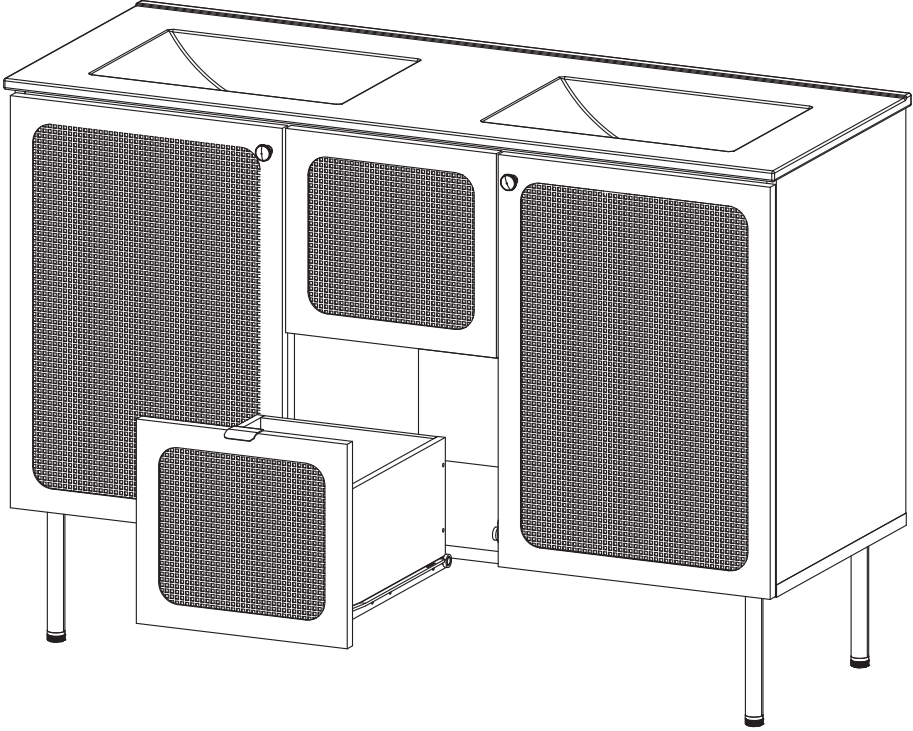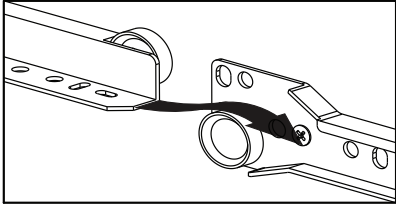
*modway

Step 27

Step 28
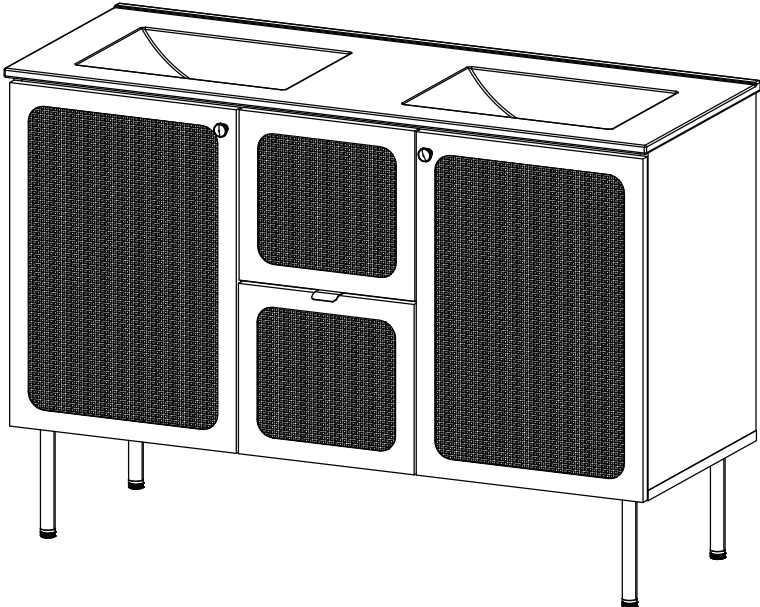
A quick note...

Your sink basin comes complete with a silver overflow ring.
If you'd like to remove this overflow ring, you can do so by hand.

Overflow Ring

Wait! | **Missing parts or hardware? Need assistance?**
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com
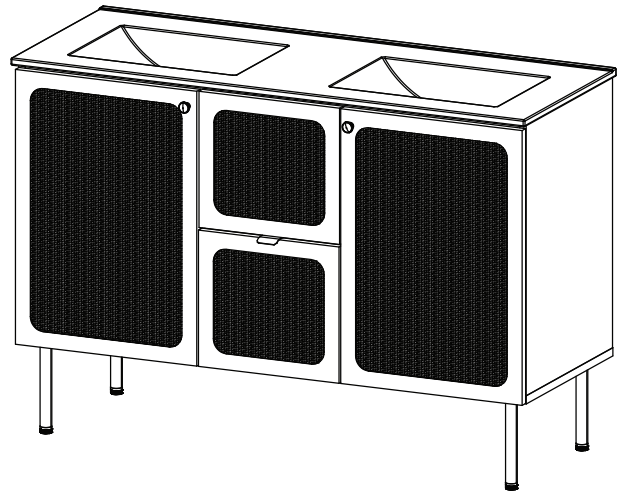
Great job!

Cabinet assembly is complete.

♡ **CARING FOR YOUR ITEM**

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

CONNECT WITH US! 📷 f 📌

Tag us **@modway_furniture** and **#modway** for a chance to be featured.